



*Technical Manual*

# EHC-3<sup>2</sup>

PR/PRX/PRFX

HW/FM TRANSMITTER



Serial No. \_\_\_\_\_

320950000-1117-J

Mailing Address:  
P.O. Box 580697  
Tulsa, OK 74158

Phone: 1-800-777-2760  
Fax: (918) 269-6688  
<http://www.autocrane.com>

Physical Address:  
4707 N. Mingo Rd.  
Tulsa, OK 74117-5904



At the time of publishing this manual is accurate to the best of our knowledge. Auto Crane reserves the right to change any or all items, components and parts, necessary for any reason. This right does not obligate Auto Crane to immediately update the manual. If in doubt, please call your local Auto Crane distributor for the most up-to-date information.

Auto Crane Company issues a limited warranty with each unit sold. See warranty pages at the end of the manual.



# Table of Contents

SECTION		PAGE
<b>1</b>	<b>Safety Tips And Precautions</b> .....	6
<b>2</b>	<b>Introduction</b> .....	7
<b>3</b>	<b>General Specifications</b> .....	9
	3.1 Dimensions .....	9
	3.2 Capacity .....	9
	3.3 Reach .....	9
	3.4 Cable .....	9
	3.5 Chassis And Mounting Requirements .....	9
	3.6 Electrical System Requirements .....	9
	3.7 Rotation .....	9
<b>4</b>	<b>Load Chart</b> .....	10
<b>5</b>	<b>Qualifications And Operating Practices</b> .....	11
	5.1 Operators .....	11
	5.2 Qualifications For Operators .....	11
	5.3 Conduct For Operators .....	12
	5.4 Operating Practices/Handling Of The Load .....	12
	5.5 Operating Near Electrical Power Lines .....	13
	5.6 Preparing The Crane For Operation .....	15
<b>6</b>	<b>8 Function Pendant with ON/OFF</b> .....	17
	Pendant Wiring Schematic .....	18
<b>7</b>	<b>FM Control Transmitter</b> .....	19
	FM Control Transmitter Wiring Schematic .....	21
<b>8</b>	<b>FM Control Transmitter Diagnostics</b> .....	22
<b>9</b>	<b>FM Control Transmitter Troubleshooting</b> .....	25
	Test the Receiver-R160 .....	25
	Test the Transmitter-T150 .....	26
	Testing the Transmitter/Receiver Communication .....	27
<b>10</b>	<b>FM Control Transmitter ID Code Programming</b> .....	28
<b>11</b>	<b>Maintenance</b> .....	31
	11.1 Inspection Requirements .....	31
	11.2 Inspection Classification .....	31
	11.3 Frequent Inspection .....	31
	11.4 Periodic Inspection .....	32
	11.5 Cranes Not In Regular Use .....	33
	11.6 Inspection Records .....	33
	11.7 Testing Requirements .....	33
	11.8 General Repairs And Maintenance .....	34
	11.9 Maintenance Precautions .....	34
	11.10 Adjustments And Repair .....	34
	11.11 Lubrication .....	35

# Table of Contents

---

SECTION	PAGE
11.12	Rope Replacement ..... 35
11.13	Rope Installation And Maintenance ..... 35
11.14	Paint Finish Maintenance ..... 36
11.15	Lubrication And Maintenance Schedule ..... 37
11.16	Lubrication Points ..... 38
11.17	Adjusting Oil Cooled Worm Brake ..... 39
11.18	Brake Adjustment ..... 39
11.19	Rotation Bearing Replacement ..... 40
<b>12</b>	<b>Single Line Conversion ..... 41</b>
<b>13</b>	<b>Crane Mounting And Installation ..... 43</b>
13.1	Stability Chart Installation ..... 44
13.2	Emergency Crane Operation ..... 46
<b>14</b>	<b>Decal Layout ..... 48</b>
<b>15</b>	<b>General Assembly PRXF HW/FM ..... 50</b>
	<b>General Assembly PRX HW ..... 51</b>
	<b>General Assembly PRX FM ..... 52</b>
	<b>General Assembly PR HW ..... 53</b>
	<b>General Assembly PR FM ..... 54</b>
<b>16</b>	<b>General Dimensions ..... 55</b>
<b>17</b>	<b>Pedestal Assembly PRFX ..... 56</b>
	<b>Pedestal Assembly PR ..... 60</b>
	<b>Pedestal Assembly PRX ..... 65</b>
<b>18</b>	<b>Boom Assembly PR ..... 70</b>
	<b>Boom Assembly PRX ..... 72</b>
	<b>Boom Assembly PRFX ..... 74</b>
<b>19</b>	<b>Winch Assembly ..... 76</b>
<b>20</b>	<b>Traveling Block Assembly ..... 77</b>
<b>21</b>	<b>Tweco with Switch Mount ..... 78</b>
<b>22</b>	<b>Hydraulic Power Unit ..... 79</b>
<b>23</b>	<b>Hydraulic Control Valve ..... 80</b>
<b>24</b>	<b>Manual Override Procedure ..... 81</b>
<b>25</b>	<b>Relay Panel Assembly ..... 82</b>
<b>26</b>	<b>Relay Panel Electrical Schematic ..... 83</b>
<b>27</b>	<b>Electrical Schematic ..... 85</b>



# 1 Safety Tips and Precautions

---

## DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

## WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

## CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

## NOTICE

Indicates information considered important, but not hazard-related.

---

## WARNING

Federal law (49 cfr part 571) requires that the Final Stage Manufacturer of a vehicle certify that the vehicle complies with all applicable federal regulations. Any modifications performed on the vehicle prior to the final state are also considered intermediate stage manufacturing and must be certified as to compliance. The installer of this crane and body is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations, and is required to certify that the vehicle is in compliance.

## WARNING

It is the further responsibility of the installer to comply with the OSHA Truck Crane Stability Requirements as specified by 29 CFR part 1910.180 (C) (1). In applications, where the rotation of the load is hazardous, a tag or restraint line should be used, (ref. OSHA 1910.180(h)(3)(xvi)). To reduce the potential for the load to rotate or rope twist, operate at minimal boom angles and extension.

## WARNING

Do not attempt to lift or drag a load from the side! The boom can fail far below its rated capacity.

## WARNING

Do not weld, modify, or use unauthorized components on any Auto Crane unit! This will void any warranty or liability. Also failure of the crane may result.

## WARNING

Failure to correctly plumb and wire crane can cause inadvertent operation and damage to crane and/or personnel!

## WARNING

Auto Crane Company remote controlled cranes are not designed or intended for use for any applications involving the lifting or moving of personnel. Any such use is considered to be improper and the seller shall not be responsible for any claims arising from such use. This sale is made with the express understanding there is no warranty the goods are fit for the purpose of lifting or moving persons or other improper use. There is no implied warranty or responsibility for such uses.

---

### NOTICE

Keep this manual with the crane at all times.

Auto Crane products are designed to provide many years of safe, trouble-free, dependable service when properly used and maintained.

To assist you in obtaining the best service from your crane and to avoid untimely crane and/or vehicle failure, this manual provides the following operating and service instructions. It is specifically recommended that all operating and service personnel consider this manual as mandatory material for reading and study before operating or servicing Auto Crane products. It is highly recommended crane owners, equipment managers, and supervisors also read this manual.

Auto Crane has incorporated several safety features in the crane for your protection.

For your convenience the overall dimensions of the crane are included on the General Dimension Drawing. Rotation and turning radius are also listed on that drawing.

Remember, the crane adds weight to the vehicle. Adding weight may change the driving and riding characteristics of the vehicle unless the appropriate overload spring(s) are installed on the truck. The payload of the vehicle is reduced by the weight of the crane. The operator should exercise care when loading the vehicle. Distributing the payload on the vehicle evenly will greatly improve the driving and riding characteristics of the vehicle.

Auto Crane Company issues a limited warranty certificate with each unit sold. See last page for warranty.

The cranes are attached to your 12-volt truck electrical system. The crane is another highly efficient Auto Crane product. The use of a maintenance-free battery is not recommended on any Auto Crane product. The recommended alternator and battery that will give the longest life with the most useful duty cycle is a 125-amp alternator with a 500 cold cranking amp battery. These specifications should be considered minimum.

It has always been Auto Crane Company policy to handle all warranty claims we receive as promptly as possible. If a warranty claim involves discrepant material or workmanship, Auto Crane will take immediate corrective action. It is understandable that Auto Crane Company cannot assume responsibility of liability when it is obvious that our products have been abused, misused, overloaded or otherwise damaged by inexperienced persons trying to operate the equipment without reading the manual.

## 2 Introduction

---

### NOTICE

Auto Crane will not assume responsibility or liability for any modifications or changes made to unit, or installation of component parts without authorization.

Auto Crane maintains a strong distributor network and a knowledgeable Customer Service Department. In most cases, an equipment problem is solved via phone conversation with our customer service department. The customer service department also has the ability to bring a local distributor, a regional sales manager, or a factory serviceman into the solution of an equipment problem.

If, through no fault of Auto Crane Company, it is necessary to send an experienced factory serviceman on a field service call the rates stated in the Auto Crane Distributor's Flat Rate Manual will apply.

Auto Crane Company's extensive Research and Development Program allow our customers to use the best equipment on the market. Our Engineering Staff and our knowledgeable sales people are always available to our customers in solving crane and winch-type application problems. When in doubt, call the Auto Crane factory.

Should you require any assistance not given in this manual, we recommend that you consult your nearest Auto Crane Distributor. Our distributors sell authorized parts and have service departments that can solve almost any needed repair. This manual does not cover all maintenance, operating, or repair instructions pertinent to all possible situations.

If you require additional information, please contact the Auto Crane Company at the following telephone number: **1-800-777-2760**

The information contained in the manual is in effect at the time of this printing. Auto Crane Company reserves the right to update this material without notice or obligation.

## 3.1 DIMENSIONS

- Width: 21 in. (0.53 m)
- Height: 24 in. (0.61 m)
- Length: 9 ft. 1-1/2 in. (2.78 m), stored length.
- Weight: 860 lbs. (390 kg)

## 3.2 CAPACITY

- 10,000 ft-lbs (1.38 ton-m)
- Ft-lbs = horizontal distance from center line of rotation to free hanging weight (feet) x amount of weight (pounds).

## 3.3 REACH

- Second boom reach: 7 ft. 4 in. to 11 ft. 4 in.
- Third boom reach: 11 ft. 4 in. to 15 ft. 4 in.

## 3.4 CABLE

- 62 ft. (18.9 m) of 7/32 in. (5.56 mm) diameter aircraft quality cable. This cable has a single line breaking strength of 5,600 lbs. (2,540 kg).

## 3.5 CHASSIS AND MOUNTING REQUIREMENTS

- 8,800 lbs. (3,992 kg) GVWR minimum.
- 201,600 in-lbs. Resistive Bending Moment (RBM)
- 3/4", Grade 8-UNF Bolts. Tightened to 315 ft. lbs.
- 9" Mounting hole to run electrical lines to the crane from the body.


## 3.6 ELECTRICAL SYSTEM REQUIREMENTS

- Voltage: 12 VDC
- Alternator: 125 amps minimum
- Battery: 130 minute reserve capacity minimum. Maintenance Type battery

## 3.7 ROTATION

- 360° continuous rotation

# 4 Load Chart

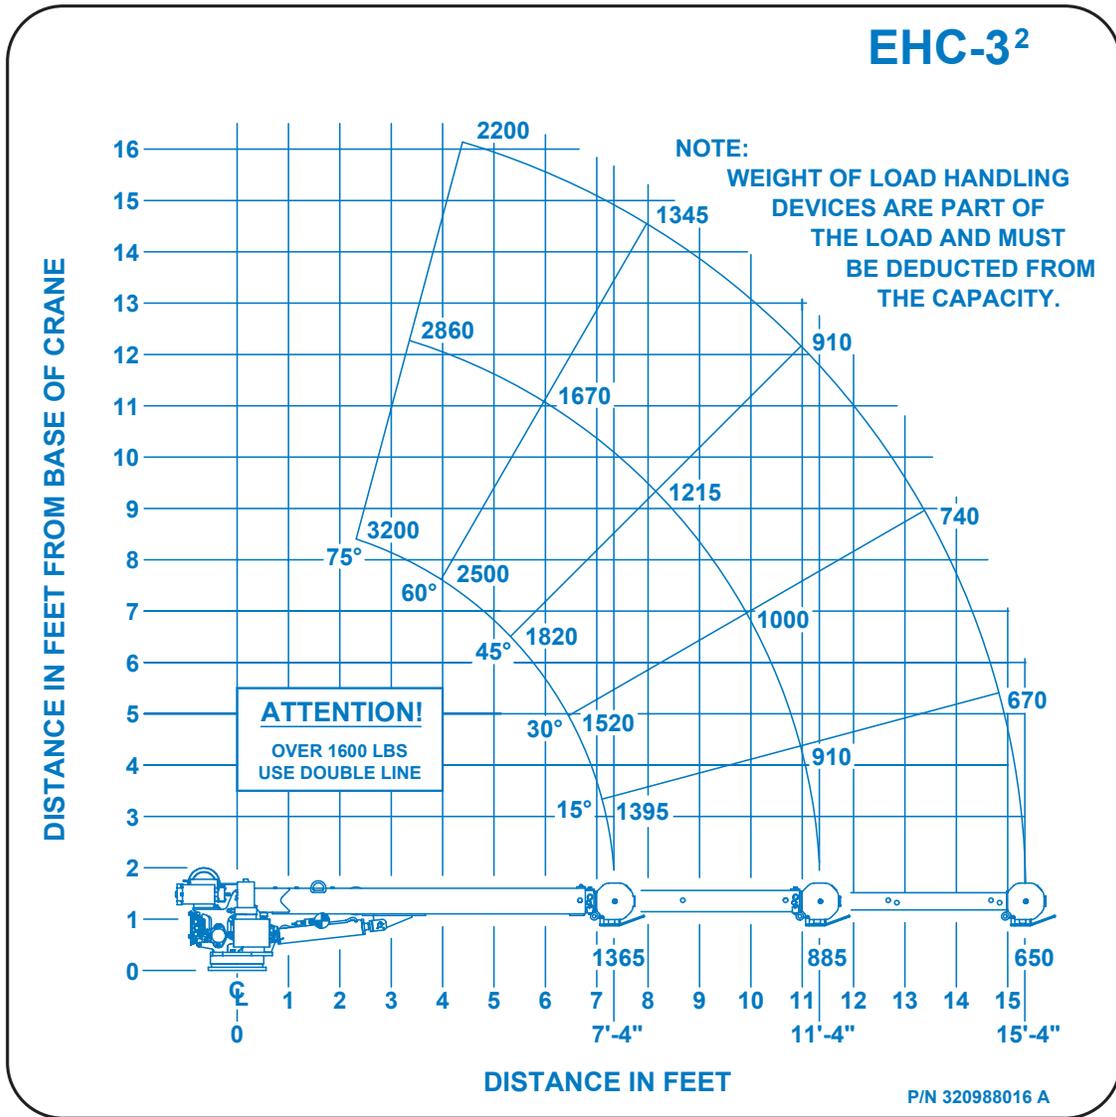

**Note: Max lifting capacity is 3,200 lbs.**

**⚠ WARNING**

All load ratings are based on crane capacity, not the vehicle stability. When lifting a heavy load, the weight can create enough tipping moment to overturn the vehicle. **DO NOT USE** the overload shutdown device to determine maximum rated loads, if the crane is equipped with this type of device.

**⚠ WARNING**

Always comply with load chart capacities.

# Qualifications and Operating Practices 5

---

THIS IS ONLY AN OVERVIEW OF ALL APPLICABLE QUALIFICATION REQUIREMENTS. REFERENCE ASME B30.5A AND OSHA 1910.180 FOR COMPLETE QUALIFICATION REQUIREMENTS.

## 5.1 OPERATORS

1. Crane operation shall be limited to personnel with the following minimum qualifications:
  - A. Designated persons.
  - B. Trainees under the direct supervision of a designated person.
  - C. Maintenance and test personnel (when it is necessary in the performance of their duties).
  - D. Inspectors (crane).
2. No one other than the personnel specified above shall enter the operating area of a crane with the exception of persons such as oilers, supervisors, and those specified persons authorized by supervisors whose duties require them to do so and then only in the performance of their duties and with the knowledge of the operator or other persons.

## 5.2 QUALIFICATIONS FOR OPERATORS

1. Operators shall be required by the employer to pass a practical operating examination.
2. Qualifications shall be limited to the specific type of equipment for which examined.
3. Operators and operator trainees shall meet the following physical qualifications:
  - A. Vision of at least 20/30 Snellen in one eye and 20/50 in the other, with or without corrective lenses.
  - B. Ability to distinguish colors, regardless of position, if color differentiation is required for operation.
  - C. Adequate hearing with or without hearing aid for the specific operation.
4. Evidence of physical defects or emotional instability, which render a hazard to operator or others, which in the opinion of the examiner could interfere with the operator's performance, may be sufficient cause for disqualification. In such cases, specialized clinical or medical judgment and tests may be required.
5. Evidence that operator is subject to seizures or loss of physical control shall be sufficient reason for disqualification. Specialized medical Tests may be required to determine these conditions.
6. Operators and operator trainees should have normal depth perception, coordination, and no tendencies to dizziness or similar undesirable characteristics.
7. In addition to the above listed requirements, the operator shall:
  - A. Demonstrate the ability to comprehend and interpret all labels, operator's manuals, safety codes, and other information pertinent to correct crane operations.
  - B. Possess the knowledge of emergency procedures and implement it.
  - C. Demonstrate to the employer the ability to operate the specific type of equipment.
  - D. Be familiar with the applicable safety regulations.
  - E. Understand the operating procedures as outlined by the Auto Crane.
  - F. Be thoroughly familiar with the crane and its control functions.

# 5 Qualifications and Operating Practices

---

## 5.3 CONDUCT OF OPERATORS

1. The operator shall not engage in any practice, which will divert his attention while actually operating the crane.
2. Each operator shall be responsible for those operations under the operator's direct control. Whenever there is any doubt as to safety, the operator shall consult with the supervisor before handling the loads.
3. The operator should not leave a suspended load unattended unless specific precautions have been instituted and are in place.
4. If there is a warning sign on the switch or engine starting controls, the operator shall not close the switch or start the engine until the warning sign has been removed by the appointed person.
5. Before closing the switch or starting the engine, the operator shall see that all controls are in the "OFF" or neutral position and all personnel are in the clear.
6. If power fails during operation, the operator shall:
  - A. Move power controls to the "OFF" or neutral position.
  - B. Land the suspended load and boom, if practical.
7. The operator shall be familiar with the equipment and its proper care. If adjustments or repairs are necessary, the operator shall report the same promptly to the appointed person, and shall also notify the next operator.
8. The operator at the start of each shift shall test all controls. If any controls do not operate properly, they shall be adjusted or repaired before operations are begun.
9. Stabilizers shall be visible to the operator while extending or setting unless a signal person assists operator.

## 5.4 OPERATING PRACTICES/HANDLING THE LOAD



### CAUTION

Never use two cranes to support a load too large for either crane.

1. Size of load.
  - A. No crane shall be loaded beyond the rated load except for test purposes
  - B. The load to be lifted is to be within the rated load of the crane and its existing configuration.
  - C. Know the weight of the rigging and deduct from the load rating to prevent overloading the crane.
  - D. When loads that are not accurately known are to be lifted, the person responsible for the job shall determine the weight of the load does not exceed the crane rated load at the radius at which the load is to be lifted.
2. Attaching the load.
  - A. Ensure the load is properly attached to the hook by means of slings or other devices of sufficient capacity.
  - B. Ensure the vehicle is in a level position when loading or unloading.
  - C. Hoist rope shall not be wrapped around the load.
3. The operator shall determine that:
  - A. The crane is level and, where necessary, the vehicle/carrier is blocked properly.
  - B. The load is well secured and balanced in the sling or lifting device before it is lifted more than a few inches.
  - C. Means are provided to hold the vehicle stationary while operating the crane.
  - D. Before starting to lift, the hook shall be positioned over the load in such a manner as to minimize swinging.
4. During lifting care shall be taken that:
  - A. There is no sudden acceleration or deceleration of the moving load.

# Qualifications and Operating Practices 5


- B. When rotating the crane, sudden starts and stops shall be avoided. Rotational speed shall be such that the load does not swing out beyond the radius at which it can be controlled.
  - C. Load, boom or other parts of the crane do not contact any obstruction.
  - D. Cranes shall not be used for dragging loads sideways.
  - E. This standard recognizes that telescopic boom cranes are designed and intended for handling materials. They do not meet personnel lift or elevator requirements. Therefore, no lifting, lowering, swinging or traveling shall be done while a person is on the hook or load. Hook attached suspended work platforms (baskets) shall not be used with cranes covered by this standard.
  - F. The operator should avoid carrying loads over people.
5. When the crane is so equipped, the stabilizers shall be fully extended and set. Blocking under stabilizers shall meet the requirements as follows:
- A. Strong enough to prevent crushing.
  - B. Of such thickness, width and length as to completely support the stabilizer pad.
  - C. Firm footing under all tires, or individual stabilizer pads should be level. Where such a footing is not otherwise supplied, timbers, cribbing, or other structural members to distribute the load so as to not exceed allowable bearing capacity or the underlying material should provide it.
6. In transit, the boom shall be carried in stowed position.
7. The crane shall not be transported with a load on the hook.

## 5.5 OPERATING NEAR ELECTRICAL POWER LINES



**DANGER**

Never operate the crane near electrical lines or in the danger zone area.

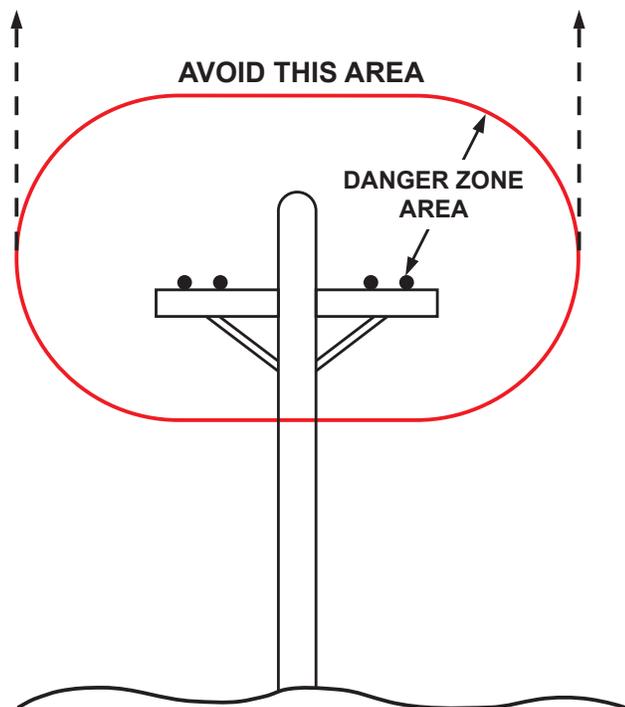

# 5 Qualifications and Operating Practices

1. Do not place any part of the crane or load inside the Danger Zone.

**EXCEPTIONS:**

- A. The Danger Zone may be entered after confirmation by an appointed person the electrical distribution and transmission lines are de-energized and visibly grounded at the point work.
- B. The Danger Zone may be entered if insulating barriers are erected to prevent physical contact with the lines. These can't be a part of or attached to the crane.

2. For the minimum safe distance between electrical lines and any part of the crane or load (including handling appendages), or while in the transit with the boom stowed, see below Table Safe Operating Distance.

3. Exercise caution when working near overhead lines. They can move horizontally and vertically due to wind, shifting the location of the Danger Zone.

4. Assign a qualified, signal person observe the clearance and warn the crane operator before approaching the Safe Operating Distance limits.

- A. Treat all overhead wires as energized until the person or utility owning the line verifies it is not energized.
- B. Exceptions ensuring equivalent protection are allowed, if approved by the administrative or regulatory authority in writing.
- C. Install durable signs at the operator's station and on the outside of the crane, warning that electrocution or serious bodily injury may occur if the Table 1. Safe Operating Distance limits aren't adhered to.

<b>Safe Operating Distance for Cranes Near Electrical Lines</b>		
<b>When operating near high voltage power lines</b>		
Normal Voltage, kV - (phase to phase)	Minimum Required Clearance	
	Ft.	(m)
0 - 50	10	(3.5)
50 - 200	15	(4.6)
200 - 350	20	(6.1)
350 - 500	25	(7.62)
500 - 750	35	(10.67)
750 - 1000	45	(13.72)
<b>When in transit with no load and boom stowed</b>		
0 - 0.75	4	(1.22)
0.75 - 50	6	(1.83)
50 - 345	10	(3.83)
345 - 750	16	(4.87)
750 - 1000	20	(6.1)

# Qualifications and Operating Practices 5

---

## 5.6 PREPARING THE CRANE FOR OPERATION

1. Ensure the manual has been thoroughly read by all crane operating and maintenance personnel and supervisors.
2. Perform a routine inspection of the crane before operation each day. Correct any defects immediately.
3. At the job site, position the vehicle so the crane can reach the load within the rated capacity (center line of rotation to hoist hook).
4. Keep the vehicle as level as possible during operation.

### NOTICE

At a 10% slope, all crane functions are limited to 50% speed. At a 15% slope, all crane functions are disabled.

5. Allow the vehicle engine to warm up before operation.
6. For Auto Crane units using only electric operation:
  - A. Engage the emergency brake.
  - B. Leave the ignition on with the transmission in neutral (or park for automatic transmissions).
  - C. Activate any crane power switches.
7. For Auto Crane units using electric and hydraulic operation:
  - A. Engage the emergency brake.
  - B. Place the transmission in neutral.
  - C. Press the clutch in.
  - D. Activate PTO (Power Take Off).
  - E. Release the clutch.
  - F. Allow sufficient time for the hydraulic fluid to warm up.
  - G. Set the throttle control to the proper engine speed.
8. For all outrigger usage:
  - A. Always extend the outriggers from the vehicle to the ground before crane operation. Ensure they are firmly positioned on solid ground.
  - B. Stand clear of outriggers while being extended.
  - C. If a curb or other object prevents the outrigger from being fully extended, shorten the bearing or fulcrum point and reduce the maximum load accordingly.
  - D. If an outrigger will not reach the ground because of holes or grades, block up the outrigger pad to provide level and firm support to the vehicle.
  - E. If working in soft ground, use wide pads under the outrigger feet to prevent sinking.
  - F. Always store the outriggers before transportation.
    - i. For Auto Crane units with Manual Outriggers:
      1. Pull the lock pins to release the jackleg or drop down outrigger. Move to the outermost lock position.
      2. Ensure lock pins are reinstalled properly.
      3. Lower the Outrigger pad to firm ground and adjust the foot to remove slack.
    - ii. For Auto Crane units with Hydraulic Outriggers:
      1. Shift the diverter valve to the Outrigger position.
      2. Extend the Outriggers to their horizontal limit.
      3. Extend the Outriggers vertically until they make solid contact with the ground with the ground and the truck is approximately level side-to-side.
      4. With the Outriggers properly positioned, return the diverter valve to the Crane position.

## 5 Qualifications and Operating Practices

---

9. Remove the remote control from the cab or storage area. Power the remote control on. Detach the hook from the dead man.
10. The crane is now ready for operation.


### **DURING OPERATION**

1. Always boom up before rotating so the boom will clear the boom support.
2. Always maintain clearance between the boom crown and the traveling block or hook hoist during boom extension. Always observe all relevant safe policies and procedures during crane operation.
4. Always use slow and smooth movements with the crane to avoid causing the load to swing like a pendulum.

### **AFTER OPERATION**

1. After completing the lifting operations, return the boom to the stowed position on the boom support.
2. Replace remote control to its storage location.
3. Return the Outriggers to the stowed position. Ensure they are pinned in place or jack legs are returned to the storage compartment.
4. Always store the crane in its stowed position for transportation.
5. Release the throttle control, press the clutch in, and disengage the PTO. Deactivate any crane power switches.
6. Check vehicle surroundings before moving.
7. Record any unusual occurrence during crane operation which may indicate required maintenance or repair.


# 8 Function Pendant with ON/OFF P/N: 680179000 6

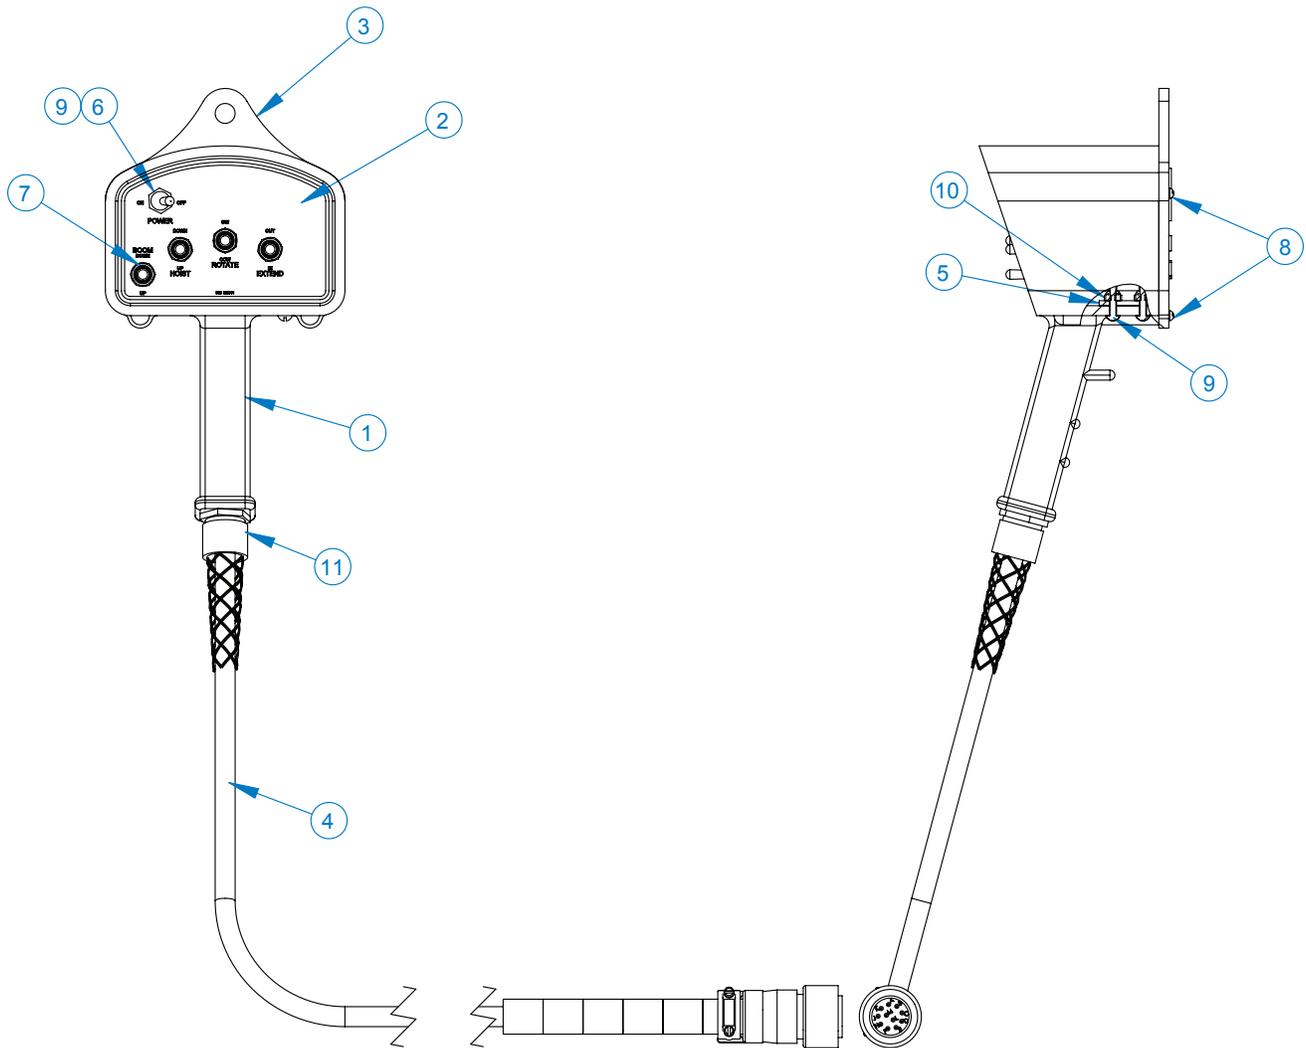

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	480501000	PENDANT HOUSING
2	1	366719000	DECAL, PENDANT 8F UNC W/PWR
3	1	480504000	PENDANT BACK PLATE
4	1	680179001	PENDANT CABLE, 11 PIN BAYONET
5	1	480598	COVER TRIGGER OPENING
6	1	750090	TOGGLE SWITCH, 1 POLE, 2 POSITION
7	4	634200000	TOGGLE SWITCH KIT
8	4	001004000	SCREW PN HD #6 X 3/4 LG
9	2	002607	SCREW RD HD #10-24 UNC X 3/4 LG CP
10	2	015801	NUT HX NYLK #10-24 UNC ZP
11	1	600820000	CORD GRIP, 3/4 NPT, .50-.625" CORD

# 6 8 Function Pendant with ON/OFF P/N: 680179000

## PENDANT WIRING SCHEMATIC

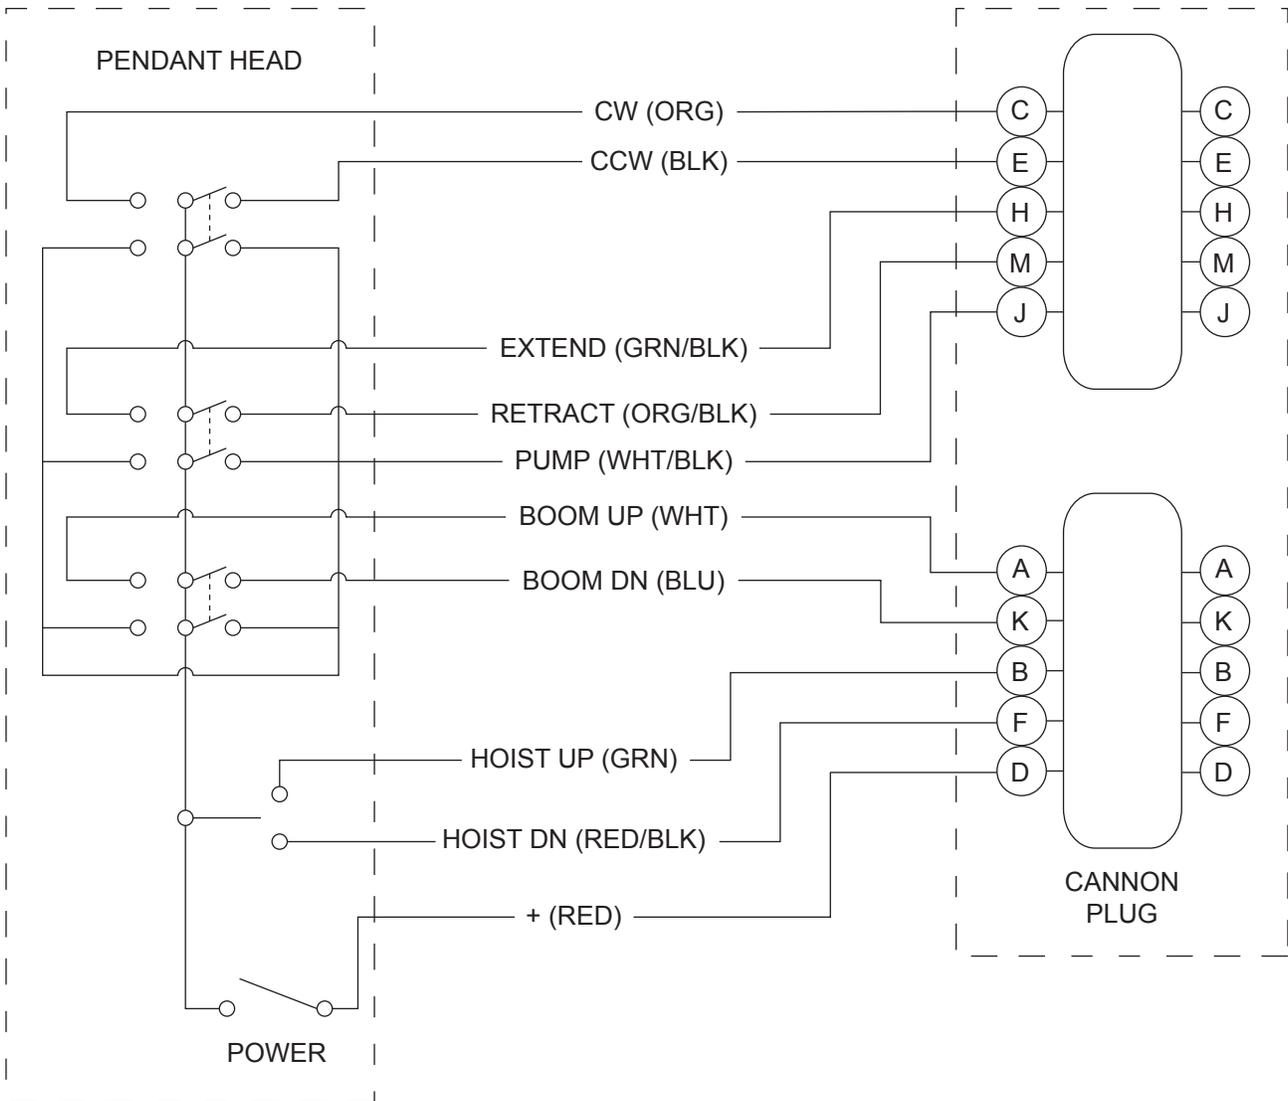

## TRANSMITTER LAYOUT

There is a red light to the left of the ON/OFF Toggle switch and a yellow light to the right. As the battery runs down, the red light will begin to flash as well as the yellow light.

If the yellow light is rapidly flashing this indicates that the unit is transmitting. Refer to the Transmitter Diagnostics Section for a detailed explanation of each light combination.

In addition to the two lights mentioned above there are four function toggle switches. These functions from left to right are to be used to raise and lower the boom, raise and lower the hoist cable, rotate the crane and extend and retract the boom.



## POWER ON/OFF TOGGLE SWITCH

The transmitter is powered by four AA alkaline batteries, located under the back cover of the housing. To turn the transmitter on, press and hold the Power On Toggle, release once the transmit light starts blinking. To turn the unit off, press and hold the power off toggle, release after the transmit light stops flashing.

## FUNCTION SWITCHES

To operate a function, toggle one of the function switches with either the thumb of the hand holding the unit or the thumb or fingers of the opposite hand. More than one function can be activated at one time.




## CARE

**KEEP DRY.** Do not clean the transmitter / receiver under high pressure. If water or other liquids get inside the transmitter battery or receiver compartment, immediately dry the unit. Remove the case and let the unit air dry.

## WELDING

**DISCONNECT THE RADIO RECEIVER BEFORE WELDING** on the crane, load, or truck. Failure to disconnect will result in the destruction of the radio receiver.


## 7 FM Control Transmitter

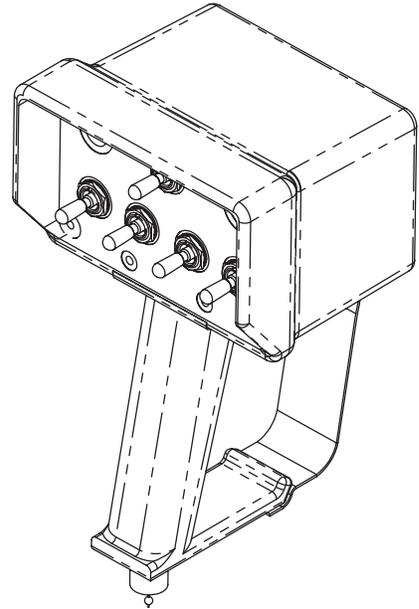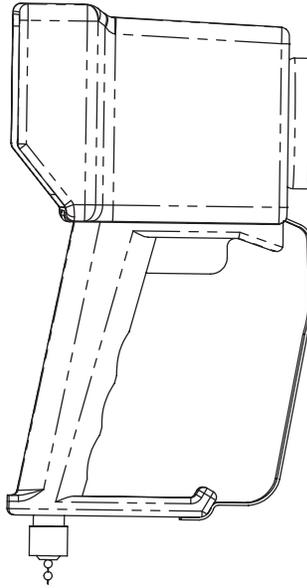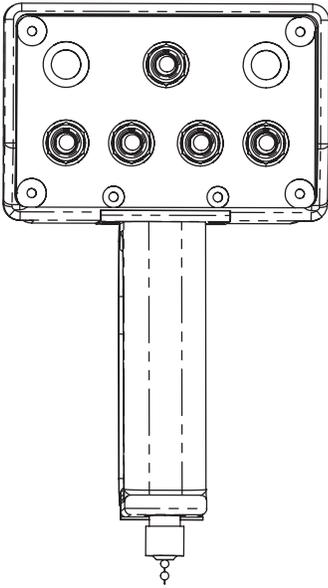




**TOGGLE SWITCH WIRING CHART**

FUNCTION	WIRE COLOR	TERMINAL POSITION
POWER ON	YELLOW	BOTTOM
POWER OFF	GREEN (FROM 8 PIN CONNECTOR)	TOP
BOOM UP	RED	BOTTOM
BOOM DN	ORANGE	TOP
BOOM EXTEND	GREEN (FROM 10 PIN CONNECTOR)	BOTTOM
BOOM RETRACT	BLUE	TOP
ROTATE CW	VIOLET	BOTTOM
ROTATE CCW	GREY	TOP
HOIST UP	WHITE	BOTTOM
HOIST DN	BROWN	TOP
COMMON	BLACK	MIDDLE

## FM CONTROL TRANSMITTER WIRING SCHEMATIC

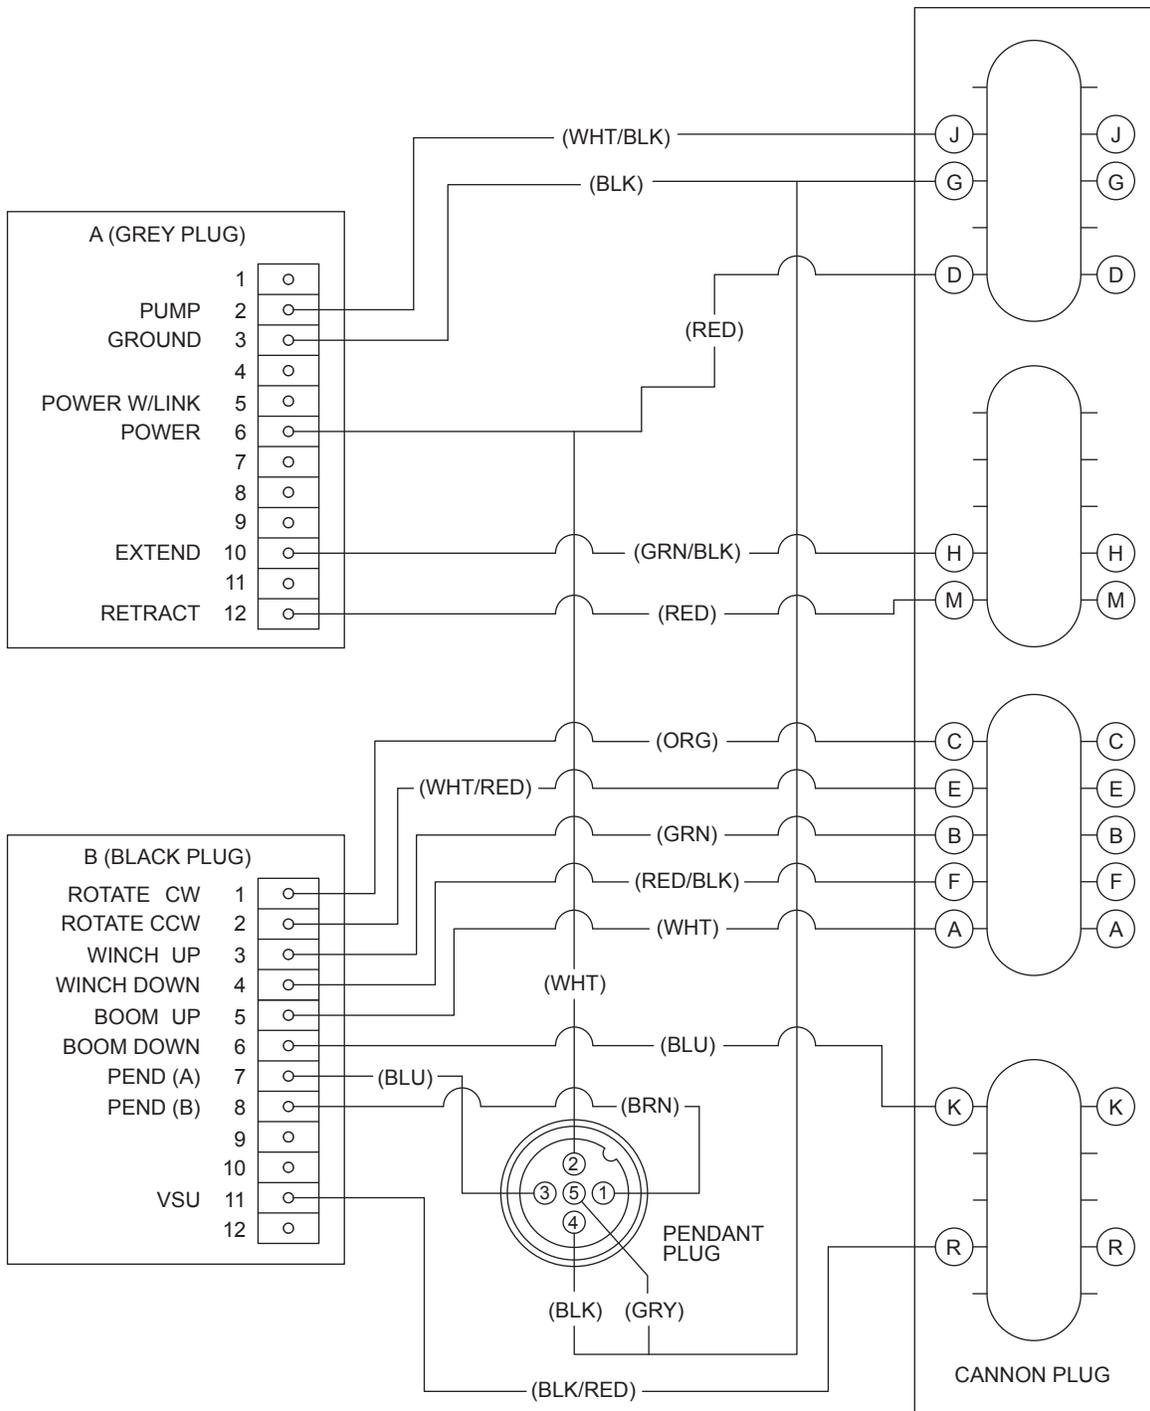

# 8 FM Control Transmitter Diagnostics
   
<p>RED                      YELLOW</p> 	<p>Tether connection detected</p>
<p>RED                      YELLOW</p> 	<p>Low battery. Unit will run approximately 10 hours after Battery light starts flashing.</p>
<p>RED                      YELLOW</p> 	<p>Flashing rapidly for 10 seconds indicates a transmitter failure.</p>
<p>RED                      YELLOW</p> 	<p><b>Normal Operation</b> The Active light will flash several times per second, indicating that the transmitter is sending signals to the receiver. The Active light will remain on momentarily whenever a function changes.</p>
<p>RED                      YELLOW</p> 	<p><b>Normal Operation</b> The transmitter is in Download Mode.</p>
<p>RED                      YELLOW</p> 	<p>Stuck switch detected. Ensure that all switches are in a centered position. The transmitter will not power up when a function is ON.</p>
<p>RED                      YELLOW</p> 	<p><b>On Power Down</b> Unit is still powered. Check for stuck switches, as the transmitter will not power down when a function is ON. Alternating flash means that the transmitter is in Calibration Mode.</p>

Light Legend						
Solid 	Slow Flash 	Fast Flash 	Red Light 	Green Light 	Yellow Light 	Alternating Red & Green Light 

# FM Control Transmitter Diagnostics 8

## Normal Operation

	<p>Transmitter is OFF If the transmitter is off, the receiver is operating properly.</p>
	<p>Transmitter is ON When the transmitter is turned on, the Link light (fast flashing) and E-Stop (GREEN) indicates the receiver is operating properly.</p>
	<p>Transmitter is in Operation When a function is activated on the transmitter, the Fault light will turn on GREEN. This indicates the receiver is operating properly.</p>
	<p>Transmitter is OFF When a latched function is activated then the transmitter is turned off, the Fault light will stay on GREEN. If the system was intentionally designed this way, the receiver is operating properly, if not call for service.</p>

## Trouble Indicators

**Note:** In some cases, the indicator lights will be different depending on whether the transmitter is on or off. Please note the transmitter status in the "Description" column for each case.

Indicator Lights	Description	Solution
	<p>Transmitter is ON The reason is the transmitter is not communicating with the receiver.</p>	<p>Refer to <b>Trouble Shooting Chart #3</b> for solutions.</p>
	<p>Transmitter is ON A low battery condition has been detected.</p>	<p>To detect intermittent conditions caused by poor or corroded ground or power circuits, the GREEN light will continue to flash for 30 seconds after the condition has been removed.</p>
	<p>Transmitter is ON An internal fault with the E-Stop has been detected.</p>	<p>Check fuse, if OK then: Inspect E-Stop wiring for short circuit. Disconnect E-Stop wire as close to the receiver output as possible. If the Status light changes to: GREEN, a short occurs after disconnection point. Stays flashing RED, send it in for service.</p>
	<p>Transmitter is ON A short to ground or excessive current draw on an output. It is most likely caused by a wiring fault.</p>	<p>Ensure transmitter is functioning properly, check status of each output connection: Press each function button and observe Fault Light. If GREEN, everything is OK. If RED, there is a short in that connection.</p>
	<p>Transmitter is ON E-Stop output is connected with one of the other outputs or one of the outputs is shorted to power</p>	<p>Turn off transmitter, if condition clears follow E-Stop wire and check for connections with other wires. If condition remains one of the outputs is shorted to power. Test all outputs wires for power.</p>
	<p>Transmitter is OFF A wiring short to the battery has been detected.</p>	<p>Refer to <b>Trouble Shooting Chart #1</b> for solutions.</p>

### Light Legend


Solid	Slow Flash	Fast Flash	Red Light	Green Light	Yellow Light	Alternating Red & Green Light
-------	------------	------------	-----------	-------------	--------------	-------------------------------

# 8 FM Control Transmitter Diagnostics

<p>ESTOP    FAULT    LINK    STATUS</p> 	<p>Transmitter is OFF The receiver has detected an internal fault.</p>	<p>Refer to <b>Trouble Shooting Chart #1</b> for solutions.</p>
<p>ESTOP    FAULT    LINK    STATUS</p> 	<p>Transmitter is ON Blown fuse detected. (not functional with proportional units)</p>	<p>Refer to <b>Page 8</b> for instructions on how to open the receiver case to access fuse. Check wiring for shorts or bare spots. If fuses continue to blow, call for service.</p>
<p>ESTOP    FAULT    LINK    STATUS</p> 	<p>A setup failure has occurred.</p>	<p>Either hold the Setup button for 5 seconds to return to Setup mode or cycle power to return to the normal operating mode.</p>
<p>ESTOP    FAULT    LINK    STATUS</p> 	<p>Transmitter is OFF The receiver is powered incorrectly.</p>	<p>Most likely cause of this condition is that an output wire or the E-Stop wire has been connected to a power source while the power wire is disconnected from the Power Input (A6). I.E. Receiver is being powered from an output and not Power Input.</p>


Light Legend													
Solid		Slow Flash		Fast Flash		Red Light		Green Light		Yellow Light		Alternating Red & Green Light	

## TEST THE RECEIVER - R160

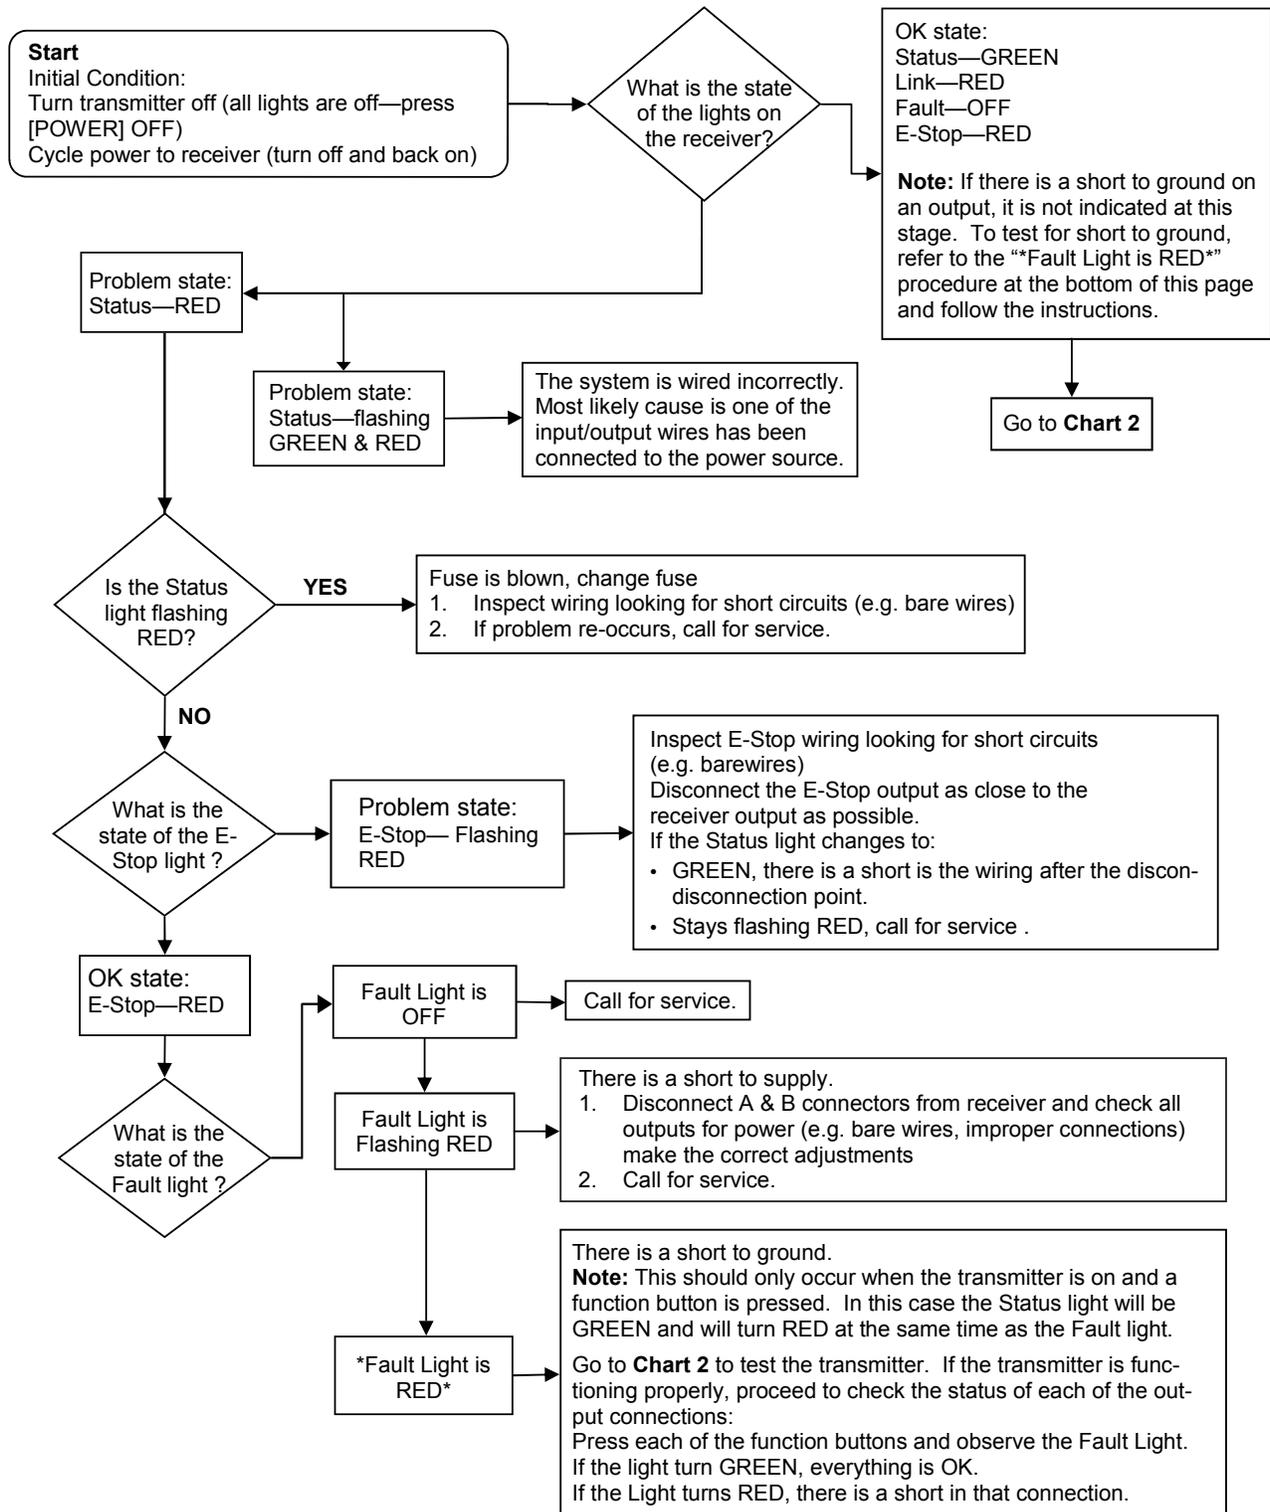


# 9 FM Control Transmitter Troubleshooting

## TEST THE TRANSMITTER - T150

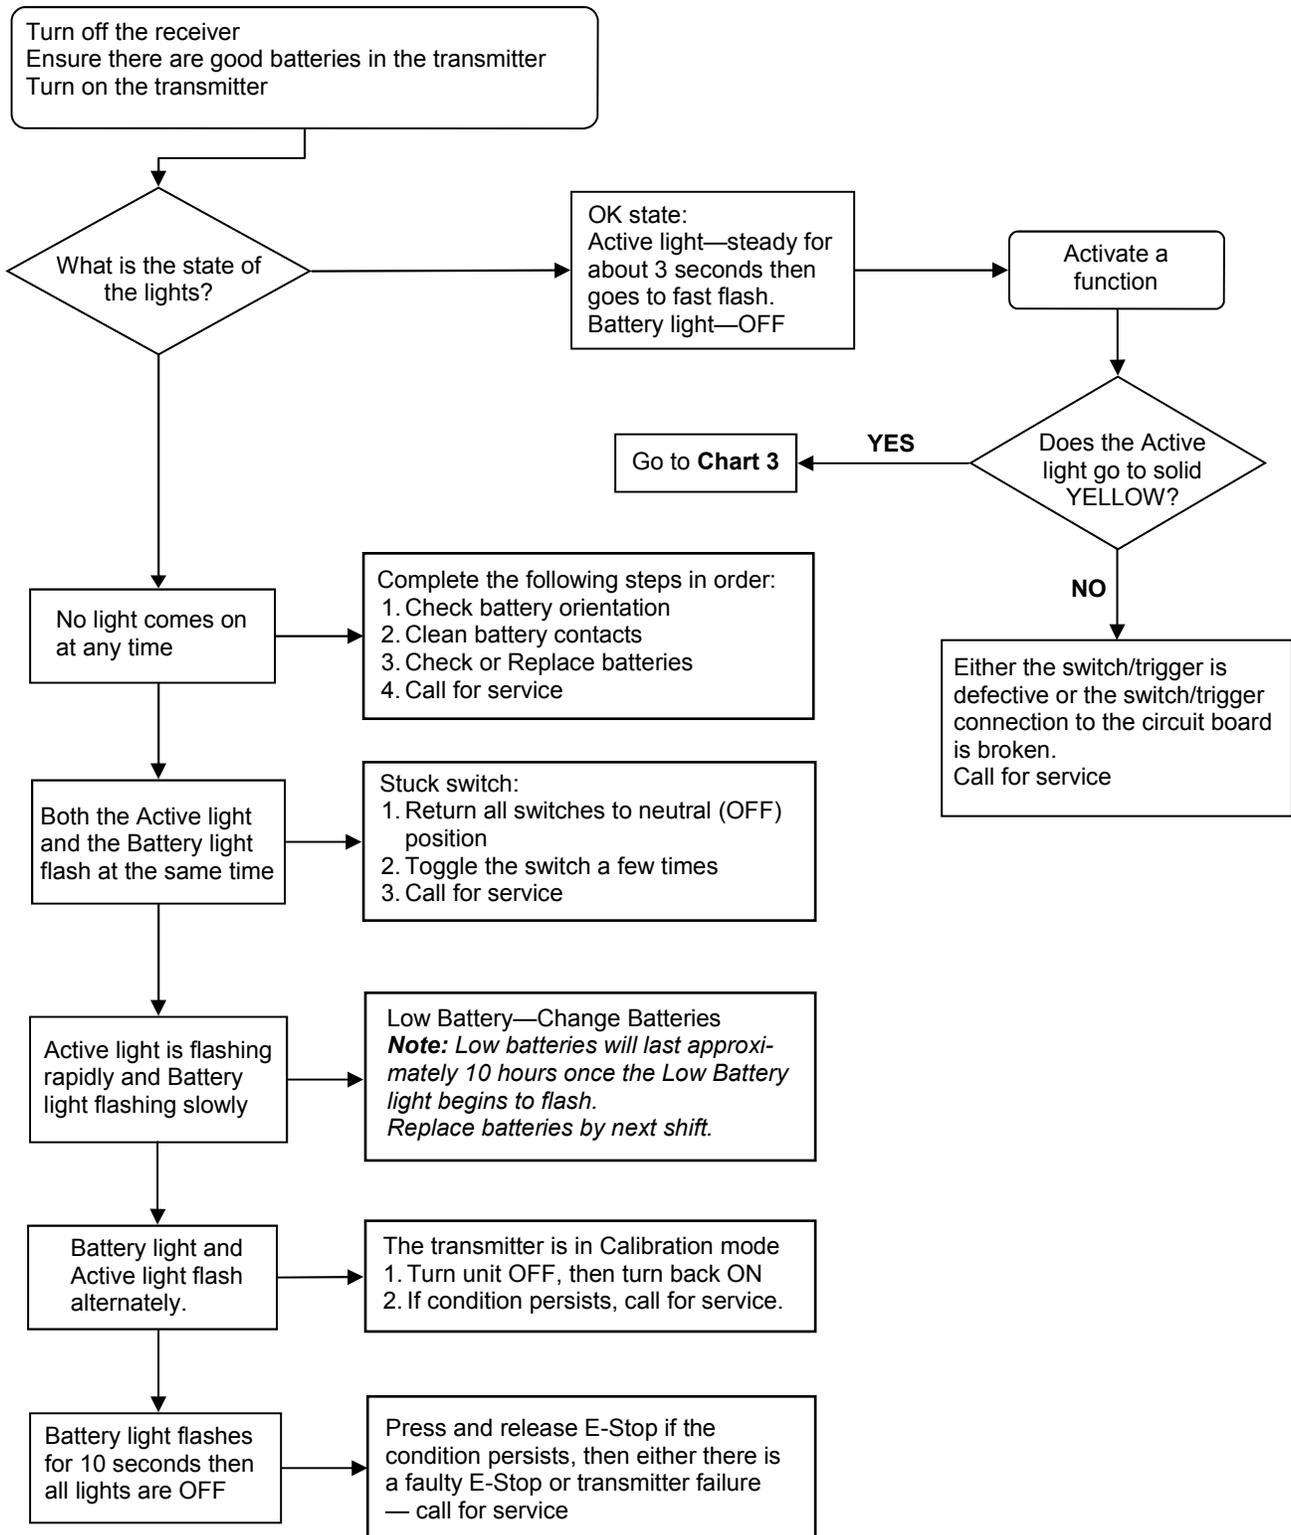

## TESTING THE TRANSMITTER/RECEIVER COMMUNICATION

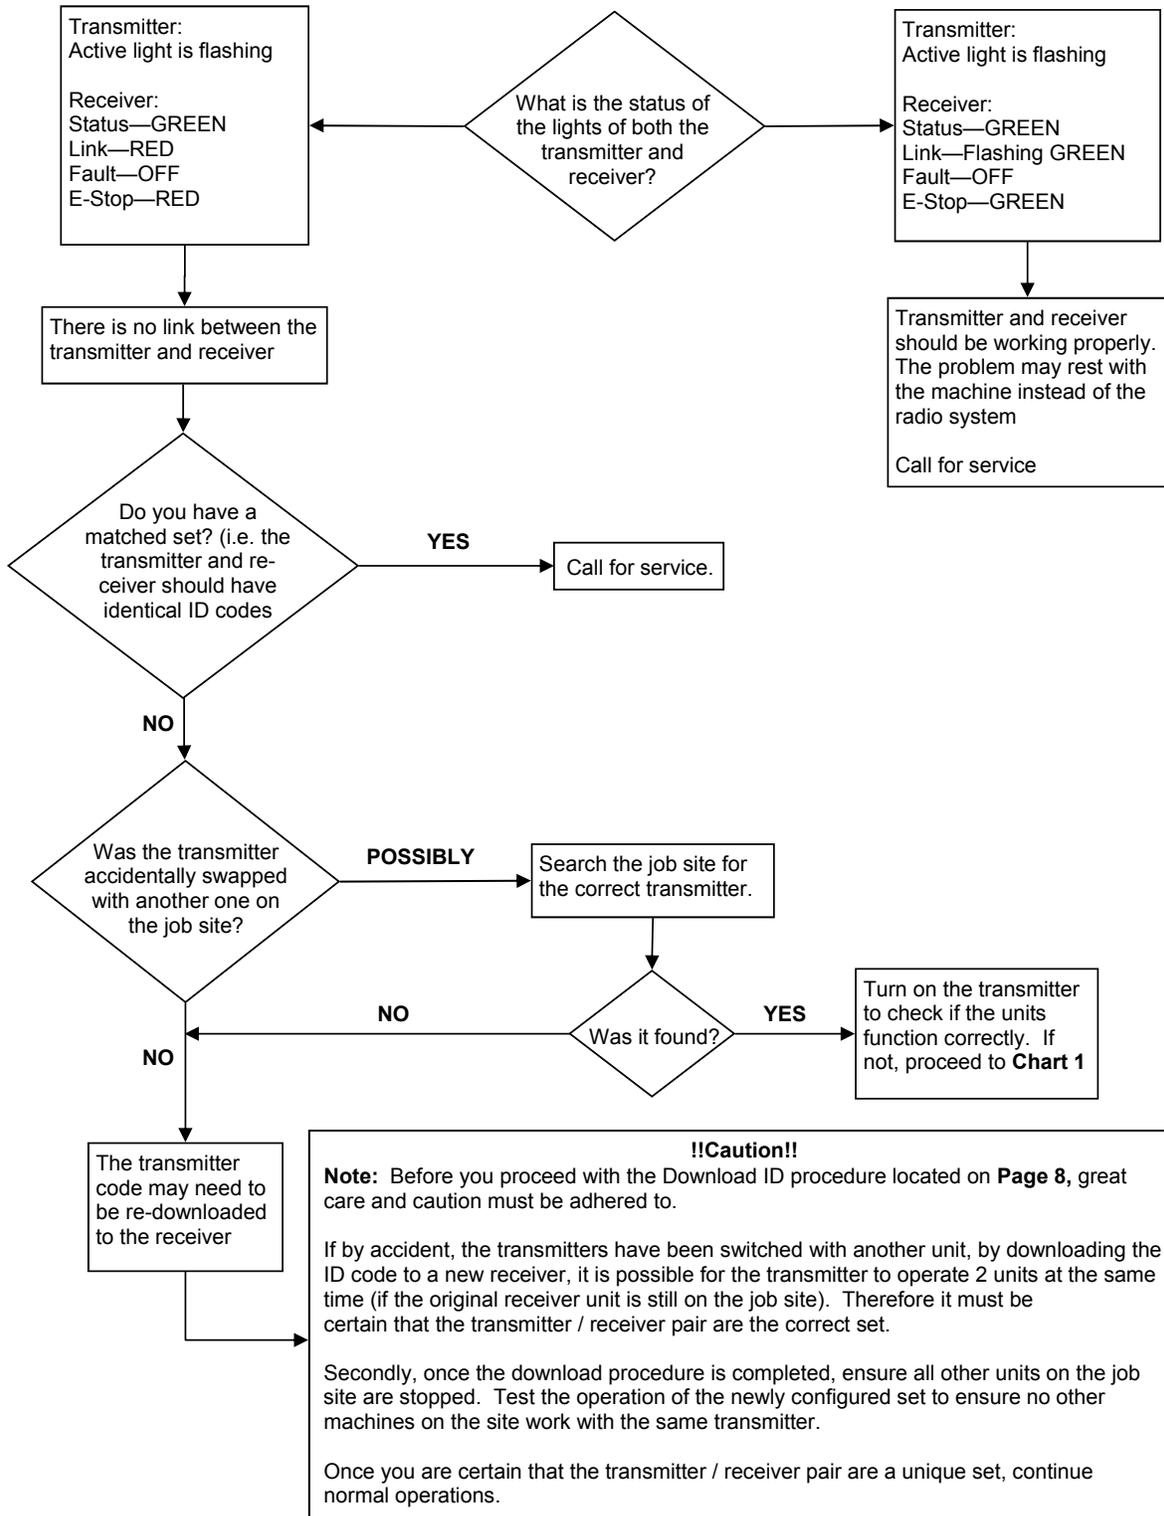


# 10 FM Control Transmitter ID Code Programming

Download ID Code (Use in Case of Link Test Failure)

## CAUTION

Before attempting reprogramming with another transmitter, understand that reprogramming the receiver with another transmitter, could result in two receivers on the job site responding to the one transmitter. If the original transmitter was sent in for repair, disconnect the receiver (disconnect connector A) to continue using the machine without remote capability and without fear of inadvertently operating the machine with the other transmitter.

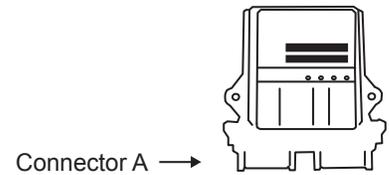

### Reprogramming Tips:

1. Use a pointy instrument to depress the Setup button on the receiver (i.e. a pen) as the button is relatively small
2. Follow each step as laid out in the procedure
3. Never lay the receiver circuit board down on anything metallic (there are contact points on the back which could contact the metal and damage the receiver)


Follow these steps to download the transmitter's unique ID Code into the receiver. This will allow the receiver to establish a radio link with that transmitter. Refer to the Light Legend below for diagram details.

**NOTE:** It is necessary to download the ID Code when replacing either the transmitter or the receiver.

**NOTE:** If the transmitter is connected to the receiver with a tether cable, completing only steps 3 and 5 is necessary (it is not necessary to open the R160 case and press the Setup button).



### 1. Opening the Receiver Case

The cap is held on by two plastic tabs at opposing sides, which can be unlatched as shown using a screwdriver. Once the cap is free, the R160 can slide open. Use a small slotted screwdriver to press the side tabs inward

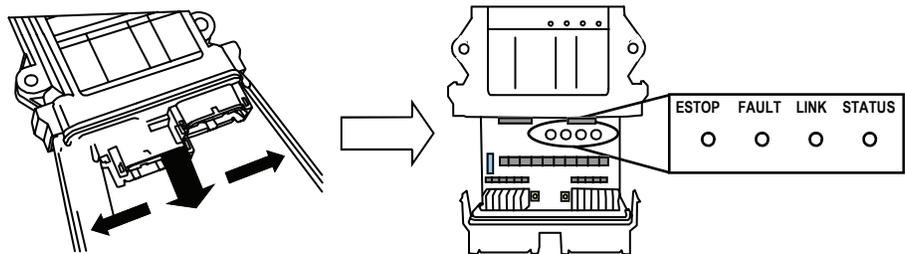

### 2. Prepare Transmitter, Power Receiver

- A. Press [Power] OFF
- B. Supply power to the receiver

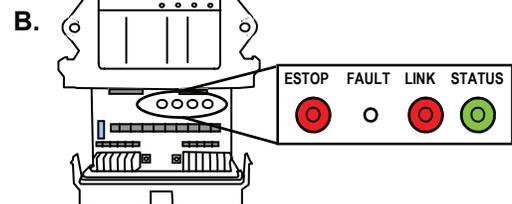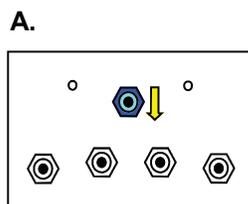

### Light Legend


Solid	Slow Flash	Fast Flash	Red Light	Green Light	Yellow Light	Alternating Red & Green Light
-------	------------	------------	-----------	-------------	--------------	-------------------------------

# FM Control Transmitter ID Code Programming 10

## 3. Power Transmitter into Configuration Mode


- Press and hold (BOOM) switch in the UP position.
- Press and release [POWER] switch in the OFF position.
- Release [BOOM] switch.

The ACTIVE LED will flash once per second

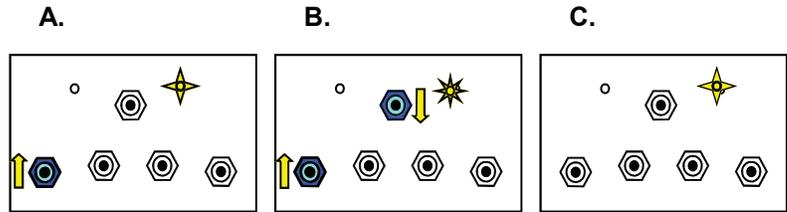

## 4. Put Receiver into Setup


- Press and hold [SETUP] button until (STATUS) light goes from slow flash to fast flash.
- Release [SETUP] button. (STATUS) light goes to solid GREEN. (LINK) light turns off.

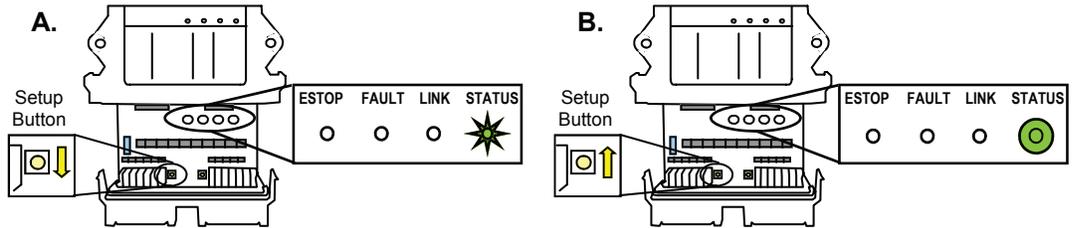

**NOTE:** If left idle in SETUP mode for over 30 seconds, the receiver will time out. The (LINK) light and (STATUS) light will flash RED rapidly. To return to SETUP mode, repeat step 4.

## 5. Download ID Code

- Press and release [BOOM] switch in the UP position.
- The R160 (LINK) light goes to GREEN. Once complete, (LINK) light goes to red as the transmitter turns off.

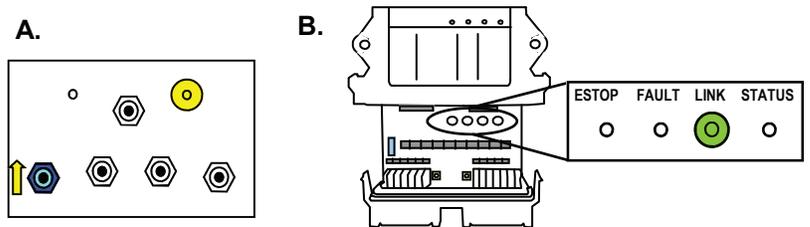

Light Legend						
Solid	Slow Flash	Fast Flash	Red Light	Green Light	Yellow Light	Alternating Red & Green Light



## 11.1 INSPECTION REQUIREMENTS

### NOTICE

Reference ASME B30.5a and OSHA 1910.180 for complete inspection requirements.



### WARNING

All inspections shall be performed by the designated personnel only.

## 11.2 INSPECTION CLASSIFICATION

1. Initial Inspection
  - A. Prior to initial use, all new, altered, modified, or extensively repaired cranes shall be inspected by a designated person to ensure compliance with provisions of this standard.
2. Regular Inspection
  - A. Inspection procedures for cranes in regular service are divided into two general classifications based upon the intervals at which the inspection should be performed. The intervals in turn are dependent upon the nature of the components of the crane and the degree of their exposure to wear, deterioration, or malfunction. The two general classification are herein designated as "frequent" and "periodic" with respective intervals as defined below:
    - i. Frequent Inspection – daily or before each use
    - ii. Periodic Inspection – one to twelve-month intervals or as specifically recommended by the manufacturer or qualified person.

## 11.3 FREQUENT INSPECTION

Inspections should also occur during operation for any deficiencies that might appear between regular inspections. Any deficiencies, such as those listed below, shall be carefully examined and a determination made as to whether they constitute a hazard:

1. Inspect control mechanisms for maladjustment that interferes with proper operation.
2. Inspect control mechanisms for excessive wear of components and contamination by lubricants or other foreign matter.
3. Inspect safety devices for malfunction.
4. Visually inspect all hydraulic hoses, particularly those that flex in normal operation of crane functions.
5. Inspect hooks and latches for deformation, chemical damage, cracks, and wear.
6. Inspect for proper rope reeving.
7. Inspect electrical wiring and components for malfunctioning, signs of excessive deterioration, dirt and moisture accumulation.
8. Inspect hydraulic system for proper oil level and leaks.
9. Inspect tires for recommended inflation pressure, cuts, and loose wheel nuts.
10. Inspect connecting pins and locking device for wear damage and loose retaining bolts.
11. Inspect rope for gross damage, such as listed below, which may be an immediate hazard.
  - A. Distortion such as kinking, crushing, un-stranding, birdcaging, main strand displacement, or core protrusion. Loss of rope diameter in a short length or unevenness of outer strands should be replaced.

# 11 Maintenance

---

- B. General corrosion.
- C. Broken or cut strands.
- D. Use care when inspecting sections of rapid deterioration around flange points crossover points, and repetitive pickup points on drums.
- E. Inspect number, distribution, and type of visible broken wires.

## NOTICE

Continued use of rope depends upon good judgment by a designated person in evaluating remaining strength in a used rope after allowance for deterioration disclosed by inspection. Continued rope operation depends upon this remaining strength.

### 11.4 PERIODIC INSPECTION

Any deficiencies, such as those listed below, shall be carefully examined and determination made as to whether they constitute a hazard:

1. Inspect for deformed, cracked or corroded members in the crane structure and entire boom.
2. Inspect for loose bolts, particularly mounting bolts.
3. Inspect for cracked or worn sheaves and drums.
4. Inspect for worn, cracked, or distorted parts such as pins, bearings, shafts, gears, rollers and devices.
5. Inspect for excessive wear on brakes and clutch system parts and linings.
6. Inspect crane hooks for cracks.
7. Inspect travel steering, braking, and locking devices for malfunction.
8. Inspect for excessively worn or damaged tires.
9. Inspect hydraulic hose, fittings, and tubing for the following problems:
  - A. Evidence of leakage at the surface of the flexible hose or its junctions with the metal and coupling.
  - B. Blistering, or abnormal deformation to the outer covering of the hydraulic or pneumatic hose.
  - C. Leakage at threaded or clamped joints that cannot be eliminated by normal tightening or recommended procedures.
  - D. Evidence of excessive abrasion or scrubbing on the outer surface of a hose, rigid tube, or fitting. Means shall be taken to eliminate the interference of elements in contact or otherwise protect the components.
10. Inspect hydraulic pumps and motors for the following problems:
  - A. Loose bolts and fasteners.
  - B. Leaks at joints between sections.
  - C. Shaft seal leaks.
  - D. Unusual noises or vibrations.
  - E. Loss of operating speed.
  - F. Excessive heating of fluid.
  - G. Loss of pressure.
11. Inspect hydraulic valves for the following:
  - A. Cracks in valve housing.
  - B. Improper return of spool to neutral position.
  - C. Leaks at spools or joints.
  - D. Sticking spools.
  - E. Failure of relief valves to attain or maintain correct pressure setting.
  - F. Relief valve pressure shall be checked as specified by the manufacturers.

12. Inspect hydraulic cylinders for the following problems:
  - A. Driving caused by fluid leaking across piston.
  - B. Rod seals leaking.
  - C. Leaks at welding joints.
  - D. Scored, nicked, or dented cylinder rods.
  - E. Damaged case (barrel).
  - F. Loose or deformed rod eyes or connecting joints.
13. Inspect hydraulic filters for evidence of rubber particles on the filter elements indicating possible hose, O-ring, or other rubber component deterioration. Metal chips or pieces on the filter may denote failure in pumps, motors, or cylinders. Further inspection will be necessary to determine the origin of the problem before corrective action can be taken.
14. Inspect labels to confirm correct location and legibility. Reference decals layout in this manual for proper location of decals.
15. Rope inspections need not be at equal calendar intervals and should be more frequent as the rope approaches the end of useful life. A qualified person shall inspect the wire rope based on such factors as:
  - A. Expected rope life as determined by experience on the particular installation or similar installations.
  - B. Severity of environment.
  - C. Percentage of capacity lifts.
  - D. Frequency rates of operation.
  - E. Exposure to shock loads.
    - i. This inspection shall cover the entire length of the rope. Only the surface wires need to be inspected and no attempt should be made to open the rope. Any deterioration resulting in appreciable loss of original strength shall be noted and determination made as to whether use of the rope would constitute a hazard. A few notable deterioration points are listed below:
      1. Reduction of rope diameter below nominal diameter due to loss of core support.
      2. Internal or external corrosion.
      3. Wear of outside wires.
      4. Severely corroded, cracked, bent, worn, or improperly applied connections.

## 11.5 CRANES NOT IN REGULAR USE

A crane, which has been idle for a period of more than one month or more, shall be given an inspection conforming to the "initial" and "periodic" inspection requirements of this section.

## 11.6 INSPECTION RECORDS

Dated records of periodic inspection should be made on critical items such as brakes, crane hooks, rope, cylinders, and relief pressure valves.

## 11.7 TESTING REQUIREMENTS

### NOTICE

Reference ASME B30.5a and OSHA 1910.180 for complete testing requirements.

# 11 Maintenance

---

## WARNING

All testing shall be performed by designated personnel only. Prior to initial use, all new, altered, modified, or extensively repaired cranes shall be inspected by a designated person to ensure compliance with provisions of this standard.

1. Test all functions to verify speed and operation.
2. Ensure all safety devices are working properly.
3. Confirm operating controls comply with appropriate function labels.
4. Test loads shall not exceed 110% of the manufacturer's load rating.
5. Written reports shall be maintained showing test procedures and confirming the adequacy of repairs.

## 11.8 GENERAL REPAIRS AND MAINTENANCE

### NOTICE

Reference ASME B30.5a and OSHA 1910.180 for complete maintenance and repair requirements.

## WARNING

All repairs and maintenance shall be performed by designated personnel only. Establish a preventative maintenance program based on this section. Obtain all replacement parts from your local authorized distributor.

## 11.9 MAINTENANCE PRECAUTIONS

1. Place crane where it will cause the least interference with other equipment or operations.
2. Verify all controls are in the OFF position and all operating features secured from inadvertent motion by brakes, pawls, or other means.
3. The means for starting the crane shall be rendered inoperative.
4. The boom should be secured in place before maintenance.
5. Relieve hydraulic oil pressure from all hydraulic circuits before loosening or removing hydraulic components.
6. Warning or "OUT OF ORDER" signs shall be placed on all crane controls.
7. After adjustments and repairs have been made, the crane shall not be returned to service until all guards have been reinstalled, trapped air removed from hydraulic system (if required), safety devices reactivated, and maintenance equipment removed.

## 11.10 ADJUSTMENTS AND REPAIRS

1. Any hazardous conditions disclosed by the inspection requirement shall be corrected before operation of crane is resumed.
2. Adjustments shall be maintained to assure correct of functioning of components, the following are examples:
  - A. Function operating mechanism.
  - B. Safety devices.
  - C. Control systems.
3. Repairs or replacements shall be provided as needed for operation, the following are examples:
  - A. Critical parts of functional operating mechanisms which are cracked, broken, corroded, bent, or excessively worn.

- B. Critical parts of the crane structure which are cracked, bent, broke, or excessively corroded.
  - C. Crane hooks showing cracks, damage, or corrosion shall be taken out of service. Repairs by welding are recommended.
4. If bleeding the hydraulic system is required, run each crane function until smooth operation of that particular function is noticeable.

## 11.11 LUBRICATION

All moving parts of the crane, for which lubrication is specified, should be regularly lubricated per the manufacturer's recommendations and procedures.

## 11.12 ROPE REPLACEMENT

No precise rules can be given for determination of the exact time for replacement of rope, since many variable factors are involved.

Replacement rope shall have a strength rating at least as great as the original rope furnished or recommended by Auto Crane. A rope manufacturer, Auto Crane, or a qualified person shall specify any deviation from the original size, grade, or construction.

Conditions such as the following shall be reason for questioning continued the rope or increasing the frequency of inspection:

1. In running ropes, six randomly distributed broken wires in one strand in one lay.
2. One outer wire broken at the contact point with the core of the rope structure and protrudes or loops out of the rope structure. Additional inspection of this section is required.
3. Wear of one third of the original diameter of the outside individual wire.
4. Kinking, crushing, bird caging, or any other damage resulting in distortion of the rope structure.
5. Evidence of any heat damage from any cause.
6. Reduction of nominal diameter of more than:
  - A. 1/64" (0.4mm) – for diameters up to and including 5/16" (8mm)
  - B. 1/32" (0.8mm) – for diameters 3/8" (9.5mm) through and including 1/2" (13mm)
  - C. 3/64" (1.2mm) – for diameters 9/16" (14.5mm) through and including 3/4" (19mm)
  - D. 1/16" (1.6mm) – for diameters 7/8" (22mm) through and including 1-1/8" (29mm)
  - E. 3/32" (2.4mm) – for diameters 1-1/4" (32mm) through and including 1-1/2" (38mm)
7. In standing ropes, more than two broken wires in one lay in sections beyond end connections or more than one broken wire at an end connection.

## 11.13 ROPE INSTALLATION AND MAINTENANCE

1. Rope should be stored to prevent damage and deterioration.
2. Unreeling or uncoiling of rope shall be done as recommended by the rope manufacturer and with care to avoid kinking or inducing twist.
3. Before cutting a rope, seizing shall be placed on each of the place where the rope is to be cut to prevent unlaying of the strands. On pre-formed rope, one seizing on each side of the cut is required. On non-preformed ropes of 7/8" (22mm) or smaller, two seizings on each side of the cut are required. For non-preformed rope 1 in. (25mm) diameter or larger, three seizings on each side of the cut are required.

# 11 Maintenance

---

4. During installation care should be exercised to avoid dragging of the rope in the dirt or around objects that will scrape, nick, crush, or induce sharp bends in it.
5. Rope should be maintained in a well-lubricated condition. It is important that lubricant applied as a part of the maintenance program shall be compatible with the original lubricant and to this end the rope manufacturer should be consulted. Lubricant applied shall be the type that does not hinder visual inspection. Those sections of rope that are located over sheaves or otherwise hidden during inspection and maintenance procedures require special attention when lubricating rope. The object of rope lubrication is to reduce internal friction and to prevent corrosion.
6. When an operating rope shows greater wear or well-defined localized areas than on the remainder of the rope, rope life can be extended in some cases by shifting the wear to different areas of the rope.

## 11.14 PAINT FINISH MAINTENANCE

The paint finish on Auto Crane products can become damaged during normal use when chipped, scratch, exposed to harsh chemicals, cleaned with pressure washers, or similar. During periods when the truck is exposed to salt or other corrosive chemicals, wash Auto Crane products weekly. Inspect the paint finish monthly or when washed. Immediately repair any exposed bare metal or rust. Repair damaged paint on Auto Crane products with the following procedure:

1. Sand the damaged area to bare metal.
2. Use a solvent to clean the sanded area to remove sanding debris and residue.
3. Wipe dry with a clean cloth to remove any remaining debris and residue.
4. Use a primer compatible with Sherwin Williams E2W932 epoxy primer.
5. Prime the sand areas to a minimum 2 mm dry film thickness per the primer manufacturer's instructions.
6. Use a paint compatible with Sherwin Williams E2W932 epoxy primer and Sherwin Williams Genesis polyurethane top coat paint.
7. Apply the top coat paint to a minimum 2 mm dry film thickness within 24 hours of applying the primer.
8. The final primer and top coat should have approx. a 4 mm dry film thickness.

## 11.15 LUBRICATION AND MAINTENANCE SCHEDULE


Service Performed	Instructions	Daily	Weekly	3 Months	6 Months	Yearly
Load Hook	Inspect hook and latch for deformation, cracks, and corrosion.	<b>X</b>				
Cable Drum	Ensure cable is wound evenly on drum.	<b>X</b>				
Hoist/Boom Cable	Check for flattening, kinks, broken strands.	<b>X</b>				
Hyd. Hoses	Visual inspection.	<b>X</b>				
Hyd. Fluid	Check fluid level.	<b>X</b>				
Pin Retaining Bolts	Check torque to 23 ft lbs(Grade 5) 35 ft- lbs (Grade 8) as required.	<b>X</b>				
Mounting Bolts	Check torque to 335 ft-lbs as required.		<b>X</b>			
Rotating Ring Gear	Lube with MobileTac LL or Lubriplate.		<b>X</b>			
Sheave Bearings	Sealed bearing, replace if rough or loose.		<b>X</b>			
All Other Bolts	Check and tighten as required.		<b>X</b>			
Lift Cylinder Bearings	Grease with MobilePlex EP-2 or equivalent at zerk fittings			<b>X</b>		
Rotation Bearing	Grease with MobilePlex EP-2 or equivalent at zerk fittings			<b>X</b>		
Rotation Bearing Bolts	Check torque to 170 ft-lbs (hex head) 180 ft-lbs (socket head) as required			<b>X</b>		
Hydraulic Fluid	Drain, flush, and refill with Mobile DTE 13 oil					<b>X</b>
Boom Slide Pads	Pads greased when replaced.					
Filter, Valve Block	Replace annually or every 200 hours of operation as directed by the dirty filter sensor.					
For additional information, see OSHA 1910.180 and ASME B30.5a.						

# 11 Maintenance

---

## 11.16 LUBRICATION POINTS

1. Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.
2. Once a bolt has been tightened to specification then removed, the bolt should be replaced with a new one. Auto Crane Company recommends this crane be serviced per the "Crane Inspection Log" P/N 999978. Fill these logs in at the intervals noted and kept as a permanent record. Additional copies are available from your local distributor.

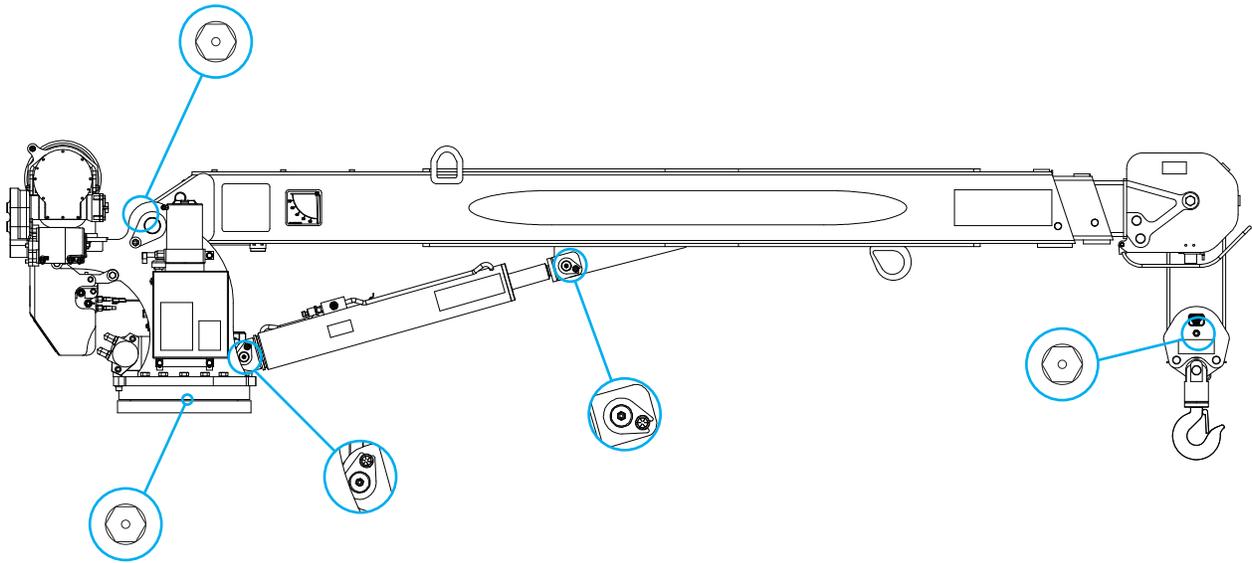


## 11.17 ADJUSTING OIL COOLED WORM BRAKE

The oil-cooled, fully adjustable, automatic safety brake operates in the worm housing lubricant, all part being submerged in oil. When the brake wears to the point that the load begins to drift, the brake can be adjusted as follows:

1. Loosen the lock nut on the adjusting screw.
2. Tighten the brake by turning the adjusting screw clockwise.  
**CAUTION:** Only  $\frac{1}{4}$  turn is usually required to adjust the brake. Over-tightening can cause overheating, and damage to the brake parts. Tighten the lock nut after adjustment is completed.

If the brake does not respond to adjustment then a new leaf spring and brake disc is needed. A torque wrench can be equipped with a special adapter to fit the input shaft (worm) of the winch. The adapter can be made by welding a nut to the end of a piece of tubing as shown in the following figure.

## 11.18 Brake Adjustment

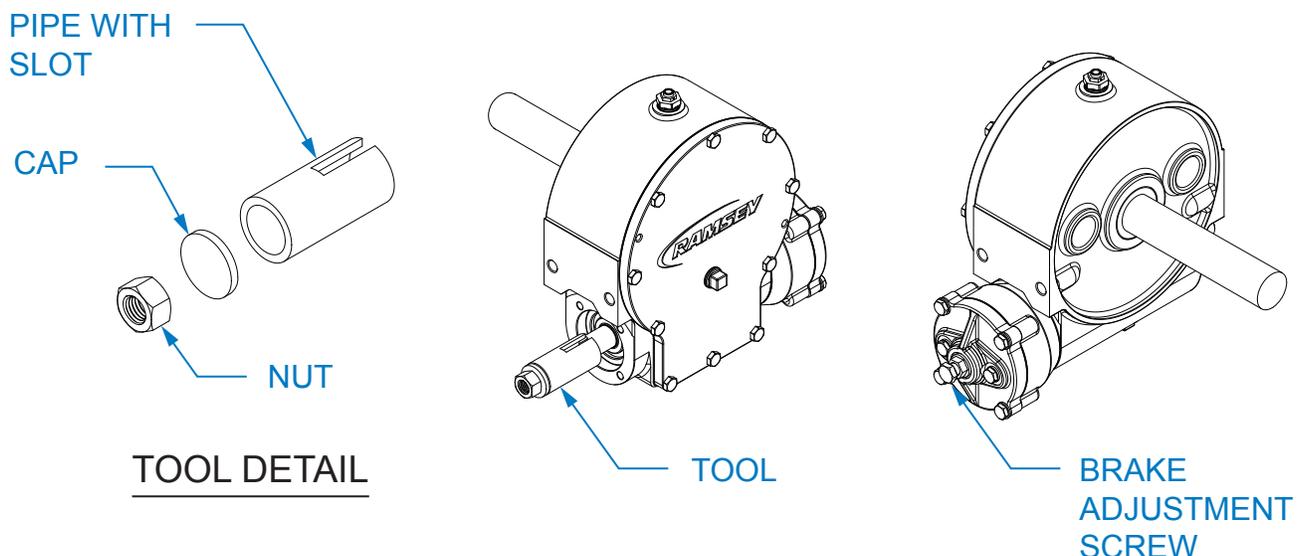

After welding the cap and nut to the tubing, slot the tubing as shown. This will allow the special adapter to slide over the keyway and then act as a large socket. A torque wrench can then be used to apply the proper torque. Turn the torque wrench so that the drum turns in the spool out direction or lowering direction. The torque ratings should be between 8-13 ft-lbs.

If the torque wrench does not show the proper value as it turns, then the worm brake adjusting bolt should be turned clockwise  $\frac{1}{4}$  turn. Each time the adjusting bolt is turned, check the torque reading. Continue this procedure until the proper torque reading is achieved. Then tighten the lock nut.

# 11 Maintenance

---

## 11.19 ROTATION BEARING REPLACEMENT GUIDELINES—2003-4004

All bearings can wear over time. This includes the main rotation bearing on the crane. No precise rules can be given for replacement of the rotation bearing, since many factors are involved. However, there are common symptoms seen during crane operation that may be caused by rotation bearing wear. These symptoms include:

1. Excessive Noise
2. Rough rotation
3. Increased drive power required to rotate.
4. Metal particles in grease


### REASONS FOR ROTATION BEARING REPLACEMENT

1. Any noticeable cracking in the bearing housing
2. Excessive axial play (reference axial play check instructions below)

**⚠ WARNING** Never try to repair a rotation bearing. For a replacement bearing contact your local authorized distributor.

### AXIAL PLAY ALLOWANCE CHECK PROCEDURE

1. Boom up to the max boom angle and measure the clearance between base plate and the rotation bearing with a dial or filler gauge. Reference figure for location.
2. Boom down to the horizontal position and measure the clearance between the base plate and the rotation bearing with a dial indicator or feeler gauge. Reference figure for location.
3. If the difference between the two measurements exceeds 1.5mm, replace bearing.
4. Rotate crane 45 degrees then repeat steps above until you reach 360 degrees of rotation.

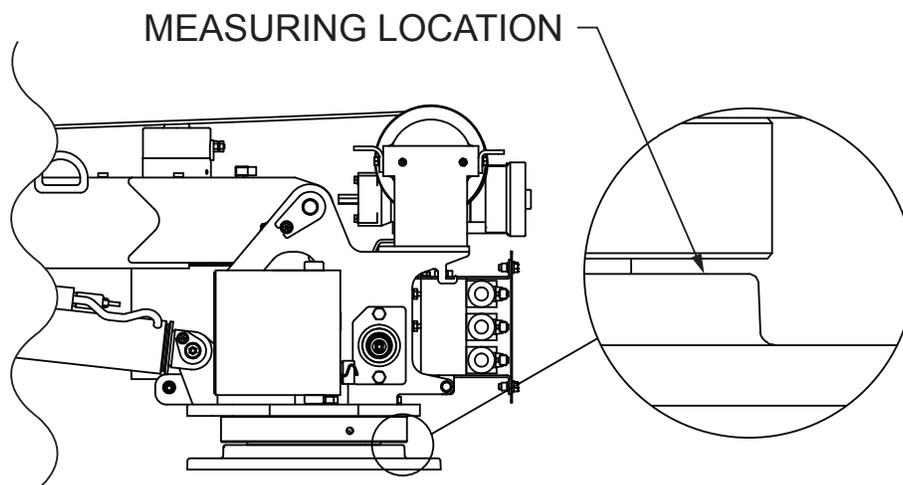


ROTATION BEARING REPLACEMENT KIT P/N: 3208878010

**⚠ WARNING** When replacing rotation bearing, use new hardware which is included in the kit above.

# Single Line Conversion 12

The following pertains to the purchase of the kit for Single Line 3203 Cranes. Instructions and decals are provided for conversion to single line cranes

SINGLE LINE KIT , 3203 P/N: 320988015			
ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988011	3203 EH SINGLE LINE INSTRUCTIONS
2	3	320988010	DECAL, LOAD CHART 3203 PR/PRX/H SINGLE LINE

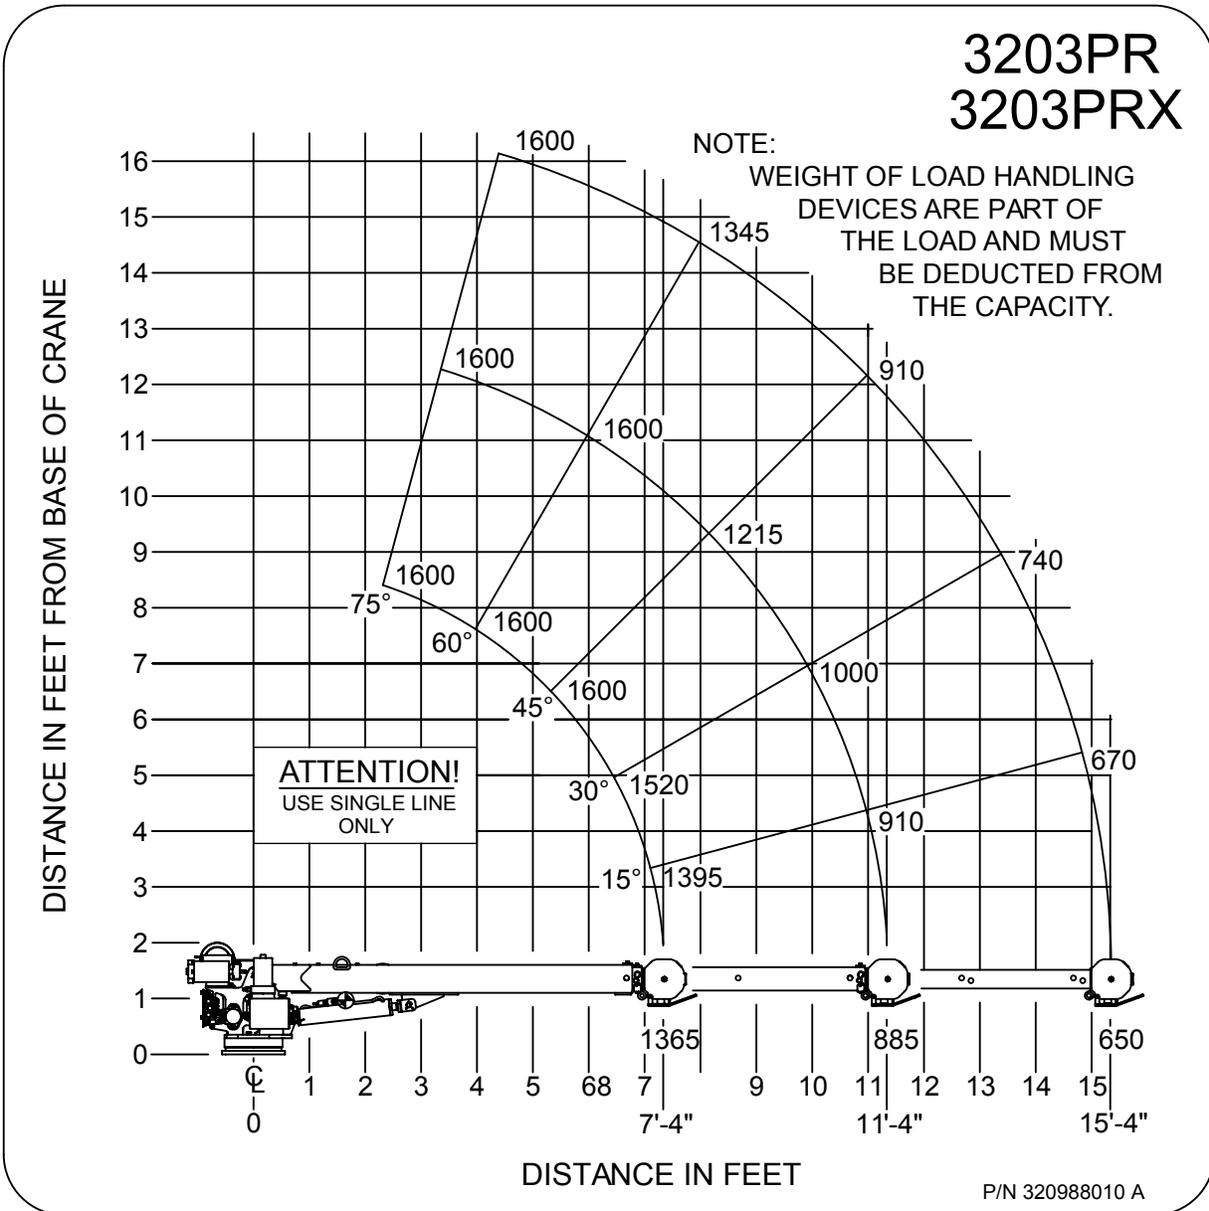


**Note: Max lifting capacity is 1,600 lbs.**


## 12 Single Line Conversion

---


1. Remove hook from traveling block by removing pin.

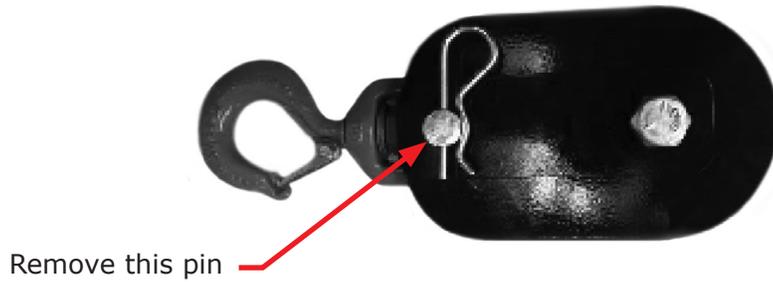

2. Remove traveling block from rope.
3. Disconnect the rope from the crown by removing pin.

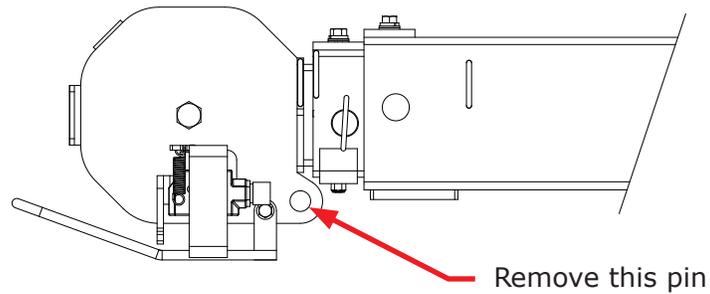

4. Pivot single line bars 180 degrees then attach hook to the bars using the pin removed in step 1.
5. Attach the rope to the traveling block side plates using the pin removed in step 3. Reference pictures below for proper configuration.

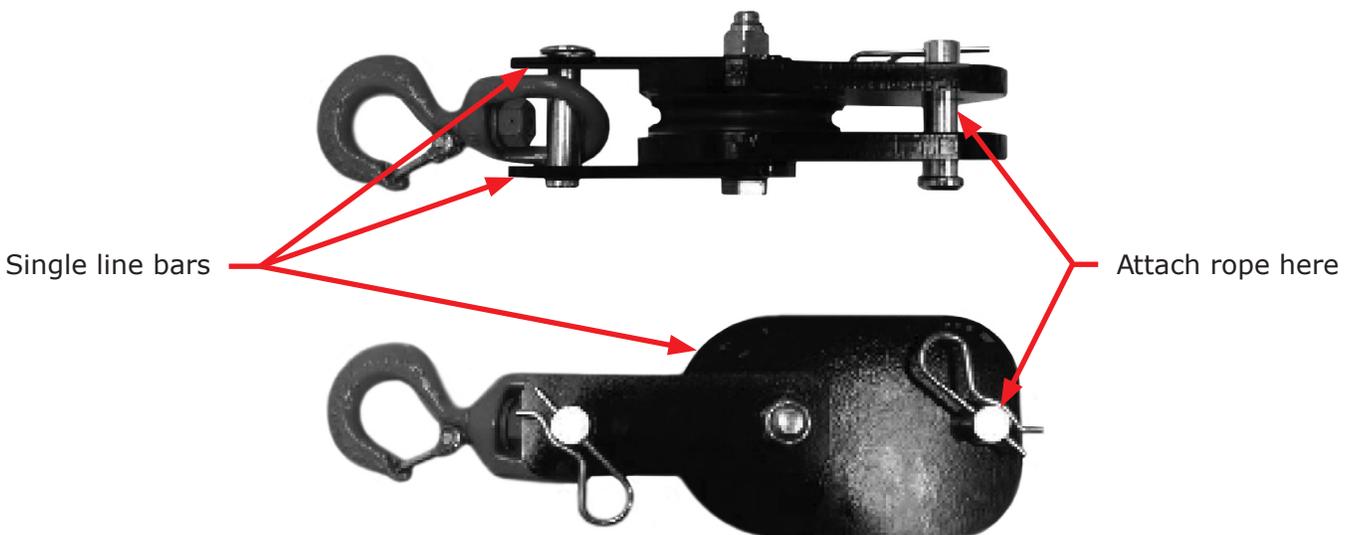

# Crane Mounting and Installation 13

---

For information specific to your crane, such as mounting hole diameter, bolt size and grade, and hydraulic requirements, see General Dimensions.

1. Refer to the Bill of Materials included with your ship kit. Ensure all items listed on the Bill of Materials are included with your crane.



## CAUTION

Failure to use clean hydraulic hoses and components may contaminate the crane and hydraulic system and void warranty.

## NOTICE

Excess flow will cause erratic operation and too little flow will cause poor crane operation.

2. Vehicle shall meet minimum GVWR dependent on crane model:
3. The vehicle must be equipped with an engine speed control and tachometer.
4. Ensure the mounting surface is properly reinforced to withstand the capacity loading of the crane. Ensure the outriggers are used to provide total stability for the truck.
5. Cut the proper sized hole in the mounting location (centered with mounting bolts) for access to hydraulic connections.
6. Ensure the mounting bolts are the proper size and grade. Tighten to the correct specification. See General Dimension.
7. Use a boom support when the crane is not in operation. Connect the traveling block to the hook loop.
8. Electrical hookup:



## WARNING

Failure to correctly plumb and wire crane can cause inadvertent operation and damage to crane and/or personnel.

9. Ensure the Owner's Manual is delivered to the customer.
10. Install voltage switching unit inside compartment safe from weather and contamination.
11. See following page for additional electrical installation.
12. For additional help: Call the Service Department at the Auto Crane Company, 1-800-777-2760, located in Tulsa, OK.

## IMPORTANT!

**FEDERAL LAW (49 CFR PART 571)** REQUIRES THAT THE FINAL STAGE MANUFACTURER OF A VEHICLE CERTIFY THAT THE VEHICLE COMPLIES WITH ALL APPLICABLE FEDERAL REGULATIONS. ANY MODIFICATIONS PERFORMED ON THE VEHICLE PRIOR TO THE FINAL STAGE ARE ALSO CONSIDERED INTERMEDIATE STAGE MANUFACTURING AND MUST BE CERTIFIED AS TO COMPLIANCE. THE INSTALLER OF THIS CRANE AND BODY IS CONSIDERED ONE OF THE MANUFACTURERS OF THE VEHICLE. AS SUCH A MANUFACTURER, THE INSTALLER IS RESPONSIBLE FOR COMPLIANCE WITH ALL APPLICABLE FEDERAL AND STATE REGULATIONS, AND IS REQUIRED TO CERTIFY THAT THE VEHICLE IS IN COMPLIANCE.


IT IS THE FURTHER RESPONSIBILITY OF THE INSTALLER OF THE CRANE TO COMPLY WITH THE OSHA TRUCK CRANE STABILITY REQUIREMENTS AS SPECIFIED BY 29 CFR PART 1910.180 (C) (1).

# 13 Crane Mounting and Installation

## 13.1 STABILITY CHART INSTALLATION


There is a stability chart included in the ship kit. This decal is typically installed on the inside of the door of the crane box. This decal is to alert the user of the available crane capacities around the vehicle.

- 479824002 decal will be installed on an Auto Crane body that was outfitted with an Auto Crane crane and Auto Crane outriggers. Auto Crane has designed the body, crane and outrigger to have stability based on the chart below:

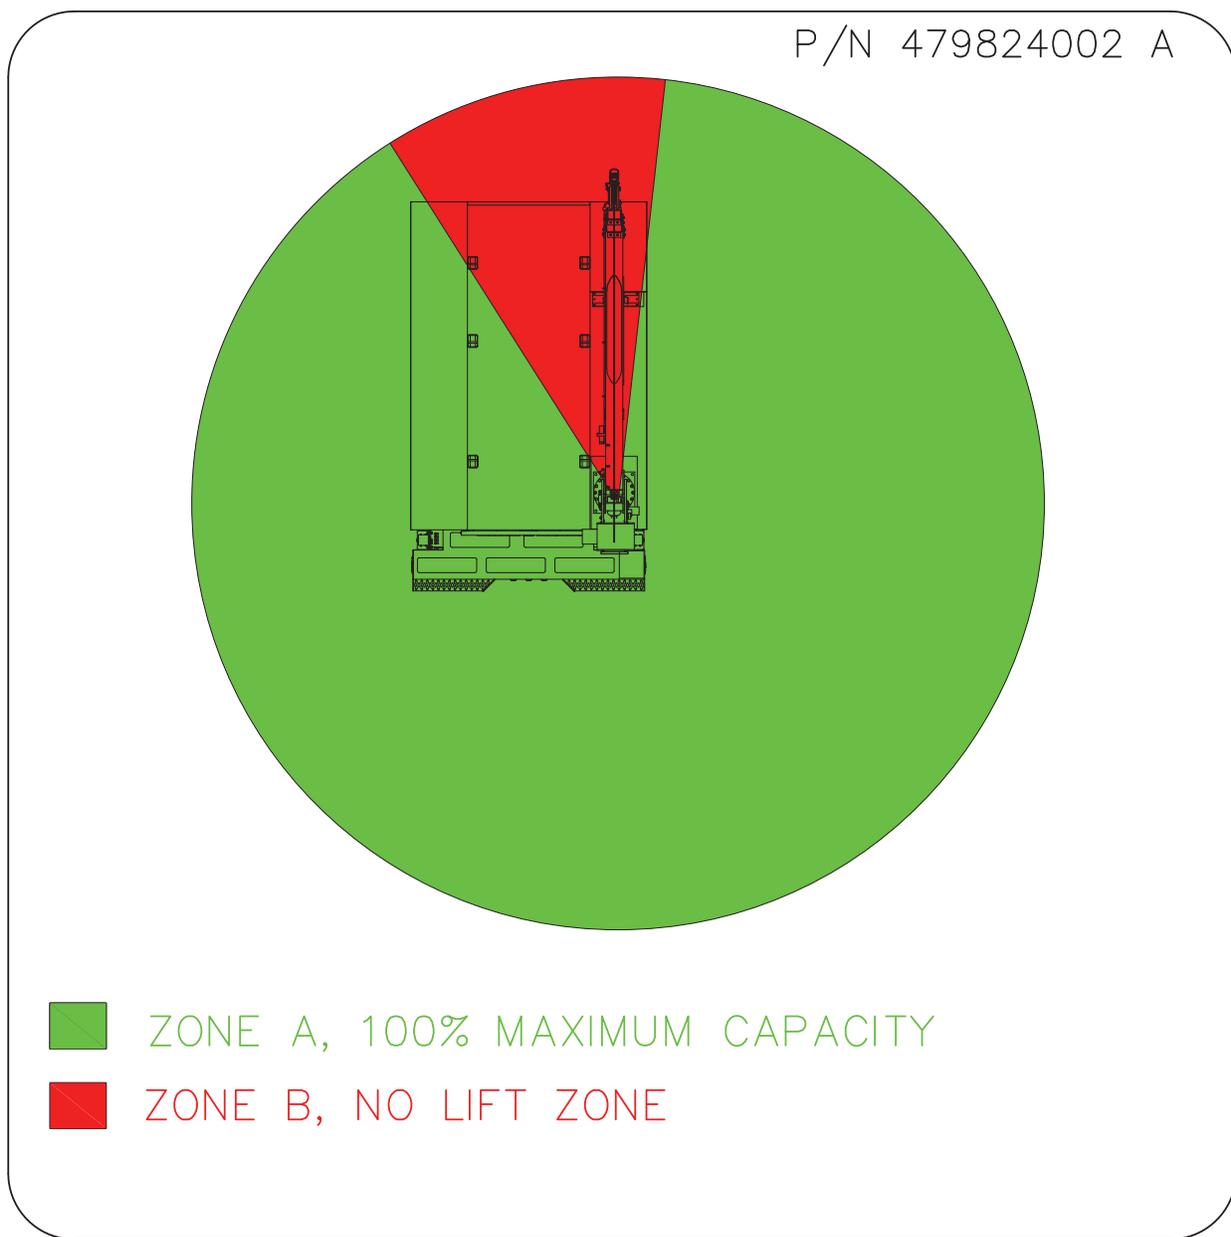

# Crane Mounting and Installation 13

- 479824003 decal will be installed on an Auto Crane body that was not outfitted with an Auto Crane crane and Auto Crane outriggers. Auto Crane has designed the body, crane, and outrigger to have stability based on the chart. The stability chart provides lines to write in the tested stability percentage at each section below:

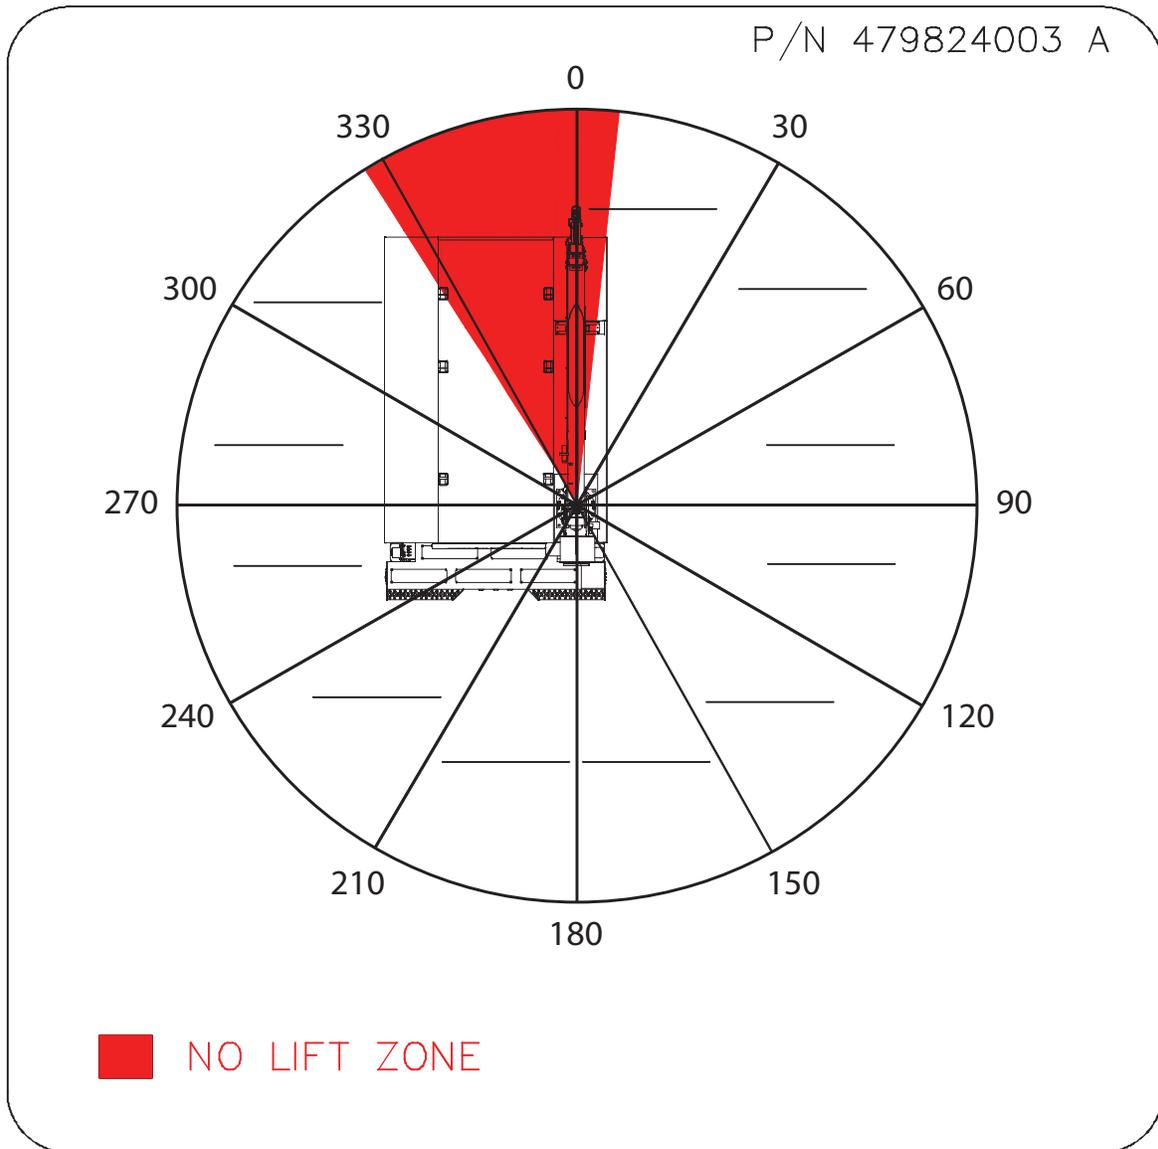

# 13 Crane Mounting and Installation

---

## 13.2 EMERGENCY CRANE OPERATION

If for any reason hydraulic flow or pressure is lost to the crane, use the following procedure to lower the boom until the problem can be fixed.

1. In an emergency situation when it becomes necessary to lower the boom without hydraulic assistance, the counterbalance valve can be used to lower the boom.
2. Ensure the boom will be lowered onto an appropriate support.
3. Loosen the lock nut and slowly turn the Allen head screw clockwise.
4. Count the number of turns and continue to slowly turn the Allen head screw clockwise until the boom just begins to lower.




### CAUTION

Remove any personnel from near the crane as the load is lowering.

5. If the Allen head screw is turned too far, the internal valve will come apart. This condition is not repairable.
6. After the boom is lowered onto the boom support, turn the Allen head screw the same number of turns counterclockwise into the counterbalance valve.
7. After the problem is corrected, readjust the counterbalance valve to ensure proper operation.



# 14 Decal Layout P/N: 320988004

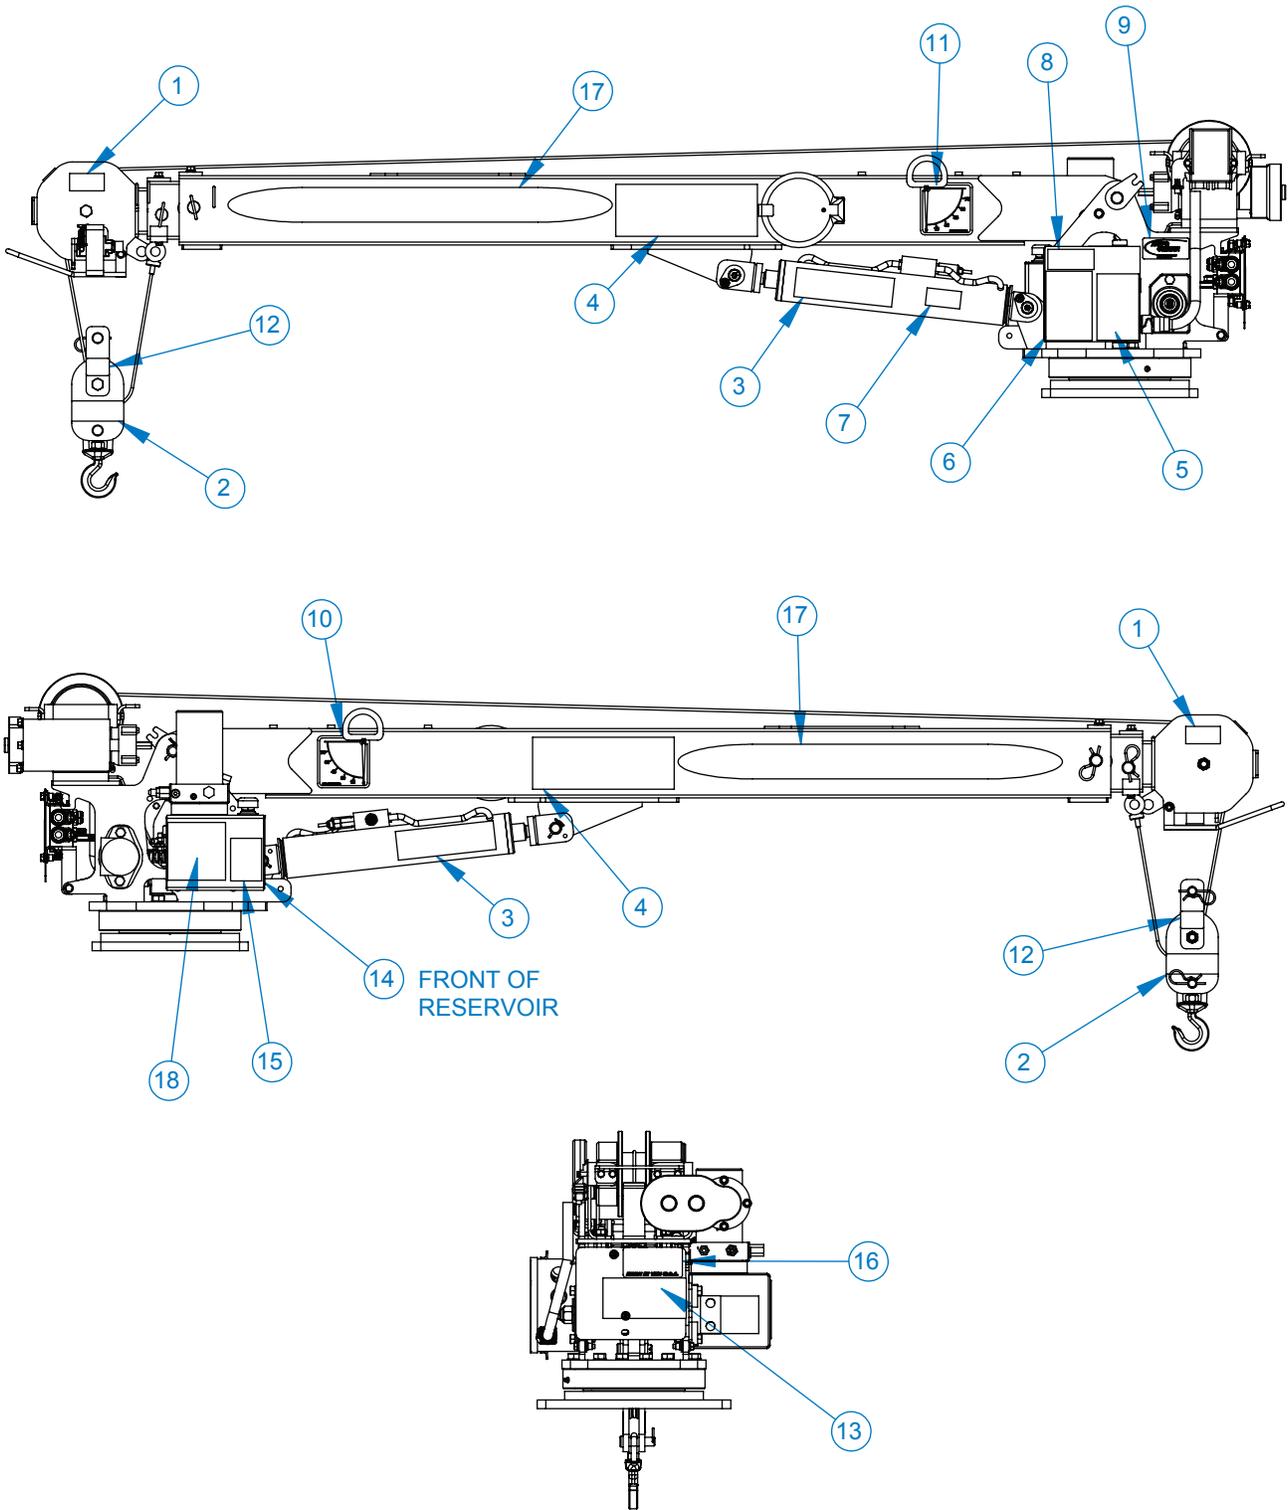


# Decal Layout P/N: 320988004 14

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	2	040517000	DECAL STAY CLEAR OF BOOM
2	2	040518000	DECAL STAY CLEAR OF LOAD
3	2	040519000	DECAL DANGER SCISSOR POINT
4	2	040529000	DECAL DANGER "ELECTROCUTION HAZARD" POWER LINE
5	1	040579000	DECAL OPERATION INSTRUCTIONS
6	1	040580000	DECAL TRAINED OPERATOR
7	1	040587000	DECAL WARNING LOAD SENSOR
8	1	330622000	DECAL SERIAL NO
9	1	040619001	DECAL AUTO CRANE LOGO
10	1	320318000	DECAL ANGLE INDICATOR CS
11	1	320318001	DECAL ANGLE INDICATOR SS
12	2	320433100	DECAL, TRAVELING BLOCK 3203
13	1	360034000	DECAL AUTO CRANE LOGO
14	1	460169000	DECAL WARNING, REMOTE CONTROL
15	1	040632000	DECAL WARNING - OVERLOAD
16	1	040824000	DECAL, AMERICAN FLAG, MADE IN THE U.S.A.
17	2	600047012	DECAL, AUTO CRANE EHC-3 <sup>2</sup> LOGO, FLATTENED OVAL, 33.25 IN LONG
18	1	320988016	LOAD CHART, EHC-3 <sup>2</sup>

# 15 General Assembly P/N: 320990000

## GENERAL ASSEMBLY PRXF HW/FM

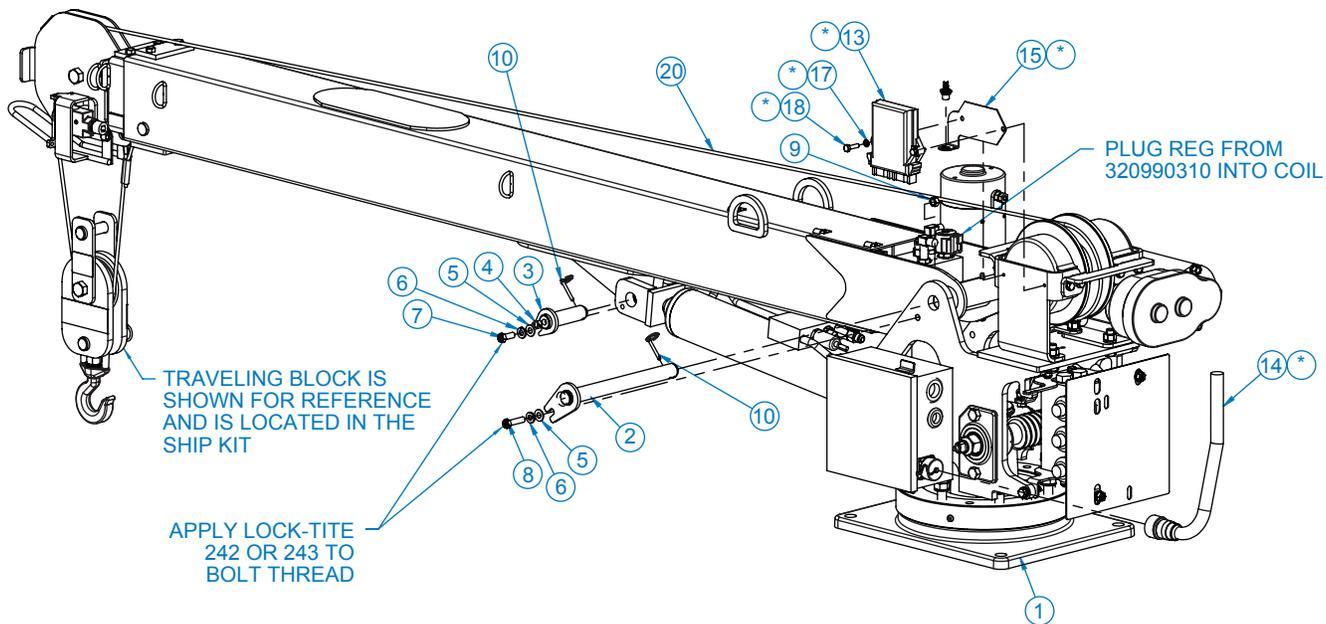


\* THESE COMPONENTS ARE ONLY USED ON FM UNITS

ITEM NO.	-000 FM	-001 HW	PART NO.	DESCRIPTION
1	1	1	320990200	PEDESTAL ASSEMBLY, 3203 PRFX
2	1	1	404220000	PIN WDMT BOOM/PED
3	1	1	320824000	PIN, LIFT CYLINDER
4	1	1	239300000	ZERK, GREASE
5	2	2	021200000	WASHER FL 3/8
6	2	2	021100000	WASHER SP LK 3/8
7	1	1	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
8	1	1	366159000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG GR8
9	1	1	330372000	NUT HX 3/8 NC GR5
10	2	2	360678000	PIN, 3/16 COTTERLESS RING
11	-	1	320988012	SHIP KIT, EC-3 , HW
12	1	1	320988004	DECAL LAYOUT, 3203
13	1	-	460158000	RECEIVER, NON-PROPORTIONAL
14	1	-	680180000	HARNESS, FM, 3203 PR(X)
15	1	-	361102001	MOUNTING BRACKET, OMNEX PENDANT PLUG
16	1	-	320988013	SHIP KIT, EC-3 , FM
17	2	-	020200000	WASHER SP LK 1/4
18	2	-	005604000	SCREW HX HD 1/4-20 UNC X 1 LG
19	1	1	320990100	BOOM ASSY 3203 PRFX
20	1	1	320338002	CABLE ASS'Y, 7/32" x 62FT, THIMBLE END

# General Assembly P/N: 320989002 15


## GENERAL ASSEMBLY PRX HW

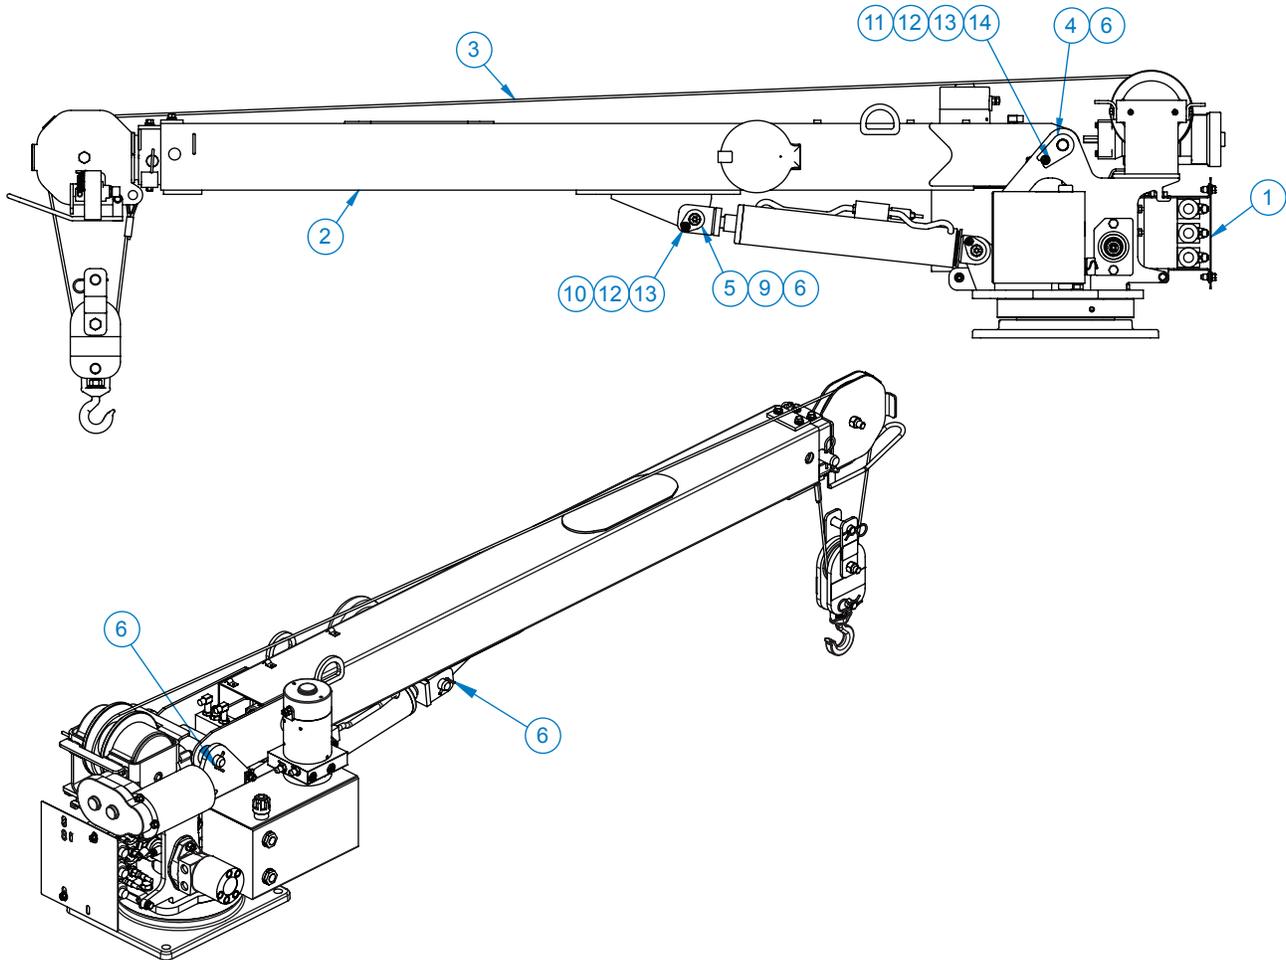

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988203	PEDESTAL ASSEMBLY, 3203 PRX
2	1	320988102	BOOM ASSY 3203 PRX
3	1	320338002	CABLE ASS'Y, 7/32" x 62FT, THIMBLE END
4	1	404220000	PIN WDMT BOOM/PED
5	1	320824000	PIN, LIFT CYLINDER
6	2	360678000	PIN, 3/16 COTTERLESS RING
7	1	320988004	DECAL LAYOUT, 3203
8	1	320988012	SHIP KIT, 3203 PR/PRX, HW
9	1	239300000	ZERK, GREASE
10	1	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
11	1	366159000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG GR8
12	2	021200000	WASHER FL 3/8
13	2	021100000	WASHER SP LK 3/8
14	1	330372000	NUT HX 3/8 NC GR5

# 15 General Assembly P/N: 320989004


## GENERAL ASSEMBLY PRX FM

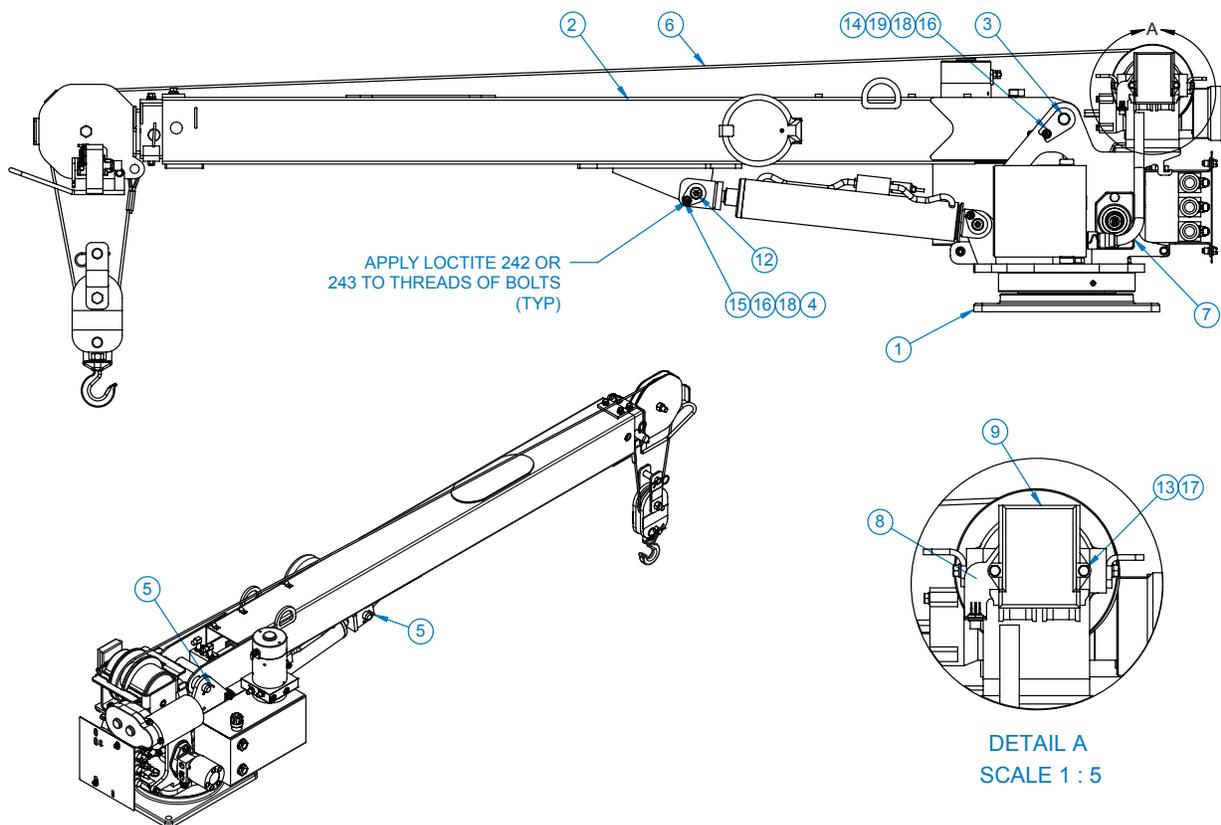

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988203	PEDESTAL ASSEMBLY, 3203 PRX
2	1	320988102	BOOM ASSY 3203 PRX
3	1	404220000	PIN WDMT BOOM/PED
4	1	320824000	PIN, LIFT CYLINDER
5	2	360678000	PIN, 3/16 COTTERLESS RING
6	1	320338002	CABLE ASS'Y, 7/32" x 62FT, THIMBLE END
7	1	680180000	HARNESS, FM, 3203 PR(X)
8	1	361102001	MOUNTING BRACKET, OMNEX PENDANT PLUG
9	1	460158000	RECEIVER, NON-PROPORTIONAL
10	1	320988004	DECAL LAYOUT, 3203
11	1	320988013	SHIP KIT, 3203 PR/PRX, FM
12	1	239300000	ZERK, GREASE
13	2	005604000	SCREW HX HD 1/4-20 UNC X 1 LG
14	1	366159000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG GR8
15	1	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
16	2	021100000	WASHER SP LK 3/8
17	2	020200000	WASHER SP LK 1/4
18	2	021200000	WASHER FL 3/8
19	1	330372000	NUT HX 3/8 NC GR5

# General Assembly P/N: 320989003 15


## GENERAL ASSEMBLY PR HW

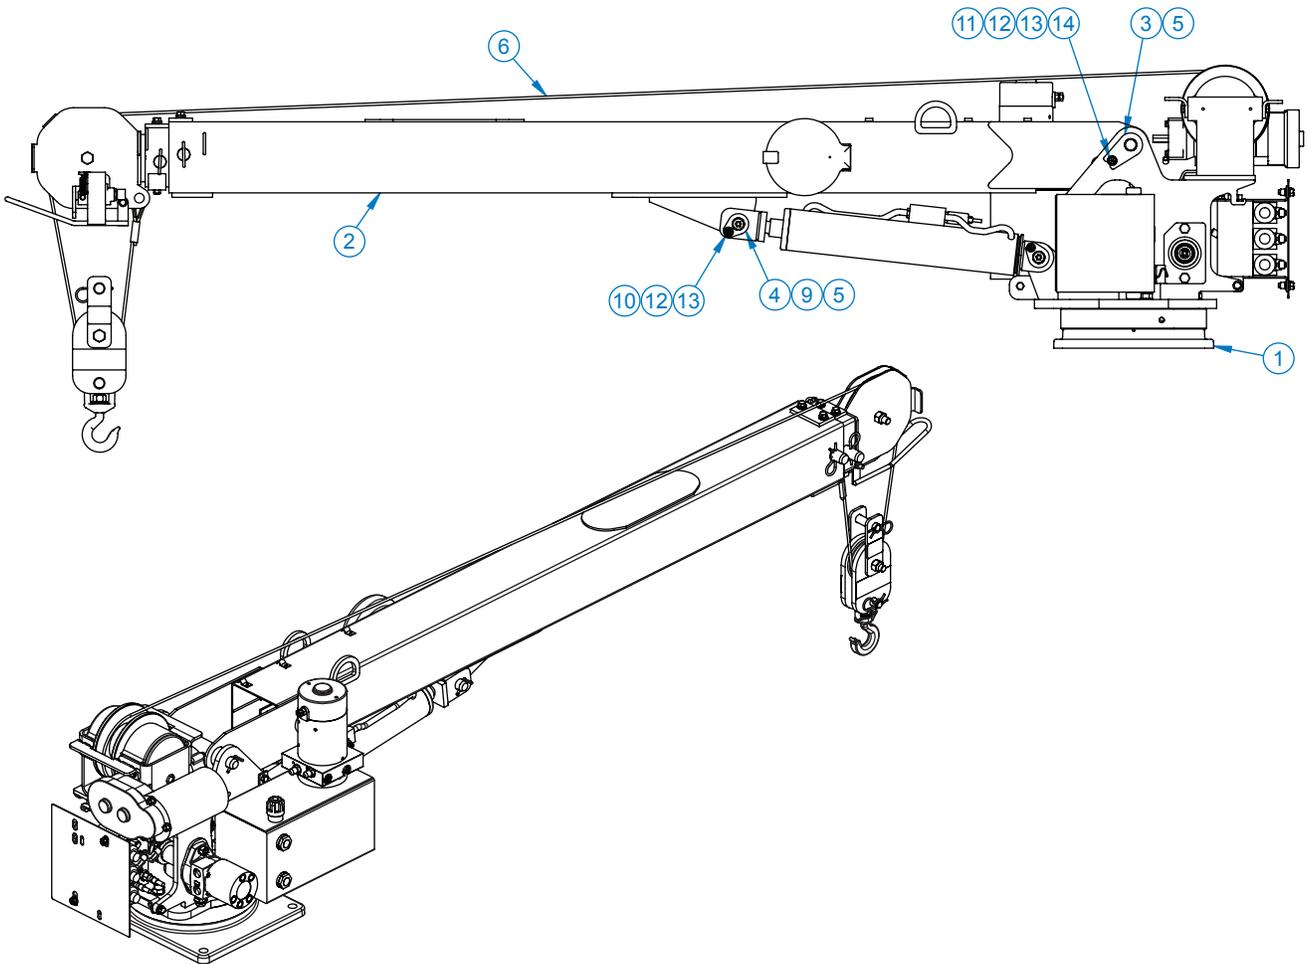


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988204	PEDESTAL ASSEMBLY, 3203 PR
2	1	320988103	BOOM ASSY 3203 PR
3	1	404220000	PIN WDMT BOOM/PED
4	1	320824000	PIN, LIFT CYLINDER
5	2	360678000	PIN, 3/16 COTTERLESS RING
6	1	320338002	CABLE ASS'Y, 7/32" x 62FT, THIMBLE END
7	1	320988012	SHIP KIT, EC-3 , HW
8	1	320988004	DECAL LAYOUT, 3203
9	1	239300000	ZERK, GREASE
10	1	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
11	1	366159000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG GR8
12	2	021100000	WASHER SP LK 3/8
13	2	021200000	WASHER FL 3/8
14	1	330372000	NUT HX 3/8 NC GR5

# 15 General Assembly P/N: 320989005




## GENERAL ASSEMBLY PR FM

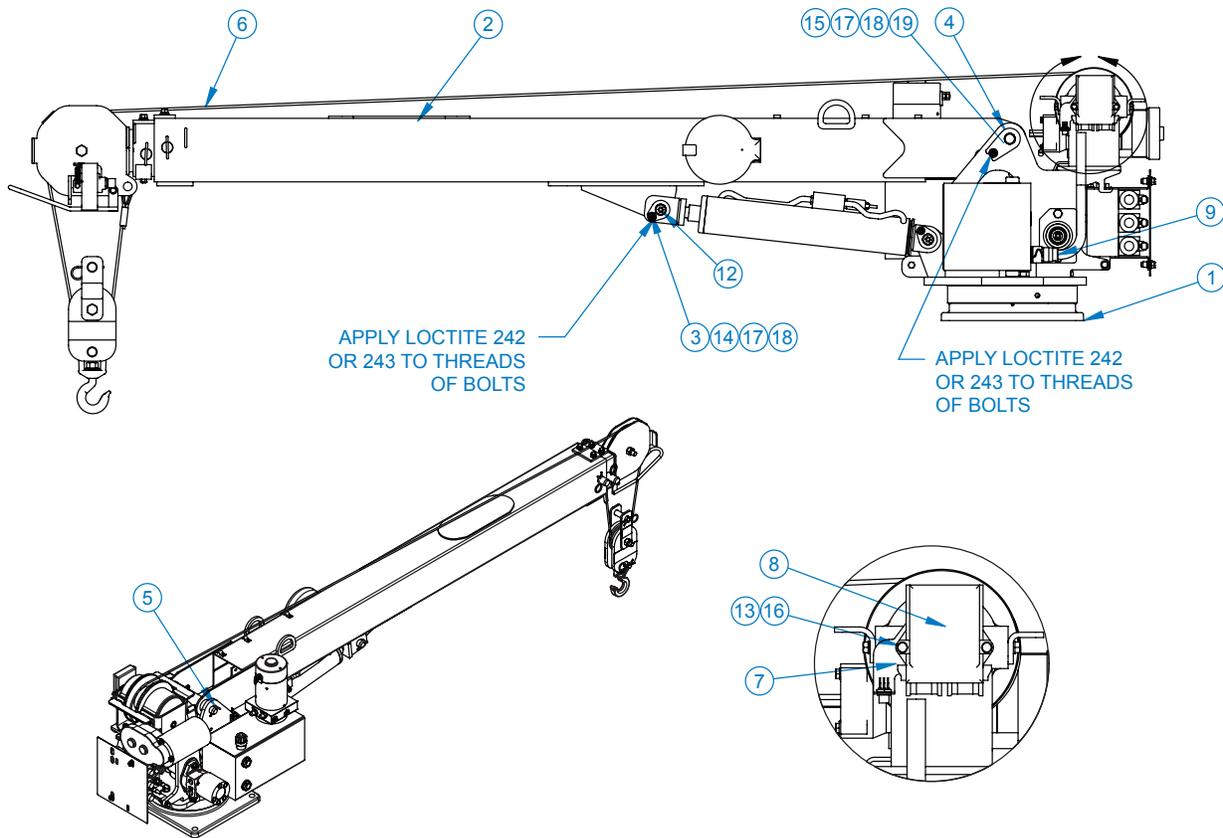

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988204	PEDESTAL ASSEMBLY, 3203 PR
2	1	320988103	BOOM ASSY 3203 PR
3	1	320824000	PIN, LIFT CYLINDER
4	1	404220000	PIN WDMT BOOM/PED
5	2	360678000	PIN, 3/16 COTTERLESS RING
6	1	320338002	CABLE ASS'Y, 7/32" x 62FT, THIMBLE END
7	1	361102001	MOUNTING BRACKET, OMNEX PENDANT PLUG
8	1	460158000	RECEIVER, NON-PROPORTIONAL,
9	1	680180000	HARNESS, FM, 3203 PR(X)
10	1	320988013	SHIP KIT, 3203 PR/PRX, FM
11	1	320988004	DECAL LAYOUT, 3203
12	1	239300000	ZERK, GREASE
13	2	005604000	SCREW HX HD 1/4-20 UNC X 1 LG
14	1	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
15	1	366159000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG GR8
16	2	020200000	WASHER SP LK 1/4
17	2	021200000	WASHER FL 3/8
18	2	021100000	WASHER SP LK 3/8
19	1	330372000	NUT HX 3/8 NC GR5

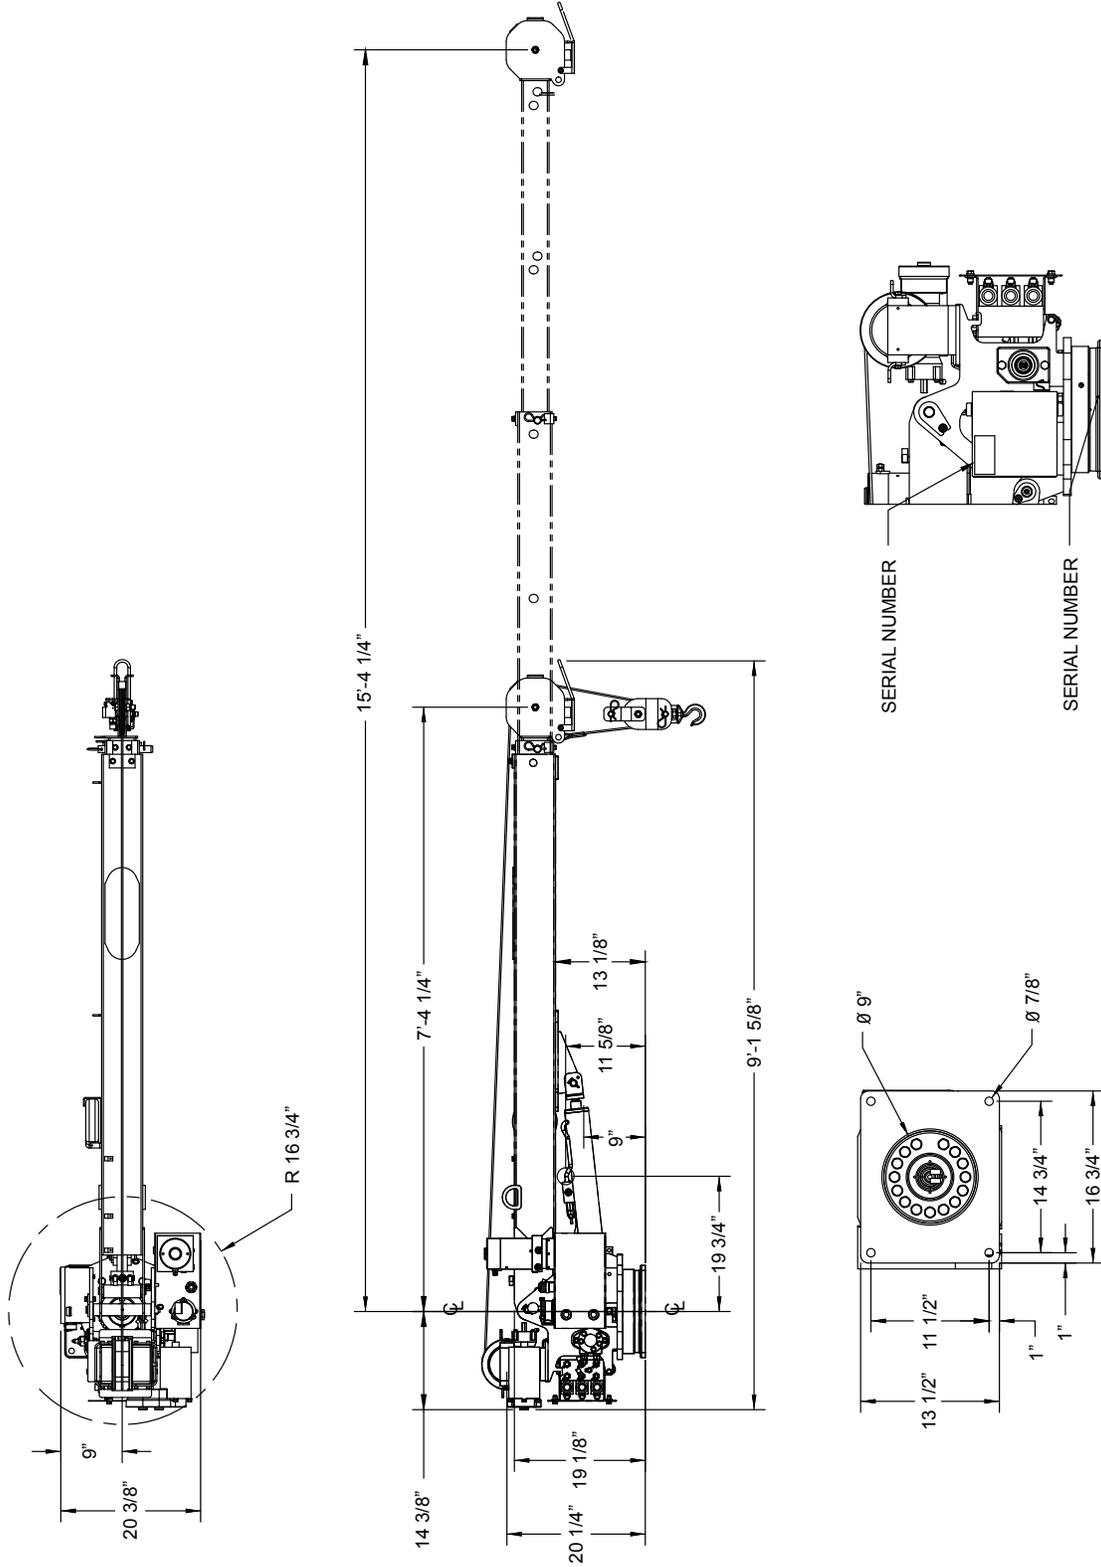


# 17 PRFX Pedestal Assembly P/N: 320990200

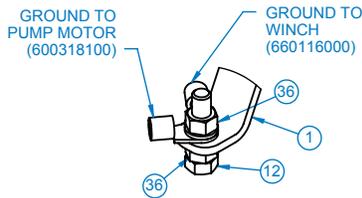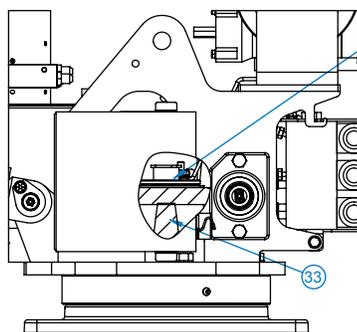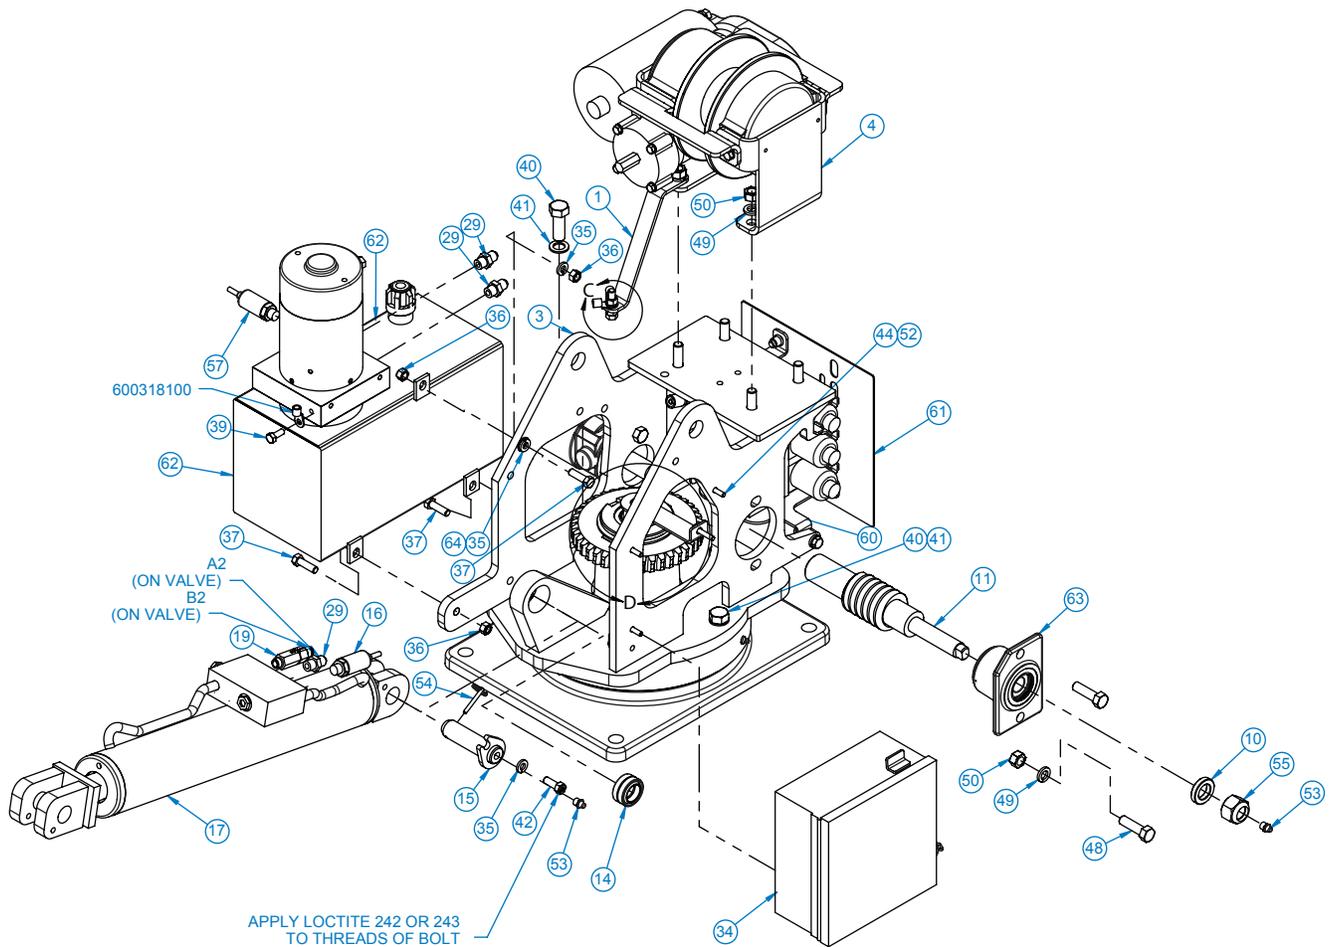

DETAIL C


USE CAULK TO FILL HOLE AROUND POWER CABLE IN TWECO BRACKET

APPLY THIN LAYER OF GREASE TO WORM GEAR

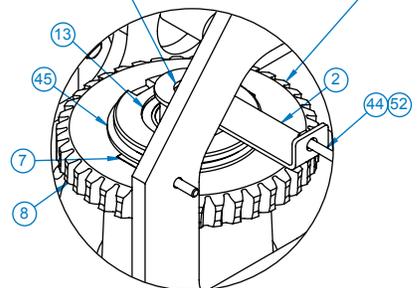

DETAIL D

# PRFX Pedestal Assembly P/N: 320990200 17

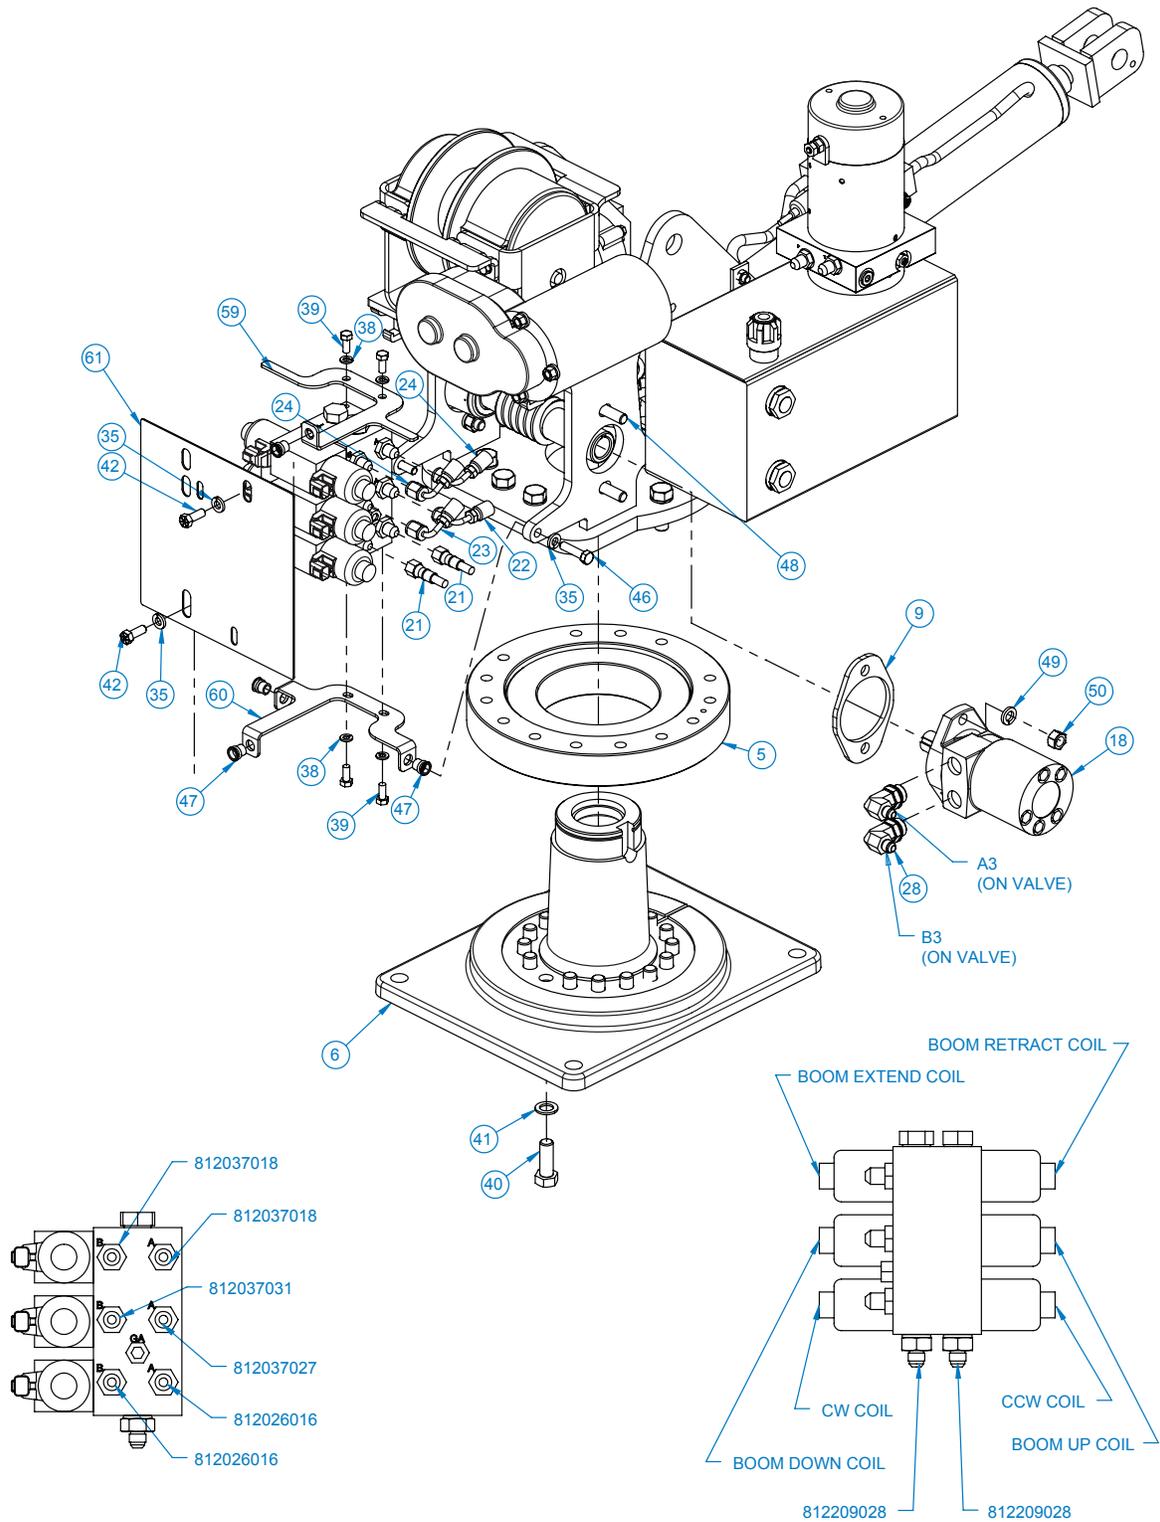


# 17 PRFX Pedestal Assembly P/N: 320990200

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	404187000	SPRING PLATE, GROUND BRUSH, 4004
2	1	320988258	UPPER TWECO BRACKET WLDMT, 3203
3	1	320988220	PEDESTAL WELDMENT, 3203 PR / PRX / H
4	1	110703	WINCH-DCG8R FOR AUTOCRANE #3203 PRX
5	1	320878000	ROTATION BEARING
6	1	320991237	BASE PLATE MACH 3203 LESS GROUND HOLE
7	1	340602000	KEY, 3/4 SQ X 1
8	1	320988253	GEAR, WORM, 4.00 ID, .75 KEY, 3203
9	1	320879000	SPACER ROTATION
10	1	330483000	SPACER
11	1	404015000	WORM SHAFT
12	1	404198000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG, BRONZE
13	1	404213000	SEAL, 2.50 OD X 1.5 ID
14	1	320858000	BEARING, SPHERICAL 1.00 ID
15	1	320824000	PIN, LIFT CYLINDER
16	1	320917000	PRESSURE SWITCH, N.C. 1,900 PSI
17	1	320845000	CYLINDER, LIFT
18	1	404241285	MOTOR, HYD 8.0 CU IN, SAE 2-BOLT 1" SHAFT
19	1	320988261	VALVE, FLOW REGULATOR, IN-LINE
20	2	812209028	HOSE ASSY, -6 HOSE, -6 JICF / -6 JICF 90DEG SHORT, 28" LONG
21	2	812026016	HOSE ASSY -4 HOSE -6 FEMALE JIC
22	1	812037027	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 27" LG
23	1	812037031	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 31" LG
24	2	812037018	HOSE ASSEMBLY, -6 JIC 90/-4 HOSE
25	16	374085000	NYLON HOSE SLEEVE
26	1	480194000	FITTING 6JIC/6JIC ELBOW 90
27	1	320988275	KIT, HYDRAULIC, 3203 PRX/ 4004
28	2	490198000	FITTING 10SAE(M)/6JIC ELBOW 90
29	3	200876000	FITTING 6 SAE/6 JIC STRAIGHT
30	1	680156100	KIT-ELECTRICAL, 3203 PR/PRX
31	1	660116000	CABLE ASSY, 6 AWG, 16 1/4" WIRE LGTH, ø3/8 TMNL, ø5/16 TMNL
32	1	600318100	CABLE ASSY, 6 AWG, 24" WIRE LGTH, ø3/8 TMNL, ø5/16 TMNL
33	1	645000000	TWECO, MALE MODIFIED
34	1	320988300	RELAY PANEL ASSEMBLY, 3203
35	9	021100000	WASHER SP LK 3/8
36	5	330372000	NUT HX 3/8-16 UNC
37	3	008702000	SCREW HX HD 3/8-16 UNC X 1 1/4 LG GR5
38	4	020601000	WASHER SP LK 5/16
39	5	330252000	SCREW HX HD 5/16-18 UNC X 3/4 LG GR5
40	23	012198000	SCREW HX HD 5/8-11 UNC X 1 3/4 LG GR8
41	23	023902000	WASHER FL 5/8 HARDENED
42	3	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
43	1	002900000	SCREW SET 0.25-20 X 0.25
44	4	006200000	SCREW HX HD 1/4-20 UNC X 1 1/4 LG
45	1	404028000	RETAINING RING, SNAP RING

# PRFX Pedestal Assembly P/N: 320990200 17


ITEM NO.	QTY	PART NO.	DESCRIPTION
46	2	009109000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG
47	4	736274000	NUTSERT 3/8-16 UNC X .027-.15 GRIP
48	5	011603000	SCREW HX HD 1/2-13 UNC X 1 3/4 LG
49	8	021500000	WASHER, SP LK 1/2
50	8	017701000	NUT HX 1/2-13 UNC
51	3	010201000	SCREW HX HD 1/2-13 UNC x 1 1/2 LG
52	4	020200000	WASHER SP LK 1/4
53	2	239300000	ZERK, GREASE
54	1	360678000	PIN, 3/16 COTTERLESS RING
55	1	019000000	NUT HX NYLK 7/8-14 UNF
56	1	320990310	HARNESS, WIRE, REGENERATIVE CIRCUIT, 3203 PRFX
57	1	320990201	PRESSURE SWITCH, NC, 1450 PSI, 10 AMP
58	1	320989420	VALVE ASSY, 3 SPOOL, NON-PROP, 12 VOLT
59	1	320989204	UPPER VALVE BRACKET, 3203H
60	1	320989203	LOWER VALVE BRACKET, 3203H
61	1	366688000	COVER, REAR
62	1	320991307	POWER UNIT, NEXSTAR 3203/4004 EH
63	1	330478000	BEARING HOUSING ASSY
64	3	021200000	WASHER FL 3/8

# 17 PR Pedestal Assembly P/N: 320988204


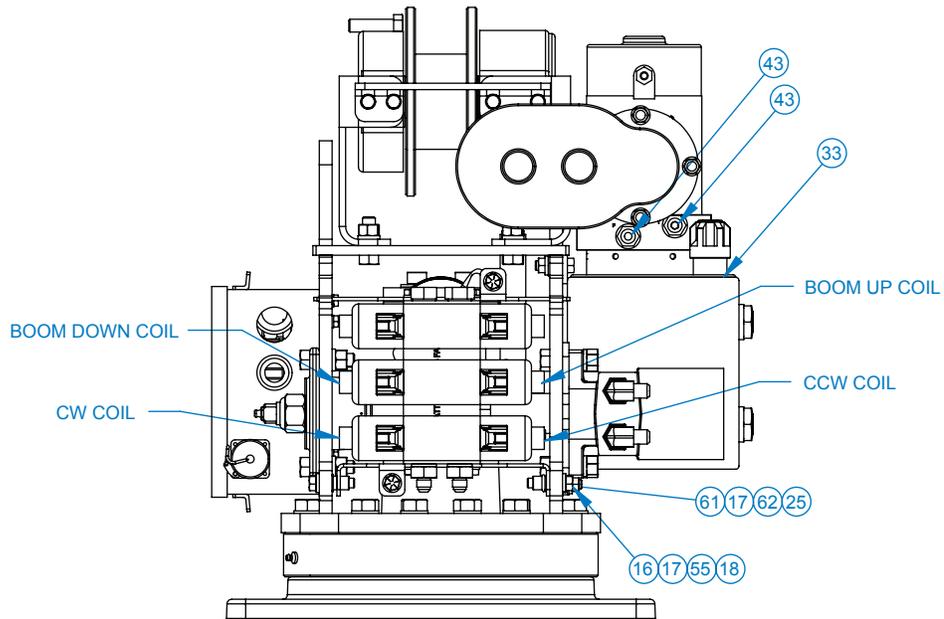


PANEL OMITTED  
TO SHOW VALVE ASSY.



HYDRAULIC KIT:  
320988276

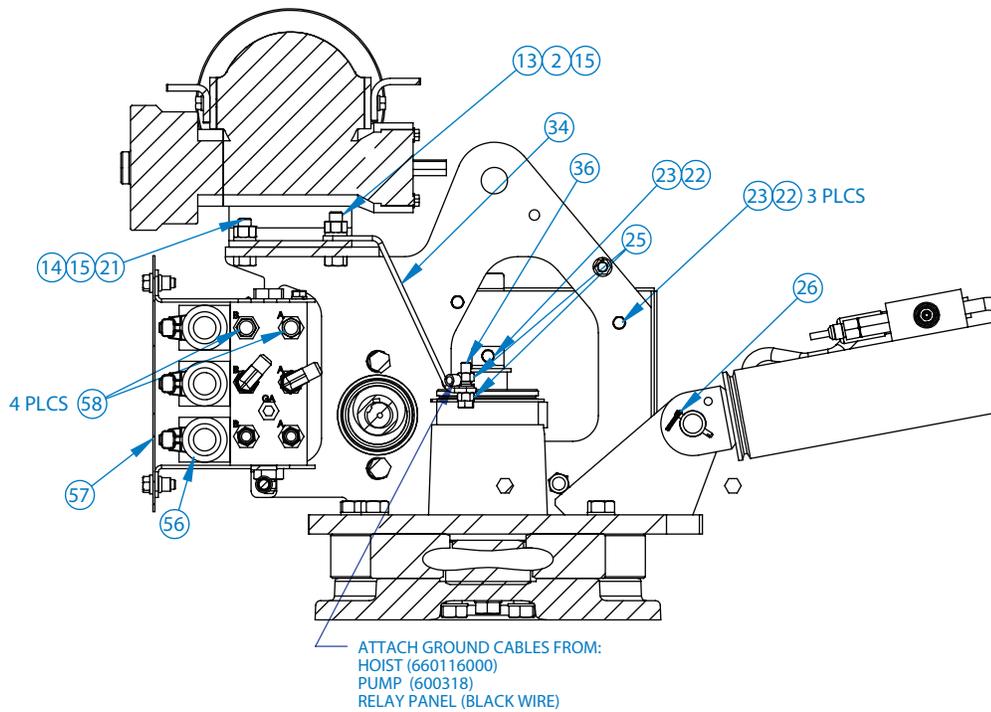

# PR Pedestal Assembly P/N: 320988204 17

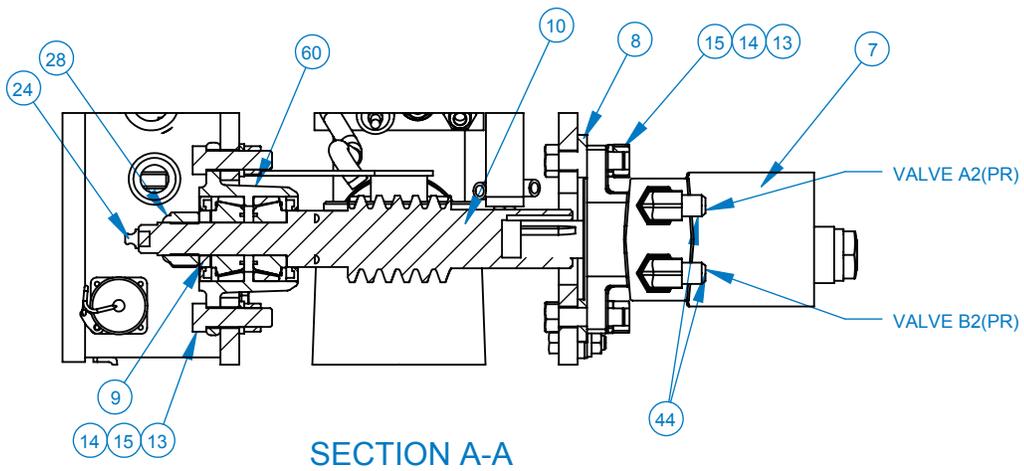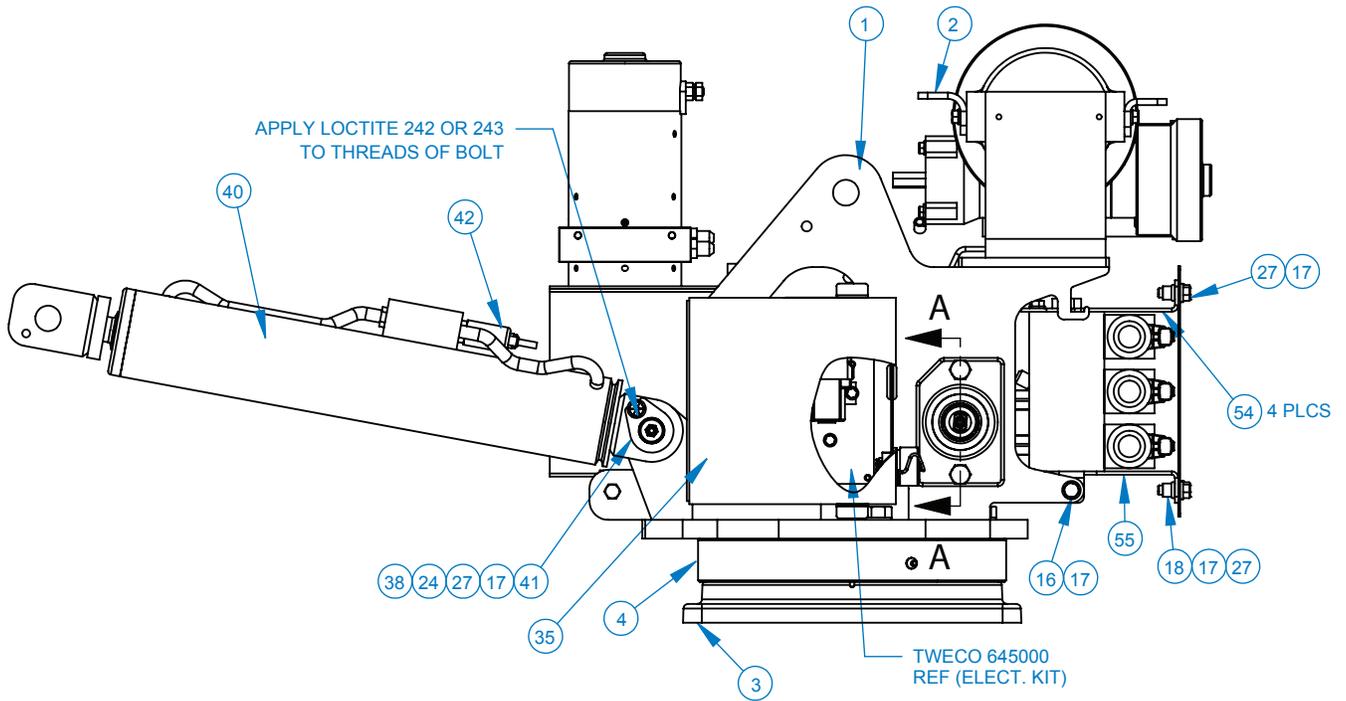

# 17 PR Pedestal Assembly P/N: 320988204

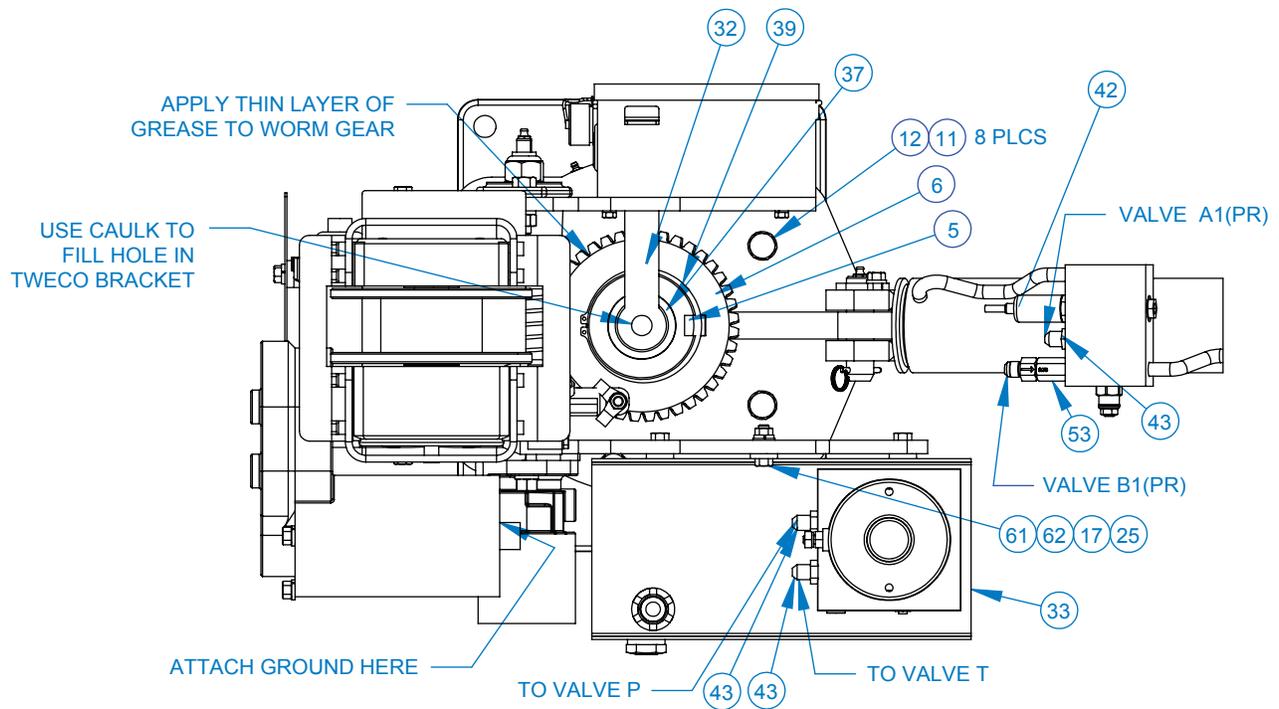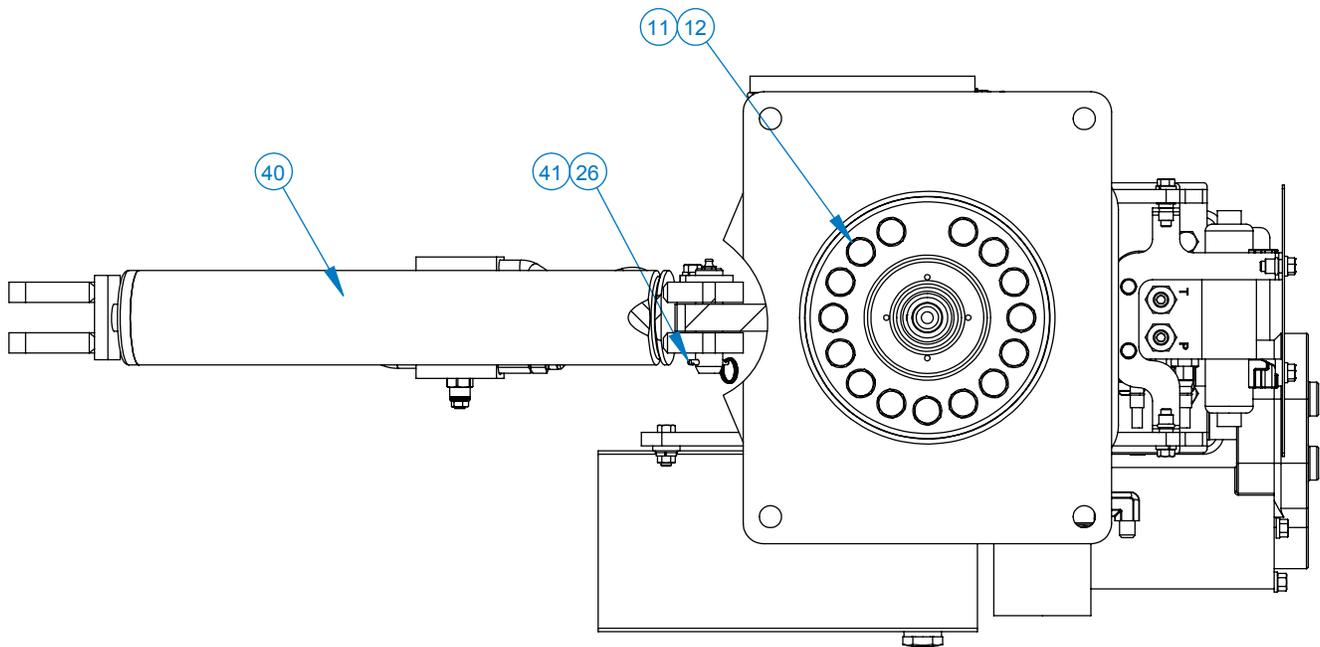

# PR Pedestal Assembly P/N: 320988204 17


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988220	PEDESTAL WELDMENT, 3203 PR / PRX / H
2	1	110703	WINCH-DCG8R FOR AUTO CRANE #3203 PRX
3	1	320991237	BASE PLATE MACH 3203 LESS GROUND HOLE
4	1	320878000	ROTATION BEARING
5	1	340602000	KEY, 3/4 SQ X 1
6	1	320988253	GEAR, WORM, 4.00 ID, .75 KEY, 3203
7	1	404241285	MOTOR, HYD 8.0 CU IN, SAE 2-BOLT 1" SHAFT
8	1	320879000	SPACER ROTATION
9	1	330483000	SPACER
10	1	404015000	WORM SHAFT
11	22	023902000	WASHER FL 5/8 HARDENED
12	22	012198000	SCREW HX HD 5/8-11 UNC X 1 3/4 LG GR8
13	6	011603000	SCREW HX HD 1/2-13 UNC X 1 3/4 LG
14	8	021500000	WASHER, SP LK 1/2
15	9	017701000	NUT HX 1/2-13 UNC
16	2	009109000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG
17	8	021100000	WASHER SP LK 3/8
18	4	736274000	NUTSERT 3/8-16 UNC X .027-.15 GRIP
19	4	330252000	SCREW HX HD 5/16-18 UNC X 3/4 LG GR5
20	4	020601000	WASHER SP LK 5/16
21	3	010201000	SCREW HX HD 1/2-13 UNC x 1 1/2 LG
22	4	006200000	SCREW HX HD 1/4-20 UNC X 1 1/4 LG
23	4	020200000	PIN, 3/16 COTTERLESS RING
24	2	239300000	ZERK, GREASE
25	5	330372000	NUT HX 3/8-16UNC
26	1	360678000	PIN, 3/16 COTTERLESS RING
27	3	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
28	1	019000000	NUT HX NYLK 7/8-14 UNF
29	REF	812026016	HOSE ASSY -4 HOSE -6 FEMALE JIC
30	REF	812209028	HOSE ASSY, -6 HOSE, -6 JICF / -6 JICF 90DEG SHORT, 28" LONG
31	1	202756000	ADAPTER, STRAIGHT 8SAE(M)-6JIC(M)
32	1	320988258	UPPER TWECO BRACKET WLDMT, 3203
33	1	320991307	POWER UNIT, NEXSTAR 3203/4004 EH
34	1	404187000	SPRING PLATE, GROUND BRUSH, 4004
35	REF	320988300	RELAY PANEL ASSEMBLY, 3203
36	1	404198000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG, BRONZE
37	1	404213000	SEAL, 2.50 OD X 1.5 ID
38	1	320858000	BEARING, SPHERICAL 1.00 ID
39	1	404028000	RETAINING RING, SNAP RING
40	1	320845000	CYLINDER, LIFT
41	1	320824000	PIN, LIFT CYLINDER
42	1	320917000	PRESSURE SWITCH, N.C. 1,900 PSI
43	REF	200876000	FITTING 6 SAE/6 JIC STRAIGHT
44	REF	490198000	FITTING 10SAE(M)/6JIC ELBOW 90
45	1	320988276	KIT, HYDRAULIC, 3203 PR
46	1	680156100	KIT-ELECTRICAL, 3203 PR/PRX

## 17 PR Pedestal Assembly P/N: 320988204


---

ITEM NO.	QTY	PART NO.	DESCRIPTION
47	-	-	-
48	-	-	-
49	REF	660116000	CABLE ASSY, 6 AWG, 16 1/4" WIRE LGTH, ø3/8 TMNL, ø5/16 TMNL
50	REF	600318000	CABLE ASSY, 6 AWG, 11" WIRE LGTH, ø3/8 TMNL, ø5/16 TMNL
51	1	002900	SCREW SET 0.25-20 X 0.25
52	REF	645000	TWECO, MALE MODIFIED
53	1	320988261	VALVE, FLOW REGULATOR, IN-LINE
54	1	320989204	UPPER VALVE BRACKET, 3203H
55	1	320989203	LOWER VALVE BRACKET, 3203H
56	1	320989420	VALVE ASSY, 3 SPOOL, NON-PROP, 12 VOLT
57	1	366688000	COVER, REAR
58	REF	360447000	FITTING, CAP, JIC, -6
59	2	480194000	FITTING 6JIC/6JIC ELBOW 90
60	1	330478000	BEARING HOUSING ASSY
61	3	008702000	SCREW HX HD 3/8-16 UNC X 1 1/4 LG GR5
62	3	021200	WASHER FL 3/8



# PRX Pedestal Assembly P/N: 320988203 17

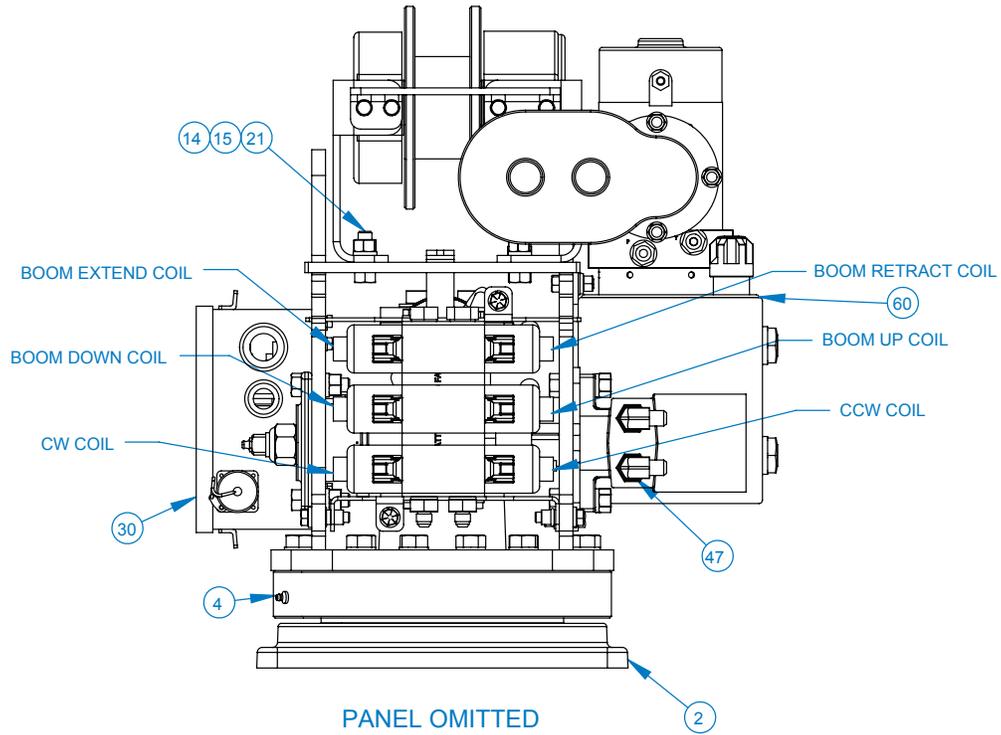



PANEL OMITTED  
TO SHOW VALVE ASSY.  
HYDRAULIC KIT:  
320988275

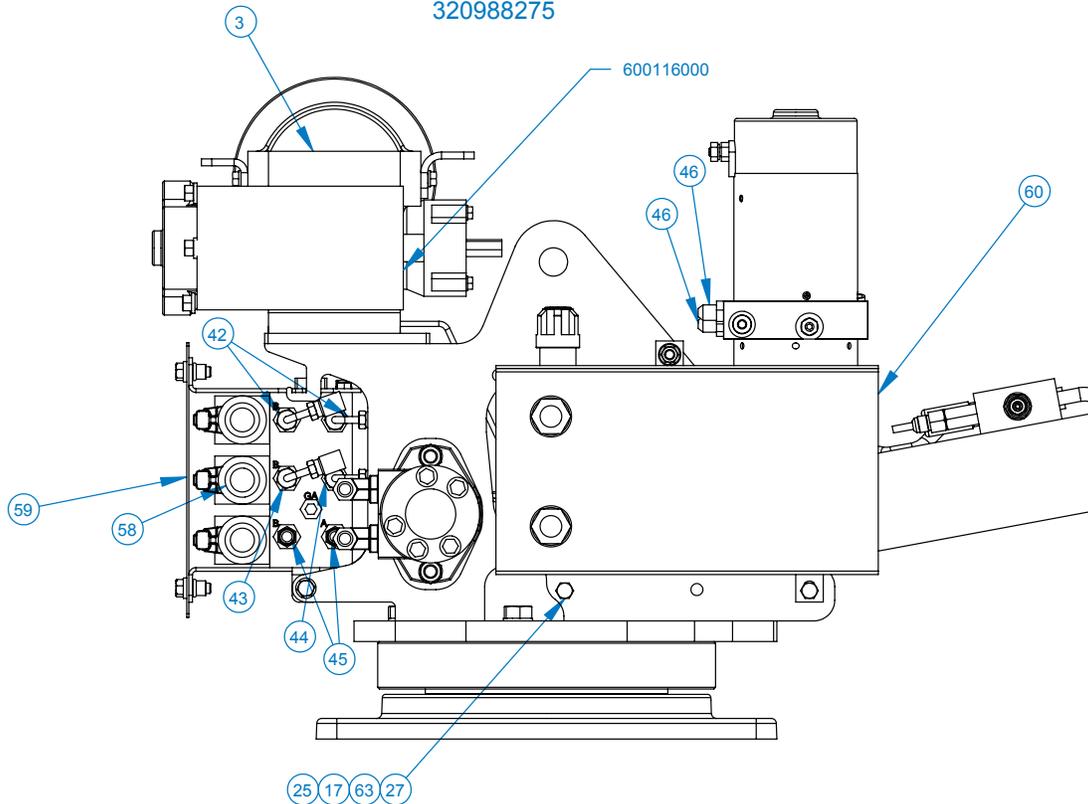

# 17 PRX Pedestal Assembly P/N: 320988203

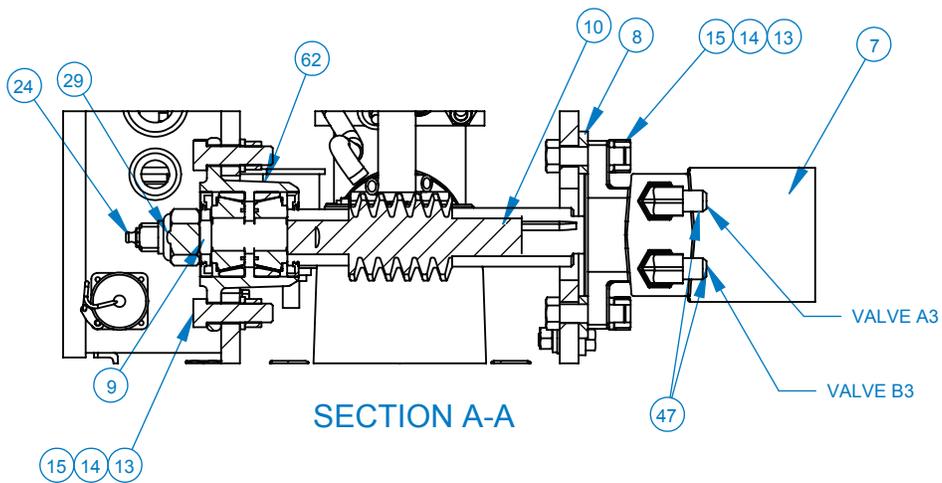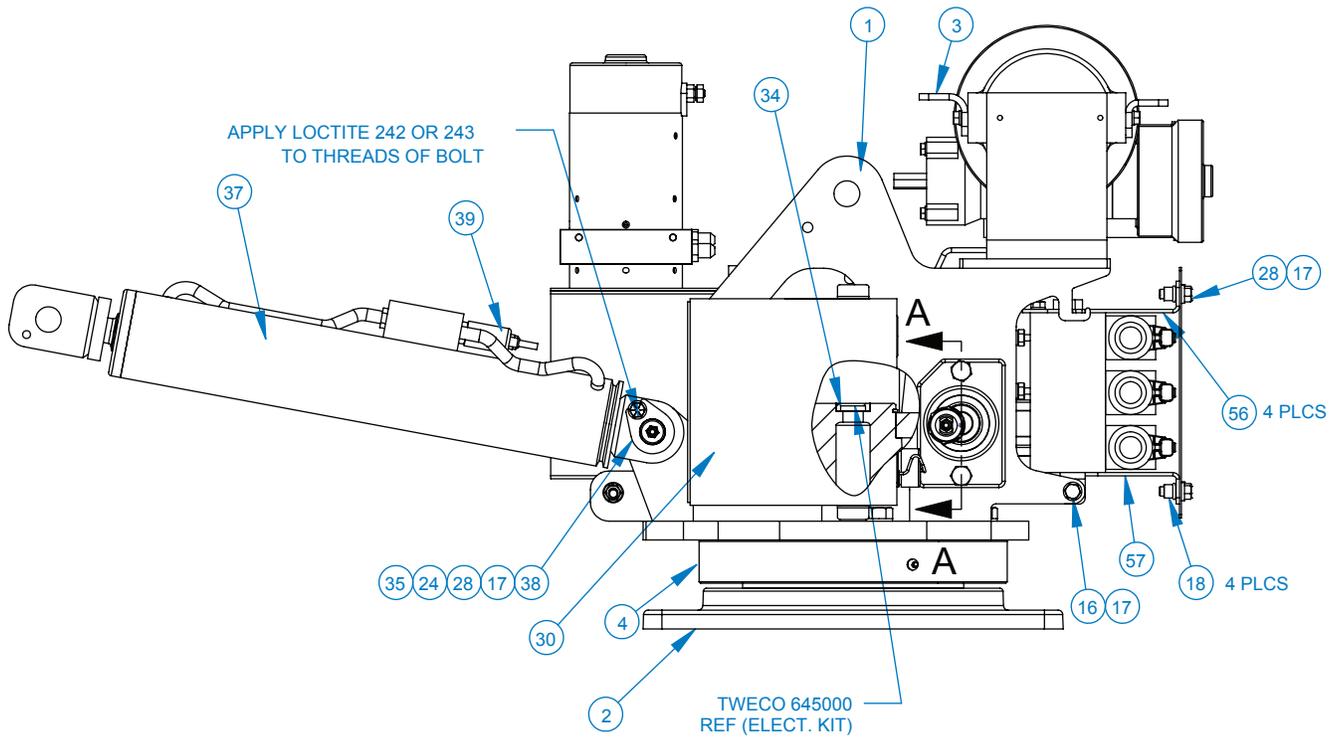

# PRX Pedestal Assembly P/N: 320988203 17

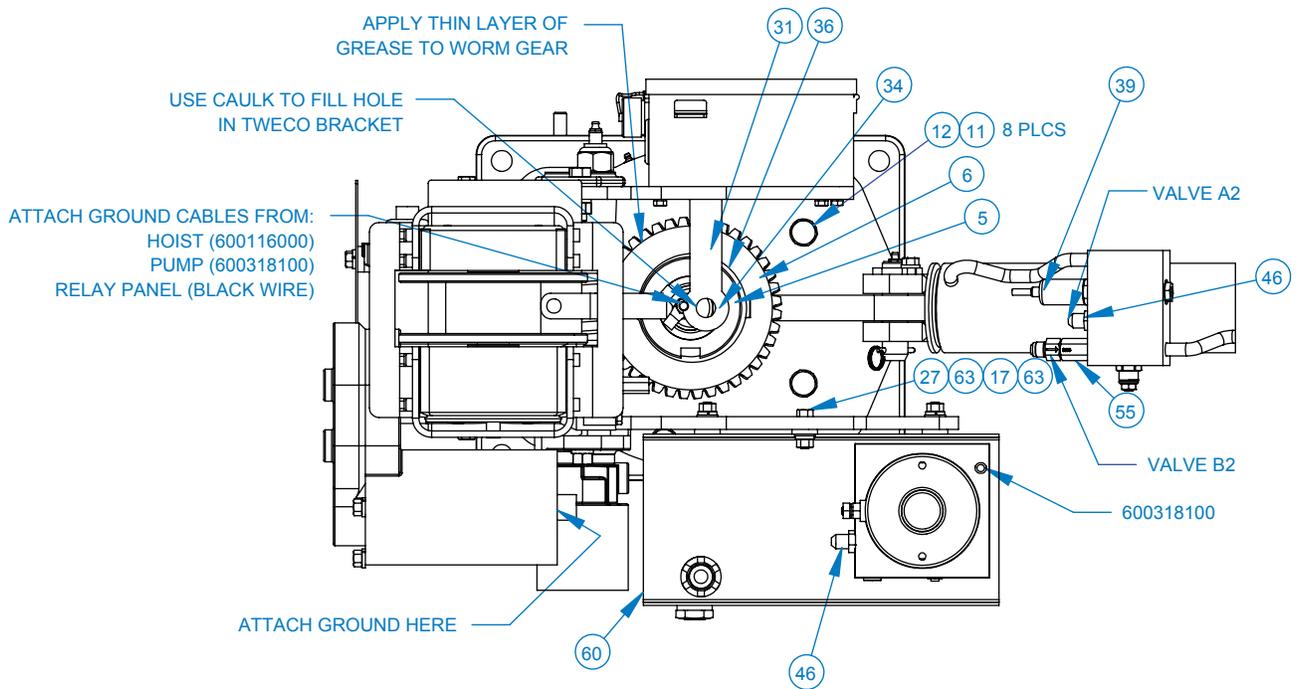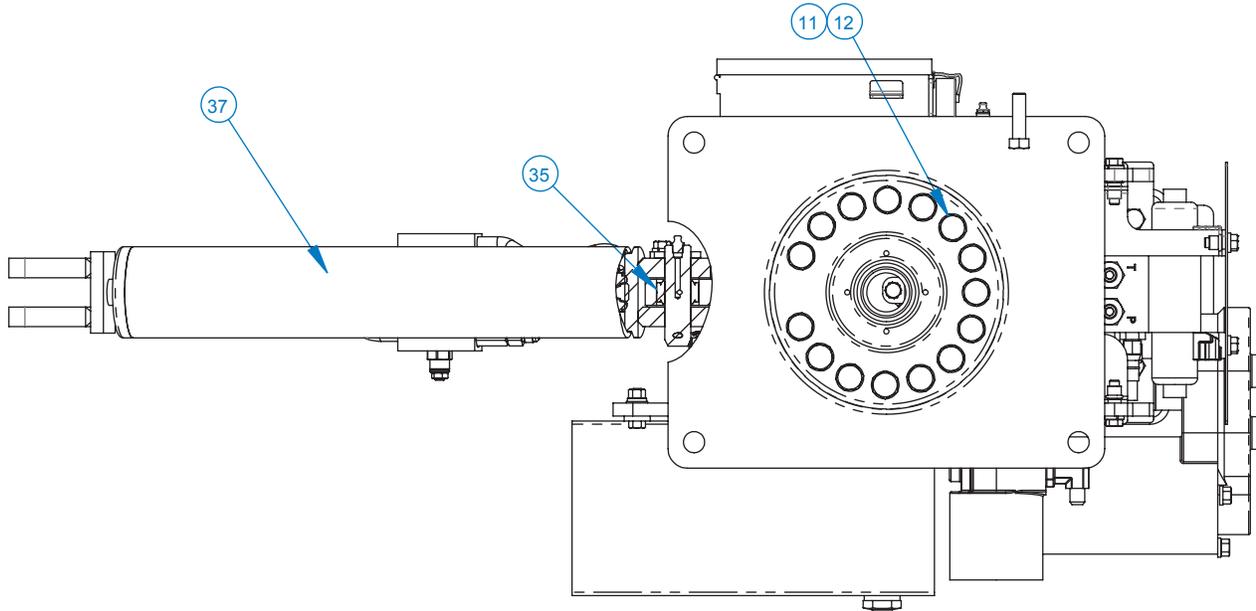


# 17 PRX Pedestal Assembly P/N: 320988203

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988220	PEDESTAL WELDMENT, 3203 PR / PRX / H
2	1	320991237	BASE PLATE MACH 3203 LESS GROUND HOLE
3	1	110703	WINCH-DCG8R FOR AUTOCRANE #3203 PRX
4	1	320878000	ROTATION BEARING
5	1	340602000	KEY, 3/4 SQ X 1
6	1	320988253	GEAR, WORM, 4.00 ID, .75 KEY, 3203
7	1	404241285	MOTOR, HYD 8.0 CU IN, SAE 2-BOLT 1" SHAFT
8	1	320879000	SPACER ROTATION
9	1	330483000	SPACER
10	1	404015000	WORM SHAFT
11	22	023902000	WASHER FL 5/8 HARDENED
12	22	012198000	SCREW HX HD 5/8-11 UNC X 1 3/4 LG GR8
13	6	011603000	SCREW HX HD 1/2-13 UNC X 1 3/4 LG
14	8	021500000	WASHER, SP LK 1/2
15	8	017701000	NUT HX 1/2-13 UNC
16	2	009109000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG
17	8	021100000	WASHER SP LK 3/8
18	4	736274000	NUTSERT 3/8-16 UNC X .027-.15 GRIP
19	5	330252000	SCREW HX HD 5/16-18 UNC X 3/4 LG GR5
20	4	020601000	WASHER SP LK 5/16
21	3	010201000	SCREW HX HD 1/2-13 UNC x 1 1/2 LG
22	4	006200000	SCREW HX HD 1/4-20 UNC X 1 1/4 LG
23	4	020200000	WASHER SP LK 1/4
24	2	239300000	ZERK, GREASE
25	5	330372000	NUT HX 3/8-16 UNC
26	1	360678000	PIN, 3/16 COTTERLESS RING
27	3	008702000	SCREW HX HD 3/8-16 UNC X 1 1/4 LG GR5
28	3	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
29	1	019000000	NUT HX NYLK 7/8-14 UNF
30	REF	320988300	RELAY PANEL ASSEMBLY, 3203
31	1	320988258	UPPER TWECO BRACKET WLDMT, 3203
32	1	404187000	SPRING PLATE, GROUND BRUSH, 4004
33	1	404198000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG, BRONZE
34	1	404213000	SEAL, 2.50 OD X 1.5 ID
35	1	320858000	BEARING, SPHERICAL 1.00 ID
36	1	404028000	RETAINING RING, SNAP RING
37	1	320845000	CYLINDER, LIFT
38	1	320824000	PIN, LIFT CYLINDER
39	1	320917000	PRESSURE SWITCH, N.C. 1,900 PSI
40	REF	374085000	NYLON HOSE SLEEVE
41	REF	812209028	HOSE ASSY, -6 HOSE, -6 JICF / -6 JICF 90DEG HOSE ASSY, -6 HOSE, -6 JICF / -6 JICF 90DEG
42	REF	812037018	HOSE ASSEMBLY, -6 JIC 90/-4 HOSE
43	REF	812037031	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 31" LG
44	REF	812037027	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 27" LG
45	REF	812026016	HOSE ASSY -4 HOSE -6 FEMALE JIC
46	REF	200876000	FITTING 6 SAE/6 JIC STRAIGHT

# PRX Pedestal Assembly P/N: 320988203 17

ITEM NO.	QTY	PART NO.	DESCRIPTION
47	REF	490198000	FITTING 10SAE(M)/6JIC ELBOW 90
48	1	320988275	KIT, HYDRAULIC, 3203 PRX/ 4004
49	-	-	-
50	-	-	-
51	REF	660116000	CABLE ASSY, 6 AWG, 16 1/4" WIRE LGTH, ø3/8 TMNL, ø5/16 TMNL
52	REF	600318100	CABLE ASSY, 6 AWG, 24" WIRE LGTH, ø3/8 TMNL, ø5/16 TMNL
53	1	002900000	SCREW SET 0.25-20 X 0.25
54	REF	645000000	TWECO, MALE MODIFIED
55	1	320988261	VALVE, FLOW REGULATOR, IN-LINE
56	1	320989204	UPPER VALVE BRACKET, 3203H
57	1	320989203	LOWER VALVE BRACKET, 3203H
58	1	320989420	VALVE ASSY, 3 SPOOL, NON-PROP, 12 VOLT
59	1	366688000	COVER, REAR
60	1	320991307	POWER UNIT, NEXSTAR 3203/4004 EH
61	1	680156100	KIT-ELECTRICAL, 3203 PR/PRX
62	1	330478000	BEARING HOUSING ASSY
63	3	021200000	WASHER FL 3/8


# 18 PR Boom Assembly P/N: 320988103

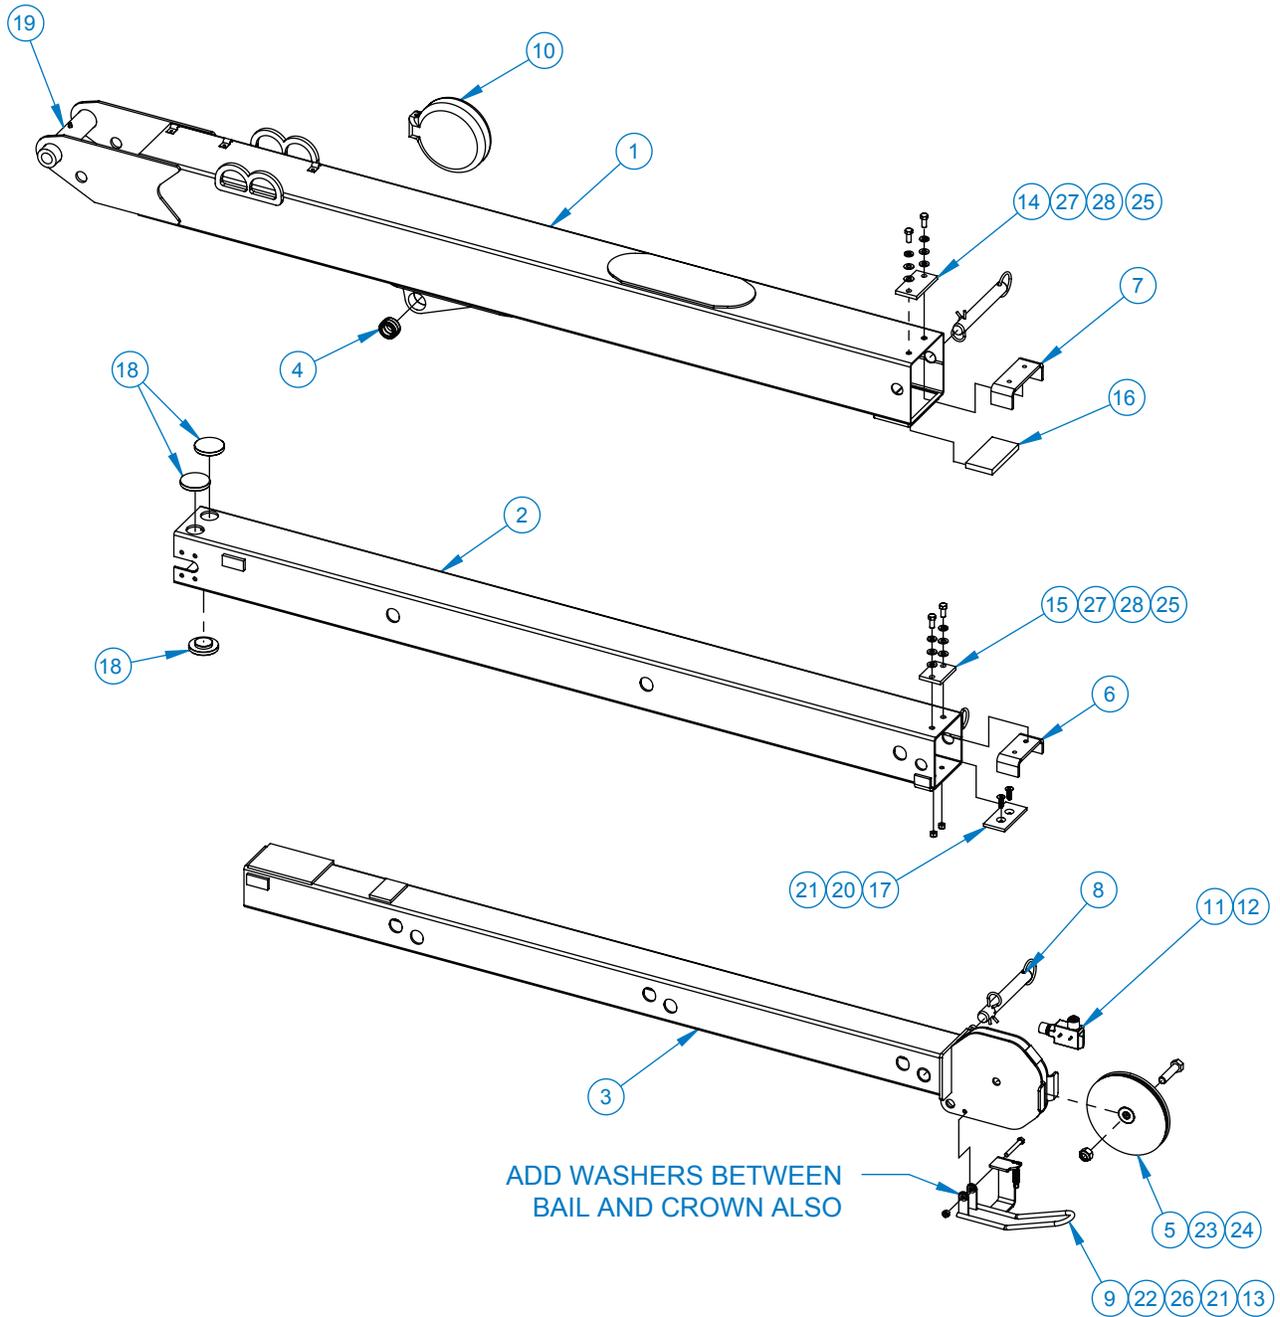

# Boom Assembly P/N: 320988103 18

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988110	LOWER BOOM WELDMENT, 3203 PR/PRX
2	1	320988165	MID BOOM WMT, 3203
3	1	320988160	UPPER BOOM WLDMT 3203
4	1	320858000	BEARING, SPHERICAL 1.00 ID
5	1	320883000	SHEAVE ASSEMBLY
6	1	366112000	STOP UPPER BOOM
7	1	366183000	STOP CENTER BOOM
8	2	366190000	PIN ASSY W/LANYARD
9	1	320871000	BAIL WELDMENT
10	1	404205000	CORD REEL ASSY
11	1	646900000	SWITCH, ANTI-TWO BLOCK
12	1	642918000	CORD CONNECTOR
13	1	366678000	SPRING, EXTENSION
14	1	366201000	WEAR PAD 3 .75 X 2.00 X .313
15	1	366202000	PAD, BOOM TOP
16	1	320988155	BOOM PAD 4.75 X 2.50 X .50, 3203
17	1	320990104	WEAR PAD, 2 X 4 X .25, W/ CSINK HOLES
18	3	407203000	PAD, BOOM, 2.50 O.D. x .563 THK
19	1	239000000	ZERK DRIVE GR
20	2	320990105	SCREW, FLAT HEAD, 5/16-18 UNC X 1, ZP
21	3	016801000	NUT HX NYLK 5/16-18 UNC CP
22	1	811029000	SCREW HX HD 5/16-18 UNC X 2 1/2 LG
23	1	366393000	SCREW HX HD 5/8-11 UNC X 2 1/2 LG GR8
24	1	018200000	NUT HX NY LK 5/8-11 UNC
25	4	738733100	SCREW HX HD 3/8-24 UNF X 7/8 LG
26	4	020901000	WASHER FL 5/16
27	8	021200000	WASHER FL 3/8
28	4	021100000	WASHER SP LK 3/8


# 18 PRX Boom Assembly P/N: 320988102

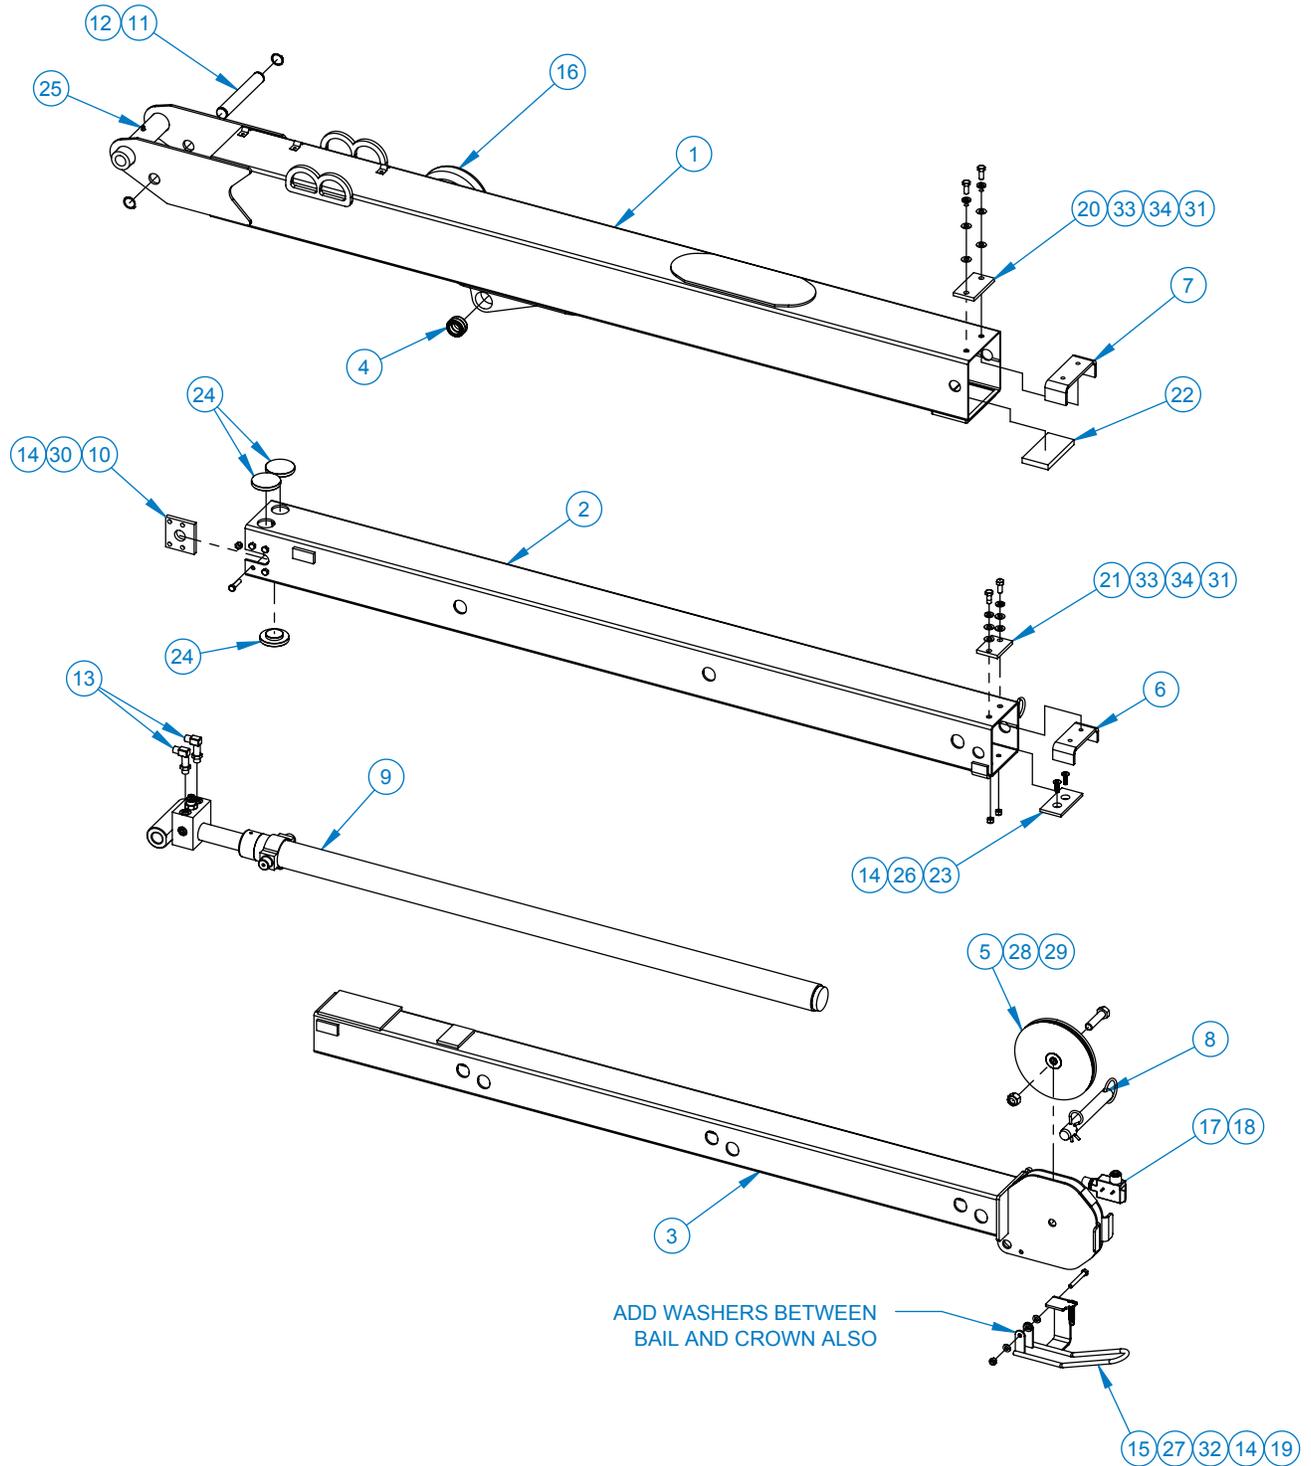

# PRX Boom Assembly P/N: 320988102 18

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988110	LOWER BOOM WELDMENT, 3203 PR/PRX
2	1	320988165	MID BOOM WMT, 3203
3	1	320988160	UPPER BOOM WLDMT 3203
4	1	320858000	BEARING, SPHERICAL 1.00 ID
5	1	320883000	SHEAVE ASSEMBLY
6	1	366112000	STOP UPPER BOOM
7	1	366183000	STOP CENTER BOOM
8	1	366190000	PIN ASSY W/LANYARD
9	1	320988142	EXTENSION CYLINDER, 3203
10	2	320888001	RETAINER, EXTENSION CYLINDER
11	1	320988115	PIN 1 DIA X 6.905 LG, 3203
12	2	360122000	RING RETAINING 5100-98
13	2	330645000	FITTING 90 6-SAE/6-JIC LONG
14	11	016801000	NUT HX NYLK 5/16-18 UNC CP
15	1	320871000	BAIL WELDMENT
16	1	404205000	CORD REEL ASSY
17	1	646900000	SWITCH, ANTI-TWO BLOCK
18	1	642918000	CORD CONNECTOR
19	1	366678000	SPRING, EXTENSION
20	1	366201000	WEAR PAD 3 .75 X 2.00 X .313
21	1	366202000	PAD, BOOM TOP
22	1	320988155	BOOM PAD 4.75 X 2.50 X .50, 3203
23	1	320990104	WEAR PAD, 2 X 4 X .25, W/ CSINK HOLES
24	3	407203000	PAD, BOOM, 2.50 O.D. x .563 THK
25	1	239000000	ZERK DRIVE GR
26	2	320990105	SCREW, FLAT HEAD, 5/16-18 UNC X 1, ZP
27	1	811029000	SCREW HX HD 5/16-18 UNC X 2 1/2 LG
28	1	366393000	SCREW HX HD 5/8-11 UNC X 2 1/2 LG GR8
29	1	018200000	NUT HX NY LK 5/8-11 UNC
30	8	007804000	SCREW HX HD 5/16-18 UNC X 1 1/4 LG CP
31	4	738733100	SCREW HX HD 3/8-24 UNF X 7/8 LG
32	4	020901000	WASHER FL 5/16
33	8	021200000	WASHER FL 3/8
34	4	021100000	WASHER SP LK 3/8


# 18 PRFX Boom Assembly P/N: 320990100

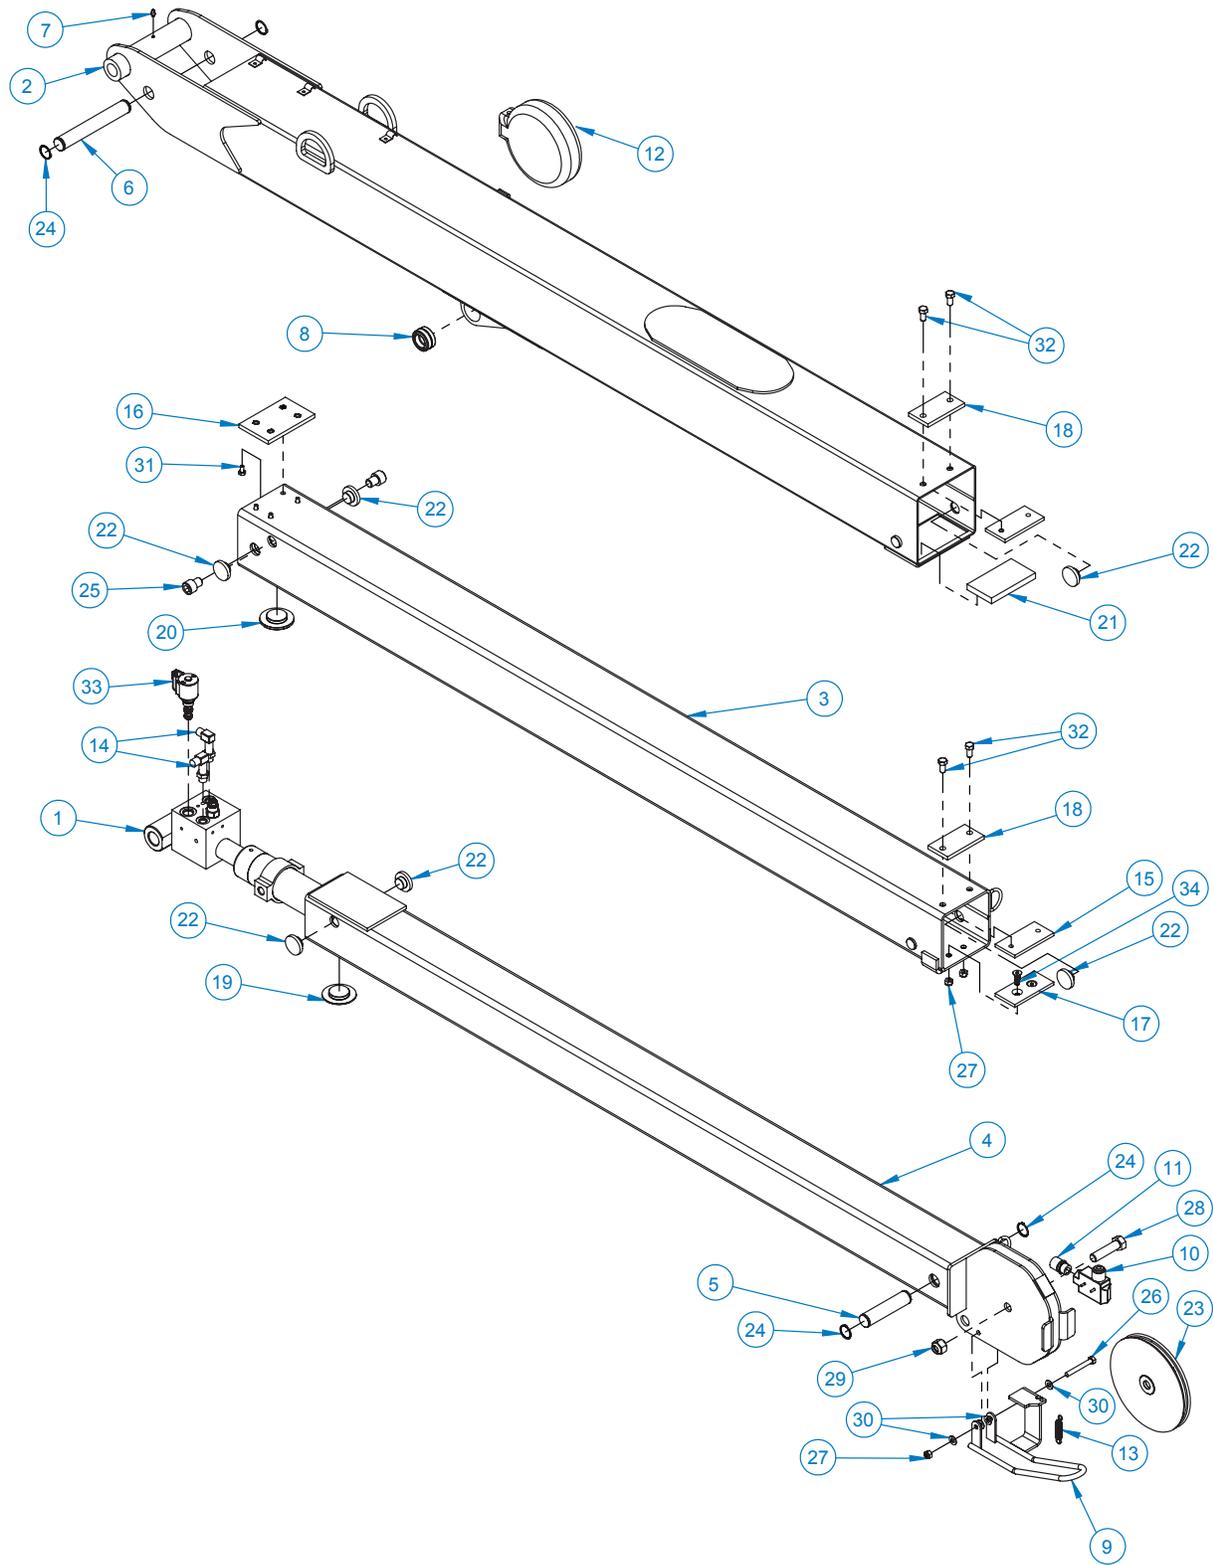

# PRFX Boom Assembly P/N: 320990100 18

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988145	CYLINDER, TELESCOPIC, 48" FIRST STAGE, 48" SECOND STAGE, 3-3/8 OD
2	1	320990110	LOWER BOOM WMT 3203 PRFX
3	1	320990120	MID BOOM WMT 3203 PRFX
4	1	320990140	UPPER BOOM WMT 3203 PRFX
5	1	738732000	PIN 1 X 4.063 LG
6	1	320988115	PIN 1 DIA X 6.905 LG, 3203
7	1	239000000	ZERK DRIVE GR
8	1	320858000	BEARING, SPHERICAL 1.00 ID
9	1	320871000	BAIL WELDMENT
10	1	646900000	SWITCH, ANTI-TWO BLOCK
11	1	642918000	CORD CONNECTOR
12	1	404205000	CORD REEL ASSY
13	1	366678000	SPRING, EXTENSION
14	2	330645000	FITTING 90 6-SAE/6-JIC LONG
15	2	366483000	PLATE, WEAR PAD .25 X 2 X 4
16	1	320988156	BOOM PAD WITH NUTS, 4.75 X 3 X .313, 3203
17	1	320990104	WEAR PAD, 2 X 4 X .25, W/ CSINK HOLES
18	2	366201000	WEAR PAD 3 .75 X 2.00 X .313
19	1	470048000	PAD, BOOM 2.50 O.D. X 0.063 THICK
20	1	407202000	PAD BOOM 2.50 O.D.
21	1	320988155	BOOM PAD 4.50 X 2.50 X .50, 3203
22	8	360767000	PAD BOOM 1.5 O.D.
23	1	320883000	SHEAVE ASSEMBLY
24	4	360122000	RING RETAINING 5100-98
25	2	460177162	SCREW SOC HD 5/8-11 UNC X 3/4 LG
26	1	811029000	SCREW HX HD 5/16-18 UNC X 2 1/2 LG
27	3	016801000	NUT HX NYLK 5/16-18 UNC CP
28	1	366393000	SCREW HX HD 5/8-11 UNC X 2 1/2 LG GR8
29	1	018200000	NUT HX NY LK 5/8-11 UNC
30	4	020901000	WASHER FL 5/16
31	4	005406000	SCREW HX HD 1/4-28 UNF X 1/2 LG
32	4	738733000	SCREW HX HD 3/8-24 UNF X 3/4 LG
33	1	320990101	VALVE, SPOOL, 3-WAY, W/ COIL & DEUTSCH CONNECTION
34	2	320990105	SCREW, FLAT HEAD, 5/16-18 UNC X 1, ZP


# 19 Winch Assembly P/N: 110703

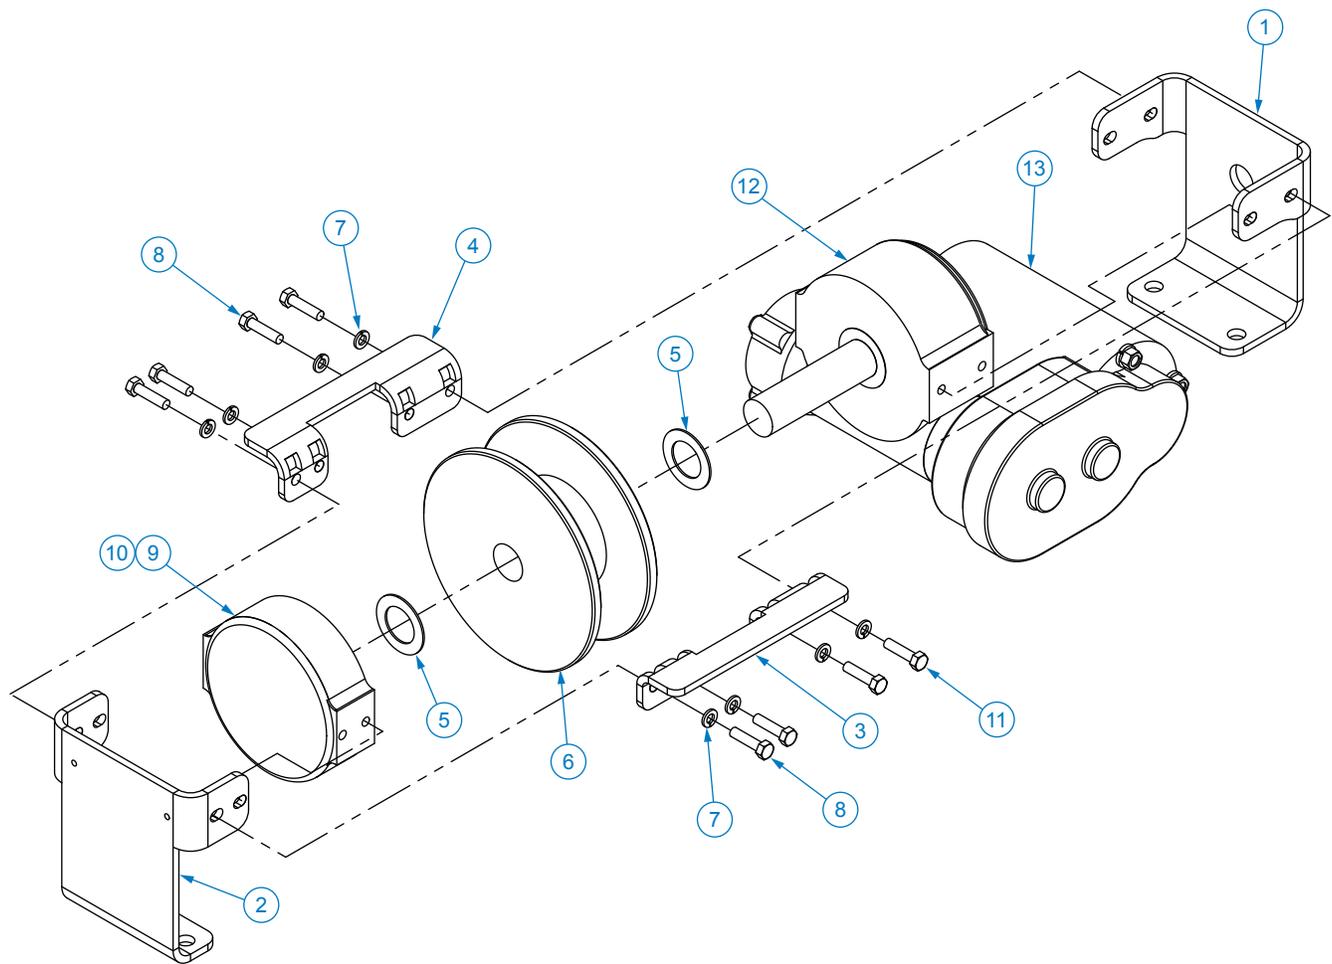

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320836	WINCH MOUNTING BRACKET CS
2	1	320837	WINCH MOUNTING BRACKET SS
3	1	320838	WINCH TIE BAR
4	1	320839	WINCH TIE BAR, FRONT
5	2	320887	BEARING, BRONZE
6	1	320379	DRUM
7	8	418163	WASHER SP LK 5/16
8	7	414136	SCREW HX HD 5/16-18UNC X 1 1/4 LG CP
9	1	412003	FLANGE BEARING
10	1	338053	WINCH END BEARING
11	1	414865	CAPSCREW-5/16-18NCX1LG HX SOC HD
12	1	296907	HSG ASSY-SPUR GEAR
13*	1	262037	MTR ASS'Y-12V, 2.5 HP


\* Included with Item No. 12

# Traveling Block P/N: 320433000 20

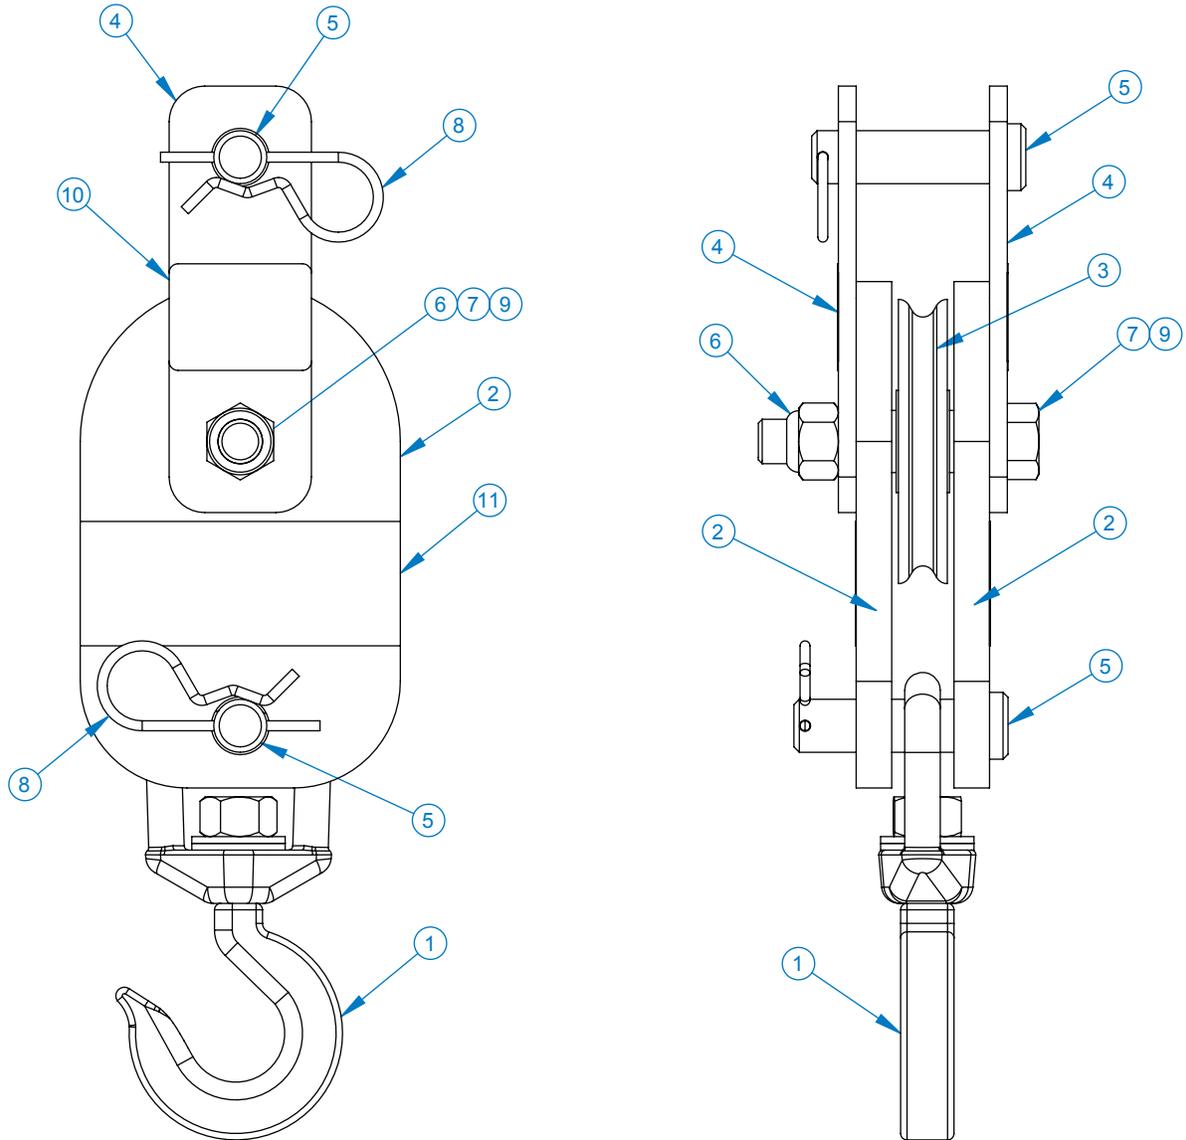


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	100309000	SWIVEL HOOK ASSY W/LATCH
2	2	320403000	SIDE PLATE, 3203
3	1	200909000	SHEAVE ASSEMBLY
4	2	320404000	BLOCK TRAVELING
5	2	320434001	PIN, 3/4 X 2-3/4LG
6	1	018200000	NUT HX NY LK 5/8-11UNC
7	1	013512000	SCREW HX HD 5/8-11UNC X 3 1/2 LG
8	2	366813000	PIN HITCH
9	2	330100000	WASHER, FL 5/8 X 7/8 OD
10	2	320433100	DECAL, TRAVELING BLOCK 3203
11	2	040518000	DECAL STAY CLEAR OF LOAD

## 21 TWECO with Switch Mount P/N: 404218000

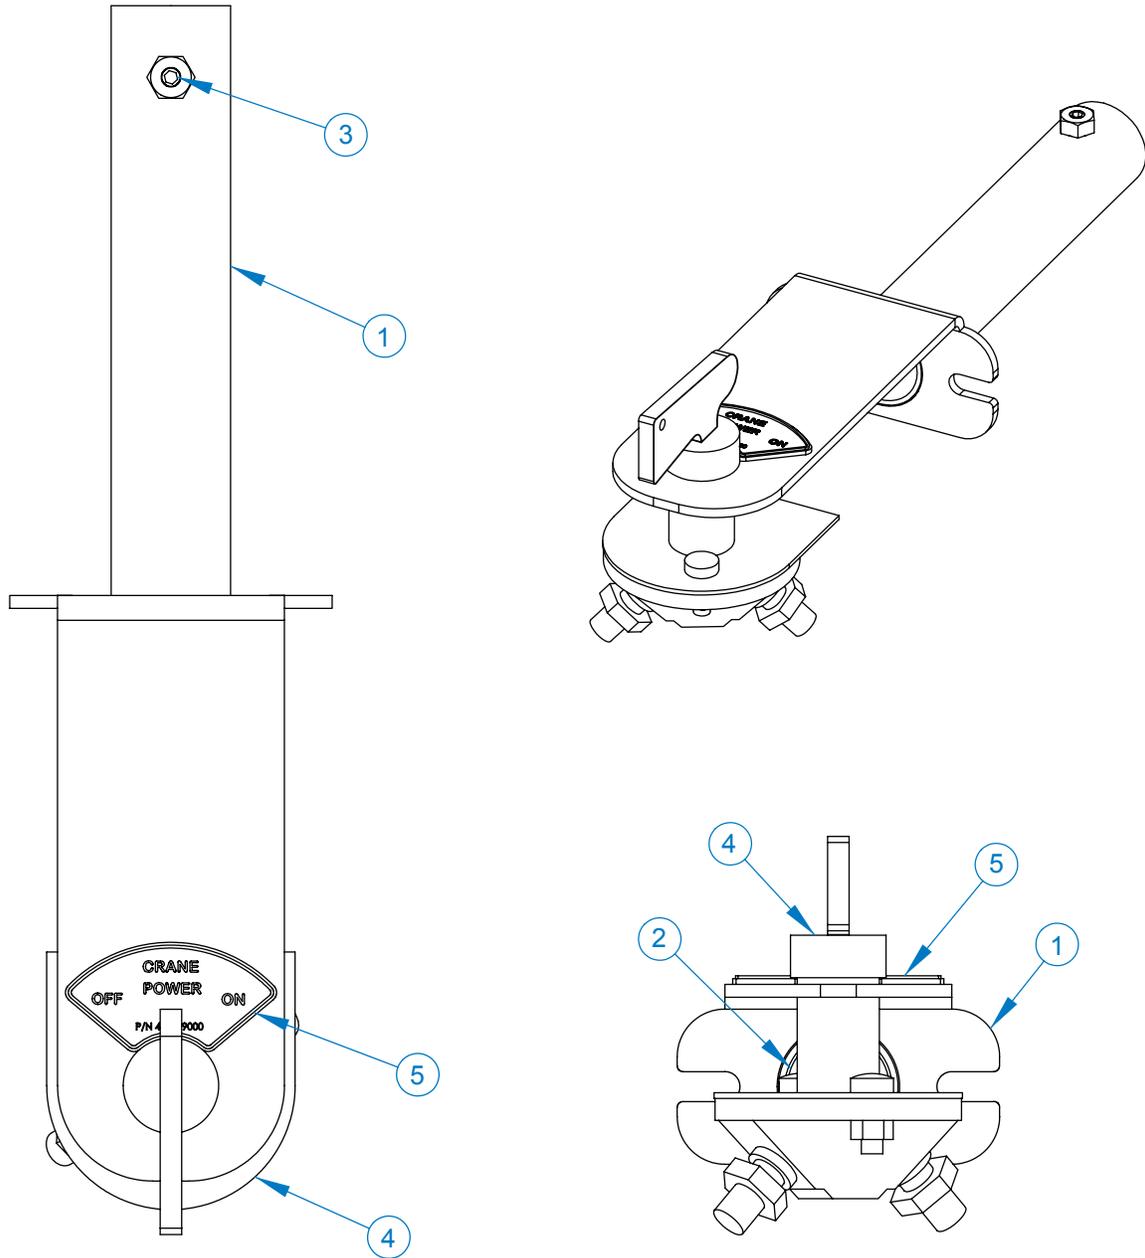


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	404217000	LOWER TWECO WDLMT WITH SWITCH MOUNT
2	1	404224000	CABLE ASSY 11 IN, TWECO TO TERMINAL
3	1	002900000	SCREW SET 0.25-20 X 0.25
4	1	404216000	MASTER SWITCH
5	1	404219000	DECAL, CRANE POWER

# Hydraulic Power Unit P/N: 320991279 22

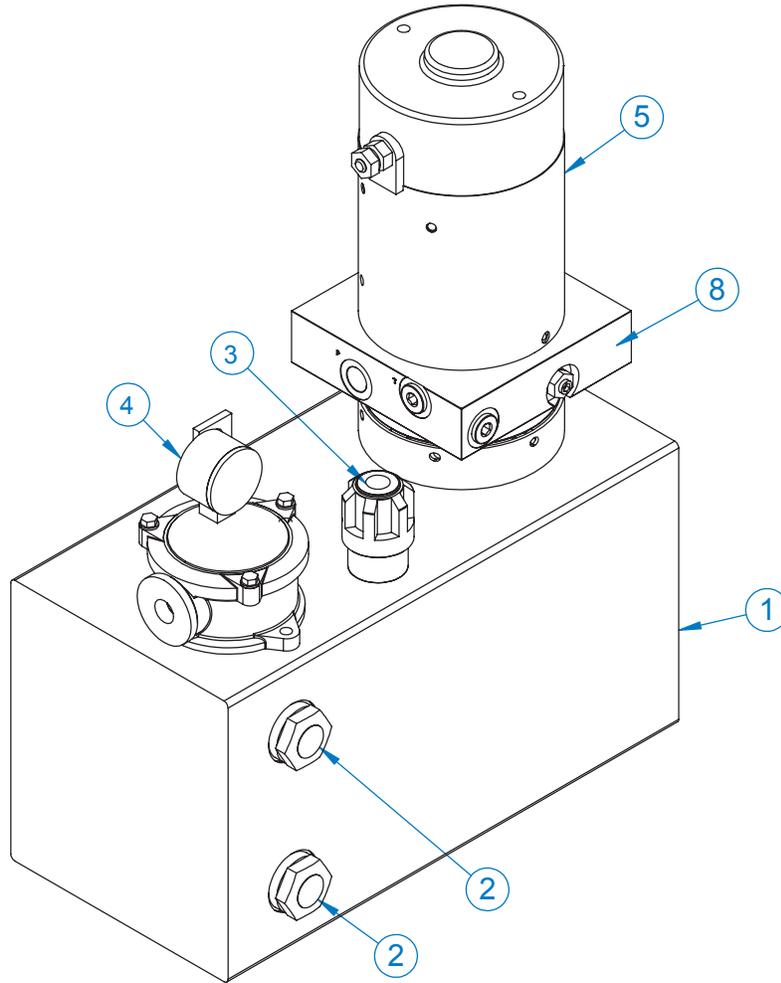



ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320991272	TANK, NEXSTAR 3203/4004EH
2	2	320991274	GLASS, SIGHT USED W/320991270
3	1	320991275	CAP,FILLER USED W/ 320991270
4	1	320991908	GAUGE, FILTER USED W/320991270
5	1	320991271	MOTOR, NEXSTAR 3203/4004EH
6	1	320991277	VALVE, RELIEF USED W/320991270
7	1	320991910	FILTER, ELEMENT SMALL EH NEXSTAR
8	1	320991284	BASE ASSEMBLY USED W/ 320991270
9	1	320991285	O-RING USED W/ 320991270
10	1	320991286	PUMP, 3203/4004EH
11	2	320991287	GASKET, FILTER HOUSING, HYDRAULIC POWER UNIT

# 23 Hydraulic Control Valve P/N: 320989420

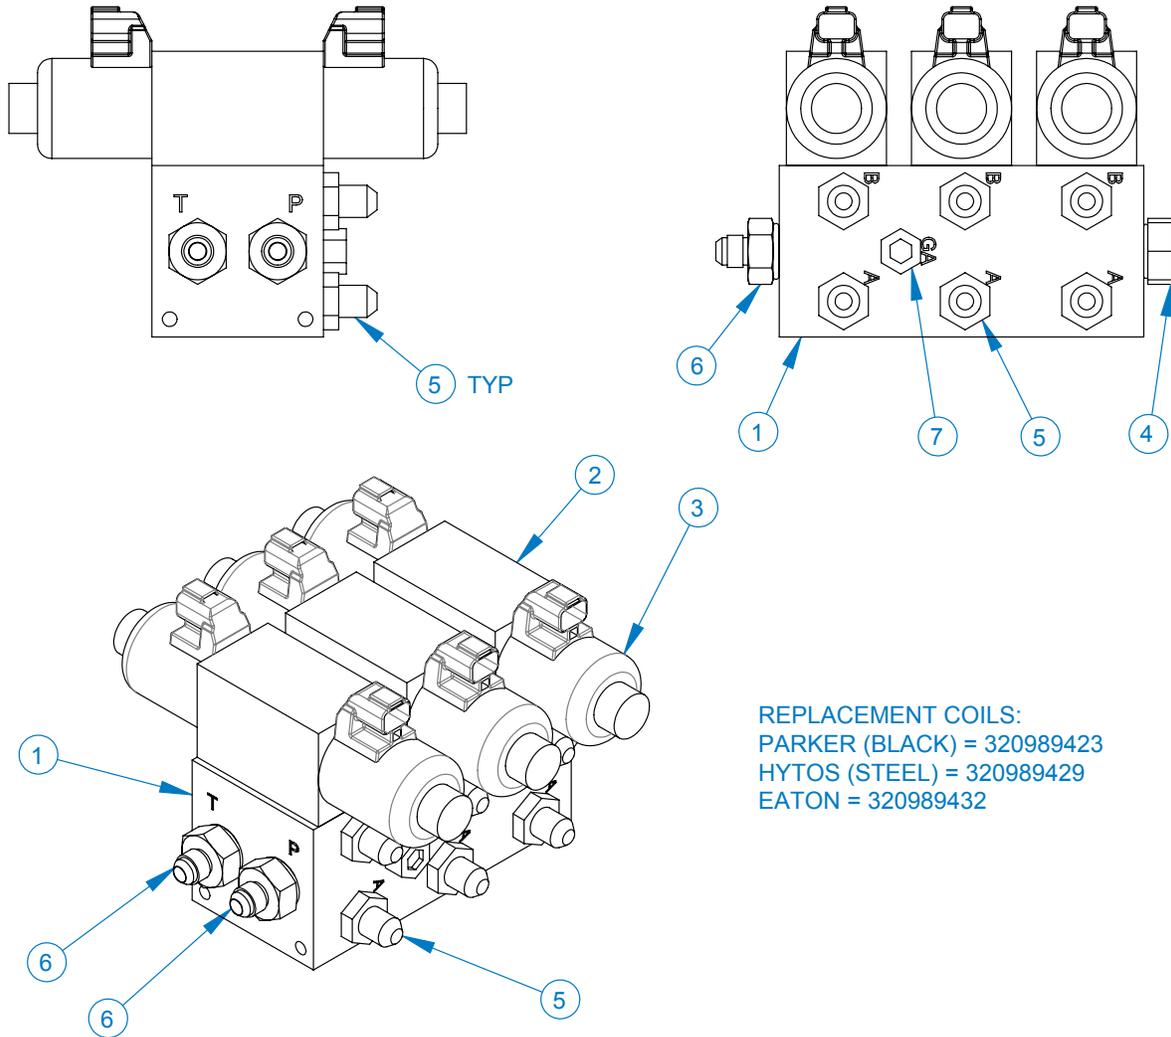

ITEM NO.	EATON QTY.	HYTOS QTY.	PARKER QTY.	AUTO CRANE PART NO.	DESCRIPTION
1	1	-	-	320989430	MANIFOLD BLOCK
	-	1	1	320989430	MANIFOLD BLOCK, DO3
2	-	-	1	320989422	VALVE, DO3 STACK TYPE, PARKER
	-	3	3	320989428	VALVE, DO3 STACK TYPE, HYTOS
	3	-	-	320989431	VALVE, DO3 STACK TYPE, EATON
3	-	-	6	320989423	COIL, 12V-2.5A PARKER, FOR 320989420
	-	6	-	320989429	COIL, 12V-2.7A HYTOS, FOR 320989420
	6	-	-	320989432	COIL, 12V-2.5A EATON, FOR 320989420
4	2	2	2	330072000	PLUG, #10 SAE
5	6	6	6	202756	FITTING 6-8 STRAIGHT
6	2	2	2	202755000	FITTING, -10 SAE/-6 JIC, STR
7	1	1	1	751034000	PLUG, -6ORB

# Manual Override Procedure 24

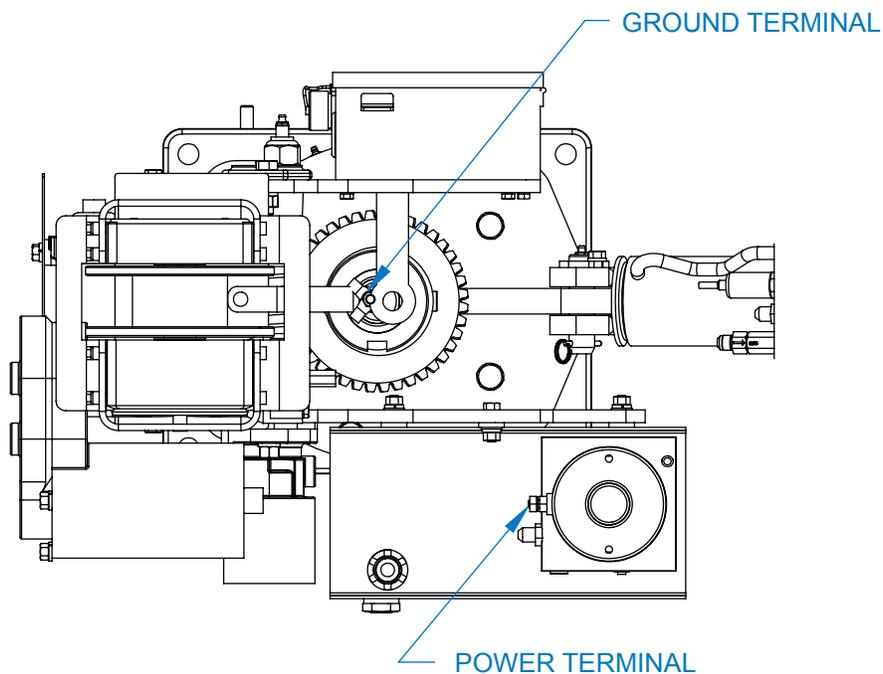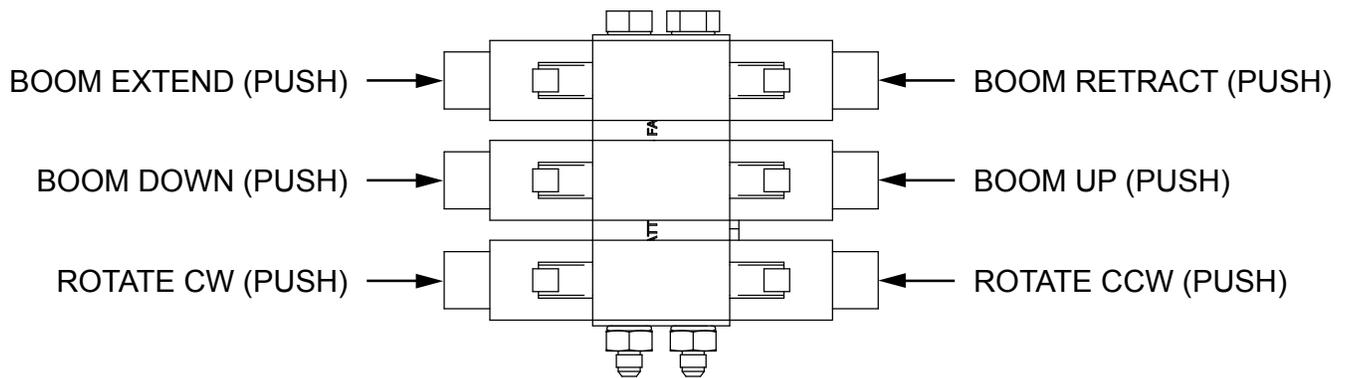


## Manual Override Procedures

1. Apply 12VDC from battery to pump power terminal.
2. Apply ground from battery to grounding connection.
3. Select the function desired, then push in override located on the end of the coil using a punch or other small object.




Manually overriding crane bypasses all safety features. During operation make sure load does not exceed crane capacity and the traveling block does not come into contact with boom tip.

# 25 RELAY PANEL ASSEMBLY P/N: 320988300

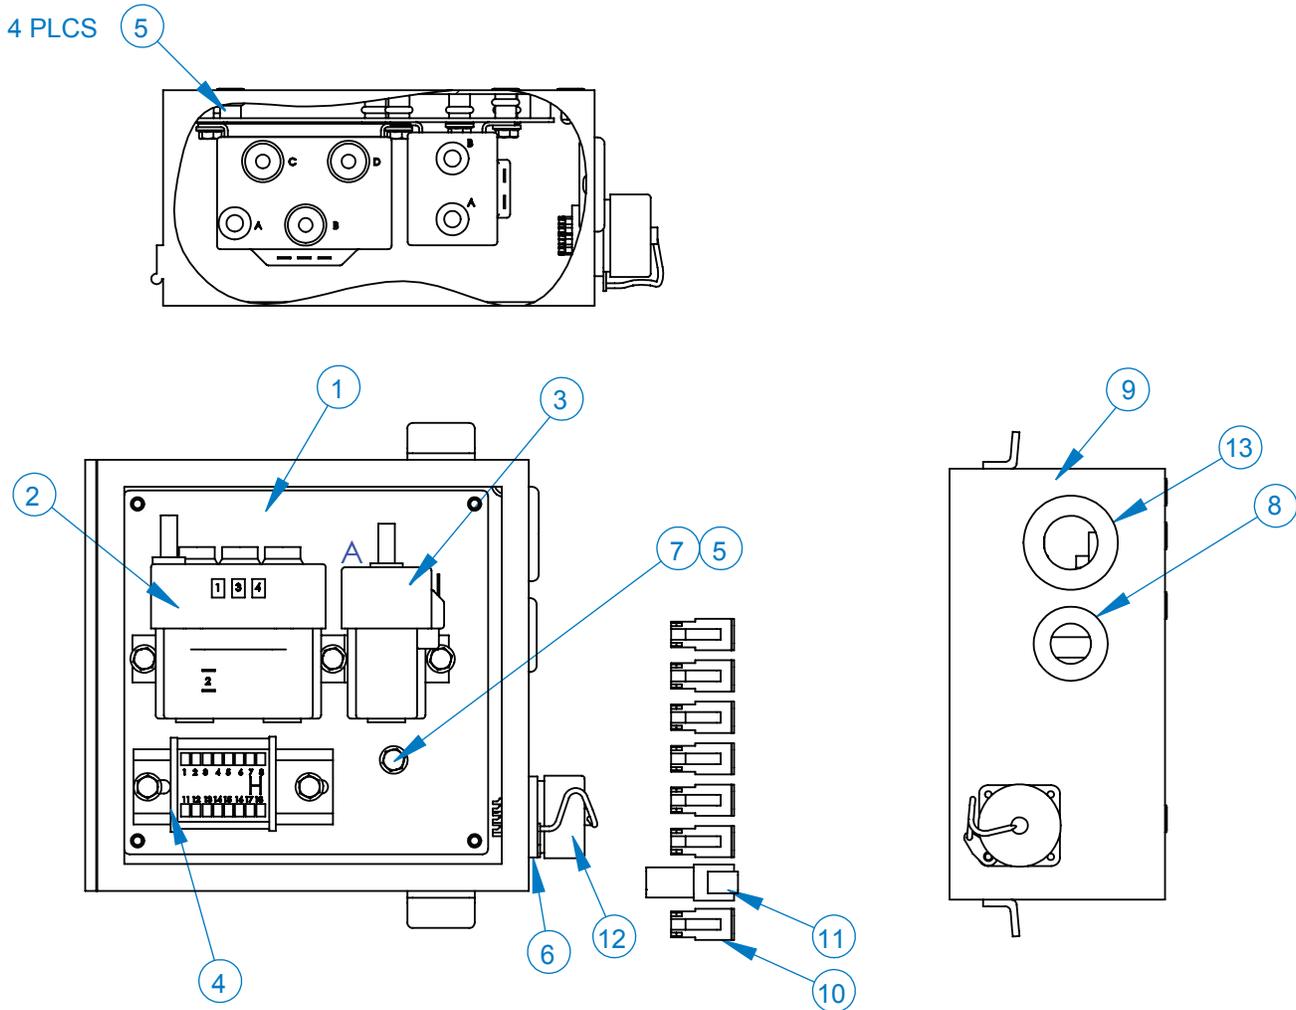

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988256	BULKHEAD ELECTRICAL PLATE
2	1	320589000	RELAY, HOIST
3	1	320584000	RELAY, POWER UNIT
4	1	320988399	TERMINAL STRIP 8
5	10	736272000	NUTSERT 1/4-20UNC X .027-.165 GRIP
6	1	320562000	RECEPTACLE, 11 PIN, 1/4 TURN, BAYONET
7	6	360493000	SCREW HX WHIZ-LK 1/4-20UNC X 1/2 LG
8	1	371024000	GROMMET 3/4" I.D.
9	1	320988255	ELECTRICAL BOX, 8X8X4
10	7	366367000	DEUTSCH 2 PIN Assembly
11	1	360769001	HOUSING, DEUTSCH 2-PIN RECEPTACLE
12	1	320564000	CAP WITH CHAIN (FOR RECEPTACLE)
13	1	750282000	GROMMET, RUBBER, 1.375 OD, 1.00 ID

# Relay Panel Electrical Schematic P/N: 320988300 26

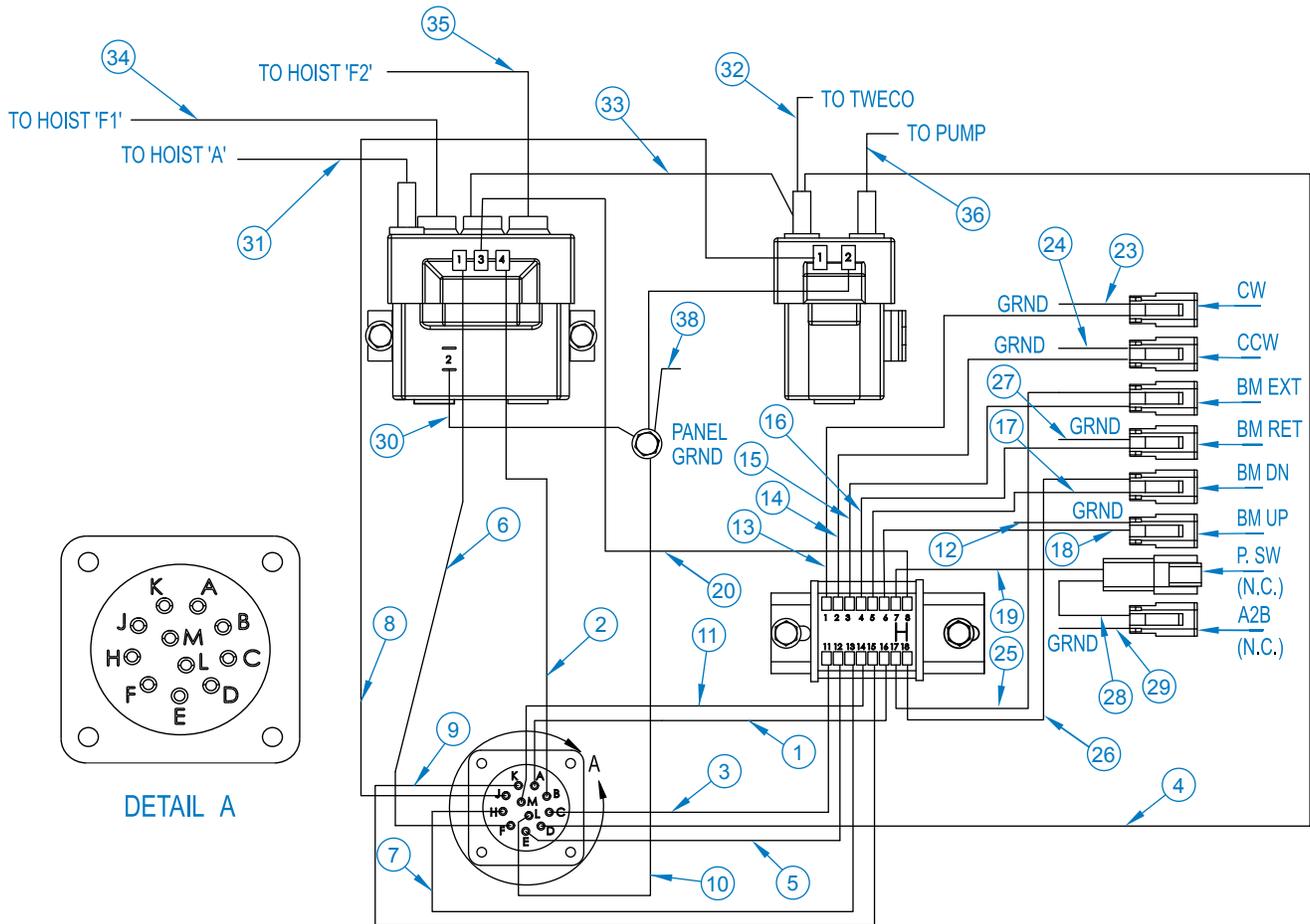


## 26 Relay Panel Electrical Schematic P/N: 320988300

ITEM NO.	PART NO.	GAGE	COLOR
1	REF	16	YELLOW
2	REF	16	GREEN
3	REF	16	ORANGE
4	REF	16	RED
5	REF	16	WHITE/RED
6	REF	16	RED/BLACK
7	REF	16	GREEN/BLACK
8	REF	16	WHITE/BLACK
9	REF	16	BLUE
10	REF	16	BLACK
11	REF	16	ORANGE/BLACK
12	REF	16	WHITE
13	REF	16	ORANGE
14	REF	16	WHITE/RED
15	REF	16	GREEN/BLACK
16	REF	16	ORANGE/BLACK
17	REF	16	BLUE
18	REF	16	YELLOW
19	REF	16	RED
20	REF	16	GREEN/WHITE
21	-	-	NOT USED
22	-	-	NOT USED
23	REF	16	WHITE
24	REF	16	WHITE
25	REF	16	RED/WHITE
26	REF	16	BLUE/WHITE
27	REF	16	WHITE
28	REF	16	WHITE/RED
29	REF	16	WHITE
30	REF	16	WHITE
31	320988331	6	BLACK
32	320988332	6	BLACK
33	320988333	6	BLACK
34	320988334	6	BLACK
35	320988335	6	BLACK
36	320988336	6	BLACK
37	REF	16	WHITE
38	320988338	16	BLACK

# PR/PRX Electrical Schematic P/N: 680180000 27

PIN	VEND. 1	VEND. 2
G1	PLUG	PLUG
G2	WHT/BLK	BLK
G3	BLK	BRN
G4	PLUG	PLUG
G5	PLUG	PLUG
G6	RED	WHT
G7	PLUG	PLUG
G8	PLUG	PLUG
G9	PLUG	PLUG
G10	GRN/BLK	BLU
G11	PLUG	PLUG
G12	ORG/BLK	GRN
B1	ORG	RED
B2	WHT/RED	YEL
B3	GRN	BRN
B4	RED/BLK	GRN
B5	WHT	BLK
B6	BLU	ORG
B7	BRN	BLU
B8	BLU	WHT
B9	PLUG	PLUG
B10	PLUG	PLUG
B11	PLUG	PLUG
B12	PLUG	PLUG

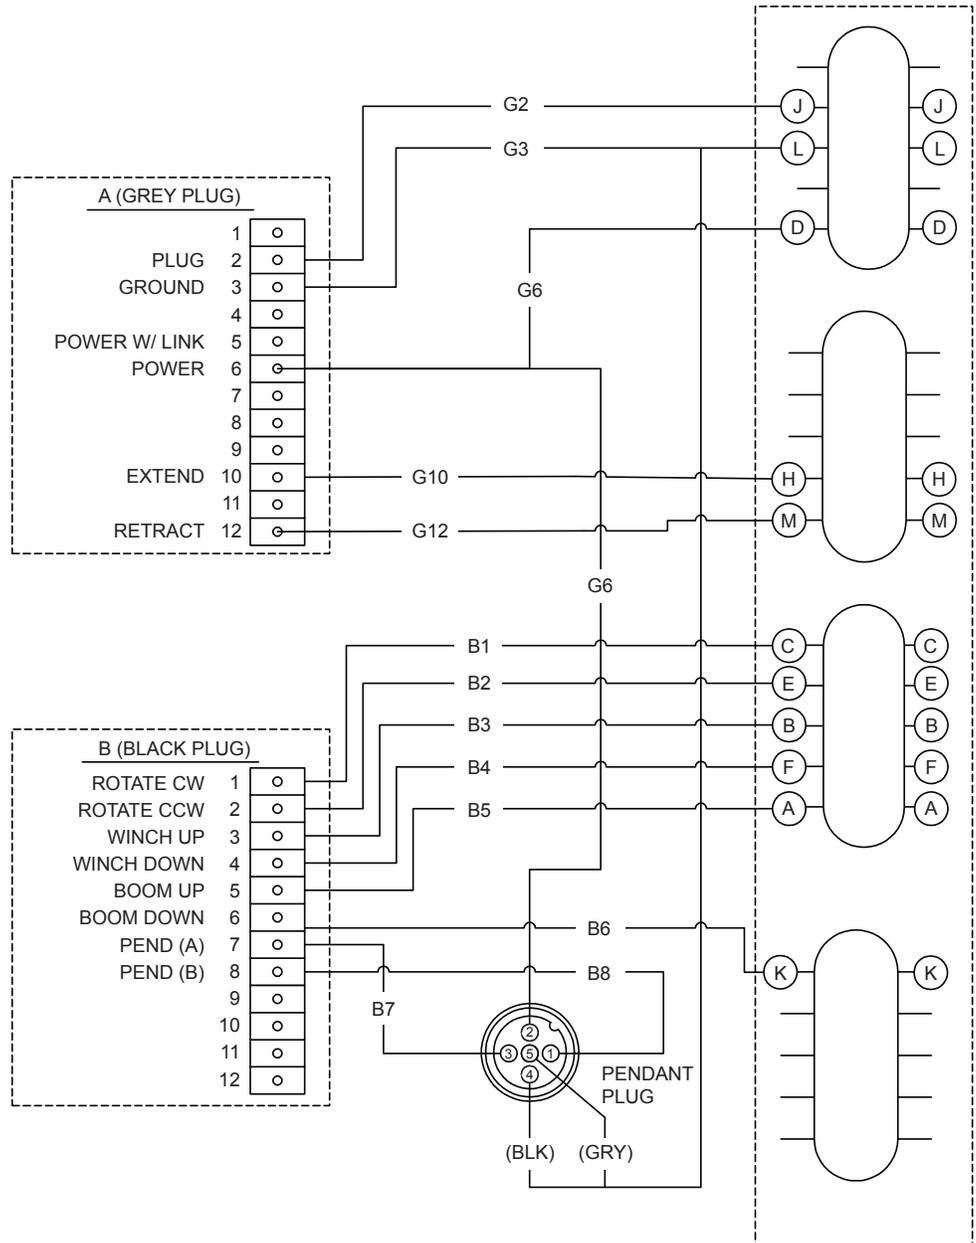



P.O. Box 580697 Phone: (918) 438-2760  
4707 N. Mingo Rd. Tulsa, OK 74158-0697

## LIMITED WARRANTY

### 1 YEAR PURCHASED REPLACEMENT PARTS

Auto Crane will warranty to the consumer for a period of (1) year from the date that a new Auto Crane replacement part was purchased from an authorized Auto Crane distributor. Each new Auto Crane part they sell will be free under normal use and service from defects in material and workmanship. Date of purchase will be honored as the date indicated on the Bill of Sale to the consumer.

The obligation of Auto Crane under this warranty does not apply to parts replaced under the limited warranty for a new Auto Crane product. The warranty for parts replaced under the limited warranty of a new Auto Crane product expires when the warranty for that product expires.

The obligation of Auto Crane under this warranty is limited to the replacement or repair of purchased replacement parts that appear to the manufacturer to be defective after review of documentation (Auto Crane Warranty Claim Form, photos, data etc.) provided by the Auto Crane distributor and/or inspection of parts returned to Auto Crane. This warranty does not obligate Auto Crane to bear labor costs to replace the defective parts or travel time charges in connection with the replacement or repair of defective parts. Responsibility for customer's claims arising from misapplication, abuse, misuse or alteration of equipment or parts lies with the distributor or user and no warranty obligation is assumed in these circumstances by Auto Crane.

Auto Crane will in no event be liable for any consequential damages or contingent liabilities arising out of the failure of any Auto Crane product or parts to operate properly

Auto Crane makes no warranty in respect to parts for component accessories, it being subject to the warranties of their respective manufacturers.

If field service, at the request of the distributor, is rendered and fault is found not to be with Auto Crane's product, the distributor shall pay the time and expense of the field representative.

Claims for service labor or other expenses that have incurred by the buyer without approval or authorization or Auto Crane will not be accepted

When applying for warranty claims may be handled by contacting your nearest authorized Auto Crane **Distributor. All claims are to be filed in writing on an Auto Crane Warranty Claim Form.**



P.O. Box 580697 Phone: (918) 438-2760  
4707 N. Mingo Rd. Tulsa, OK 74158-0697

## LIMITED WARRANTY 2 YEAR PARTS AND LABOR

Auto Crane will warranty to the consumer for a period of (2) years parts and labor from the date of purchase. Each new Auto Crane unit they sell will be free under normal use and service from defects in material and workmanship. Date of purchase will be honored as the date indicated on the Bill of Sale, which must accompany the Warranty Registration and be on file with Auto Crane. Absent a valid Warranty Registration and appropriate documentation, the original date of manufacture, as indicated by the serial number on the product, will be used to determine the effective date of the 2 year warranty.

The obligation of Auto Crane under this warranty is limited to the replacement or repair of parts that appear to the manufacturer after review and/or inspection to be defective and paid flat rate labor for replacing defective parts. This warranty does not obligate Auto Crane to bear the travel time charges in connection with the replacement or repair of defective parts. Responsibility for customer's claims arising from misapplication, abuse, misuse or alteration of equipment or parts lies with the distributor or user and no warranty obligation is assumed in these circumstances by Auto Crane.

Auto Crane will in no event be liable for any consequential damages or contingent liabilities arising out of the failure of any Auto Crane Product or parts to operate properly.

Auto Crane makes no warranty in respect to component accessories, it being subject to the warranties of their respective manufacturers.

If field service, at the request of the distributor, is rendered and fault is found not to be with Auto Crane's product, the distributor shall pay the time and expense of the field representative.

Claims for service labor or other expenses that have incurred by the buyer without approval or authorization or Auto Crane will not be accepted.

When applying for warranty, claims may be handled by contacting your nearest authorized Auto Crane Distributor. All claims are to be filed in writing on an Auto Crane Warranty Claim Form.

**AUTO CRANE COMPANY IS UNDER NO OBLIGATION TO EXTEND THIS WARRANTY TO ANY CUSTOMER FOR WHICH AN AUTO CRANE DELIVERY REPORT FORM HAS NOT BEEN COMPLETED AND ON FILE WITH AUTO CRANE COMPANY**





