



**MODEL RS60AC
AIR COMPRESSOR
OPERATORS, MAINTENANCE
AND PARTS MANUAL**

**APPLIES TO SERIAL NUMBERS
600661 AND EARLIER**

**THIS MANUAL NO LONGER REPRESENTS
CURRENT PRODUCTION**

**OPERATORS, MAINTENANCE, AND PARTS MANUAL
AUTO CRANE MODEL RS60AC**

TABLE OF CONTENTS


Operation & Maintenance Section

Specifications	6
Safety	7 - 11
Compressor Terminology	12
Description of Components	13 - 16
Inspection, Lubrication, and Maintenance	17 - 24
Troubleshooting	25 - 27
Compressor Operation	28 - 29
Parts and Illustration Section	30 - 38
Recommended Spare Parts	39
Service Questionnaire	40
Instructional Procedures For Installation	41 - 44

SPECIFICATIONS

DELIVERY @ 150 PSIG	CFM	45	60
Input Speed to Compressor	RPM GPM	1500 10 @ 2470 PSI	1951 13 @ 2470 PSI
Fluid Capacity-Compressor (not hydraulic)		1.0 Gallons System .75 Compressor Sump	
Components - Compressor System		(Overall Dimensions) see below	
Weight (dry)		300 lbs.	

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE

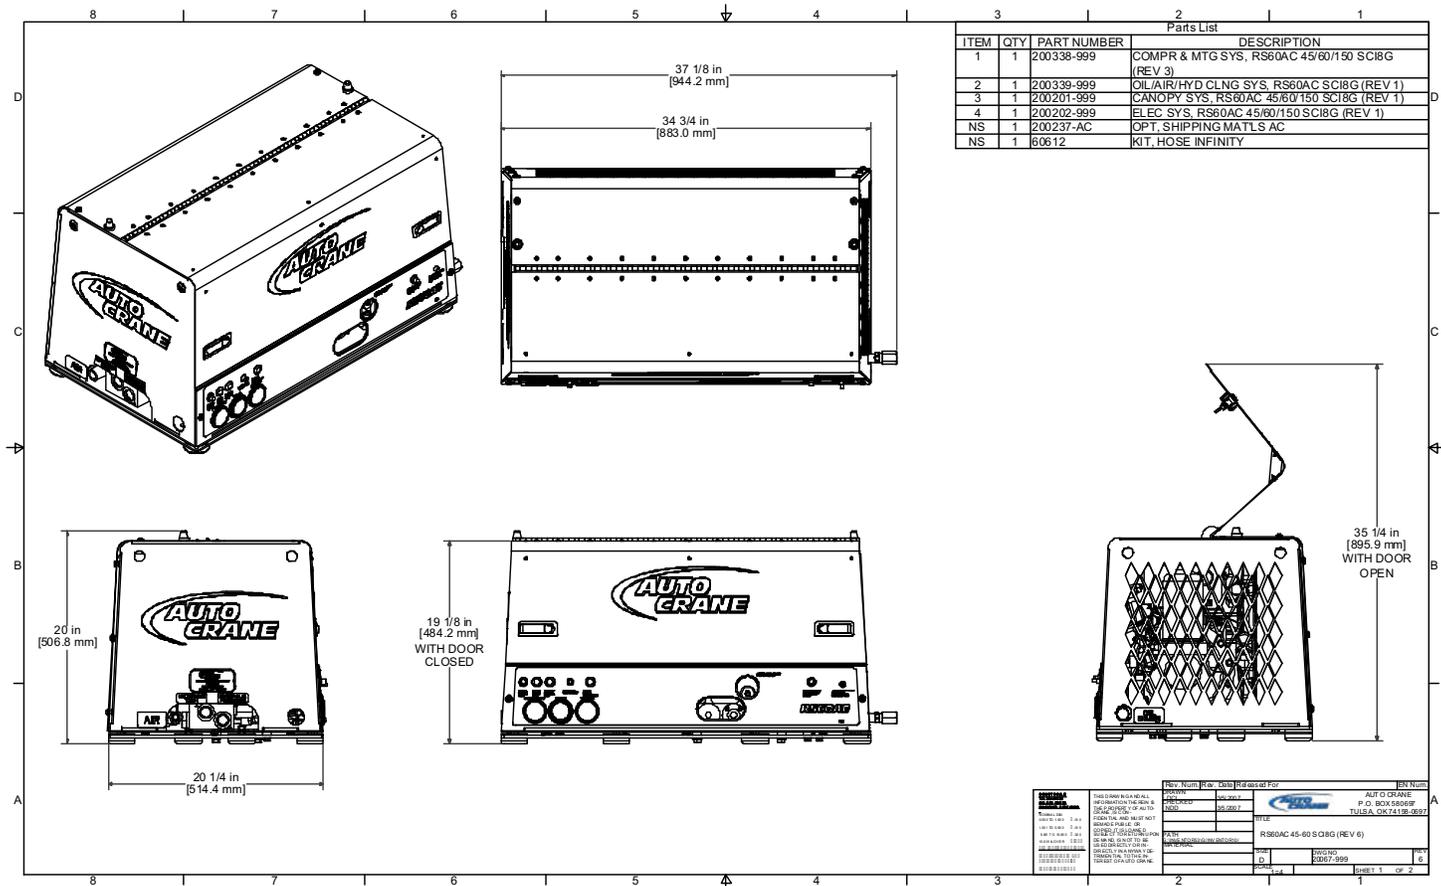

SAFETY

WARNING

ALL UNITS ARE SHIPPED WITH A DETAILED OPERATORS AND PARTS MANUAL. THIS MANUAL CONTAINS VITAL INFORMATION FOR THE SAFE USE AND EFFICIENT OPERATION OF THIS UNIT. CAREFULLY READ THE OPERATORS MANUAL BEFORE STARTING THE UNIT. FAILURE TO ADHERE TO THE INSTRUCTIONS COULD RESULT IN SERIOUS BODILY INJURY OR PROPERTY DAMAGE.

AIR COMPRESSOR SAFETY PRECAUTIONS

Safety is basically common sense. While there are standard safety rules, each situation has its own peculiarities that cannot always be covered by rules. Therefore with your experience and common sense, you are in a position to ensure your safety. Lack of attention to safety can result in: accidents, personal injury, reduction of efficiency and worst of all - Loss of Life. Watch for safety hazards. Correct them promptly. Use the following safety precautions as a general guide to safe operation:

Do not attempt to remove any compressor parts without first relieving the entire system of pressure.

Do not attempt to service any part while machine is operating.

DANGER

CHECK THE COMPRESSOR SUMP OIL LEVEL ONLY WHEN THE COMPRESSOR IS NOT OPERATING AND SYSTEM IS COMPLETELY RELIEVED OF PRESSURE. OPEN SERVICE VALVE TO ENSURE RELIEF OF SYSTEM AIR PRESSURE WHEN PERFORMING MAINTENANCE ON COMPRESSOR AIR/OIL SYSTEM. FAILURE TO COMPLY WITH THIS WARNING MAY CAUSE DAMAGE TO PROPERTY AND SERIOUS BODILY HARM.

Do not operate the compressor at pressure(s) or speed in excess of its rating as indicated in "Compressor Specifications".

Periodically check all safety devices for proper operation.

Do not play with compressed air. Pressurized air can cause serious injury to personnel.

Exercise cleanliness during maintenance and when making repairs by covering parts and exposed openings.

SAFETY

Do not install a shut-off valve between the compressor and compressor oil sump.

DANGER

DO NOT USE AUTO CRANE COMPRESSOR SYSTEMS TO PROVIDE BREATHING AIR. SUCH USAGE, WHETHER SUPPLIED IMMEDIATELY FROM THE COMPRESSOR SOURCE, OR SUPPLIED TO BREATHING TANKS FOR SUBSEQUENT USE, CAN CAUSE SERIOUS BODILY INJURY.

AUTO CRANE DISCLAIMS ANY AND ALL LIABILITIES FOR DAMAGE FOR LOSS DUE TO PERSONAL INJURIES, INCLUDING DEATH, AND/OR PROPERTY DAMAGE INCLUDING CONSEQUENTIAL DAMAGES ARISING OUT OF ANY AUTO CRANE COMPRESSORS USED TO SUPPLY BREATHING AIR.

Do not disconnect or bypass safety circuit system.

Do not install safety devices other than authorized AUTO CRANE replacement devices.

Close all openings and replace all covers and guards before operating compressor unit.

Tools, rags, or loose parts must not be left on the compressor or drive parts.

Do not use flammable solvents for cleaning parts. This can cause the unit to ignite during operation.

Keep combustibles out of and away from the Compressor/Inlet and any associated enclosures.

The owner, lessor, or operator of the Compressor are hereby notified and forewarned that any failure to observe these safety precautions may result in damage or injury.

AUTO CRANE expressly disclaims responsibility or liability for any injury or damage caused by failure to observe these specified precautions or by failure to exercise that ordinary caution and due care required when operating or handling the Compressor, even though not expressly specified above.

SAFETY

A compliment of warning decals is supplied with each unit. These decals must be affixed to the compressor package in the locations noted in this manual. If for any reason a safety decal is removed it is the owners responsibility to make sure it is replaced.



DANGER

DRIVE COUPLING IN ROTATION DURING COMPRESSOR OPERATION. DO NOT RUN COMPRESSOR WITH CANOPY OFF.

**HYDRAULIC
PRESSURE** 302443

**HYDRAULIC
TANK** 302444


AIR 302445

DIRECTION OF ROTATION

300048

**AUTO
CRANE**
AUTO CRANE
P.O. BOX 580697 TULSA, OK 74158-0697
1-800-815-0198
WWW.AUTOCRANE.COM
SERIAL NO.

305763

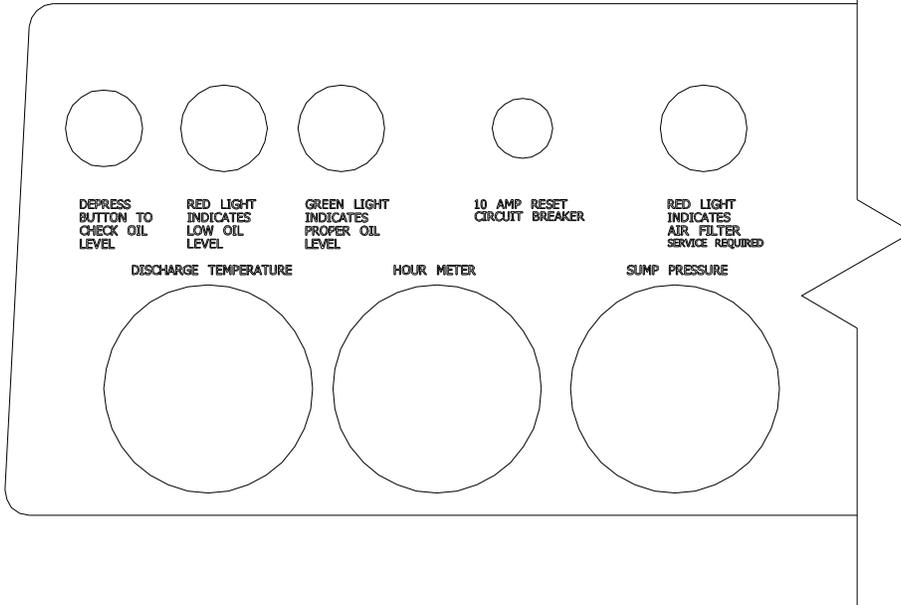

⚠ DANGER



HOT OIL UNDER PRESSURE!
Will cause SEVERE PERSONAL INJURY OR DEATH. Do not remove valves, caps, plugs or piping when compressor is running or pressurized. Shut down compressor and relieve system of all pressure before removing valves, caps, plugs or piping.

300038

⚠ DANGER



Discharge air used for breathing will cause severe injury or death. Consult filtration specialist for additional filtration and treatment equipment to meet occupational safety and health administration standards.

300048


⚠ WARNING




Read the operators manual before starting this unit. Failure to adhere to instructions can result in severe personal injury. Replacement manuals can be purchased from: Boss Industries, Inc. 1761 Genesis Dr. LaPorte, IN 46350

300039

UPPER SIGHT GAUGE
MAX. OIL LEVEL

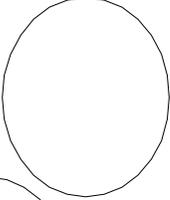

COMPRESSOR FLUID FILL INSIDE CANOPY.
1. CHECK OIL LEVEL DAILY WITH OIL LEVEL BUTTON AND VISUAL SIGHT GAUGE. CHECK WITH TRUCK PARKED ON LEVEL GROUND.
2. ADD FLUID WHEN RED OIL LIGHT IS ON OR WHEN NO OIL IS VISIBLE IN UPPER SIGHT GAUGE.
3. ADD FLUID UNTIL IT IS AT THE TOP OF UPPER SIGHT GAUGE.

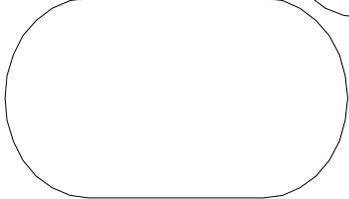



INDICATING LIGHT TEST
BUTTON. DEPRESS TO
CHECK ALL LIGHTS
ON PANEL



SAFETY SHUTDOWN SWITCH.
PUSH TO RESET.
TAKE IN FOR SERVICE
IF BUTTON POPS OUT.

RSGOAC

304174

COMPRESSOR TERMINOLOGY

AIR/OIL COALESCER - Performs second stage separation of oil from compressed air feeding air tools. Sometimes referred to as the separator element.

CFM - Refers to the volume of compressed air being produced, expressed as cubic feet of air per minute.

COMPRESSOR LUBRICANT - DEXRON III ATF.

GPM - Refers to the amount of gallons per minute of hydraulic fluid flowing through the pump.

OIL SUMP - The first stage of oil separation from compressed air. Also serves as reservoir area for compressor lubricant and sometimes referred to as the receiver tank.

PSI - Refers to the operating pressure the system is set up at, expressed as pounds per square inch.

SAFETY VALVE - A valve located on the oil sump which opens in case of excessive pressure. Sometimes referred to as the pop-off or pressure relief valve.

DESCRIPTION OF COMPONENTS

COMPRESSOR ASSEMBLY

The AUTO CRANE hydraulic drive compressor assembly is a positive displacement, oil flooded, rotary screw type unit employing one stage of compression to achieve the desired pressure. Components include a housing (stator), two screws (rotors), bearings, and bearing supports. Power from the hydraulic motor shaft is transferred to the male rotor through a drive coupling. The female rotor is driven by the male rotor. There are five lobes on the male rotor while the female rotor has six roots.

PRINCIPLES OF OPERATION

In operation, two helical grooved rotors mesh to compress air. Inlet air is trapped as the male lobes roll down the female grooves, pushing trapped air along, compressing it until it reaches the discharge port in the end of the stator and delivers smooth-flowing, pulse-free air to the receiver.

During the compression cycle, oil is injected into the compressor and serves these purposes:

1. Lubricates the rotating parts and bearings.
2. Serves as a cooling agent for the compressed air.
3. Seals the running clearances.

LUBRICATION SYSTEM

Oil from the compressor at discharge pressure, is directed into it's integral housing, through the thermal valve and filter, and then out of the integral housing to the oil cooling system, and then back to the side of the compressor stator, where it is injected into the compressor. At the same time oil is directed internally to the bearings and shaft seal of the compressor.

OIL SUMP

Compressed, oil-laden air enters the sump from the compressor. As the oil-laden air enters the sump, most of the oil is separated from the air as it passes through a series of baffles and de-fusion plates. The oil accumulates at the bottom of the sump for recirculation. However, some small droplets of oil remain suspended in the air and are passed on to the Coalescer.

DESCRIPTION OF COMPONENTS

SAFETY VALVE

The pop safety valve is set at 200 PSI and is located at the top of the air/oil sump. This valve acts as a backup to protect the system from excessive pressure that might result from a malfunction.

AIR/OIL COALESCER

The coalescer is self-contained within a spin-on housing. When air is demanded at the service line, it passes through the coalescer which efficiently provides the final stage of oil separation.

OIL RETURN LINE

The oil that is removed by the coalescer accumulates and is returned through an internal oil return line leading to the compressor.

MINIMUM PRESSURE VALVE

The minimum pressure valve is located at the outlet of the coalescer head and serves to maintain a minimum discharge pressure of 75 PSIG in operation, which is required to assure adequate compressor lubrication pressure.

OIL FILTER

The compressor oil filter is a removable and cleanable screen built into the side of the compressor housing. Screen replacement may be necessary after several cleanings.

COMPRESSOR OIL AND HYDRAULIC OIL COOLING SYSTEMS

The compressor cooling system consists of a combination hydraulic cooler and compressor cooler mounted on the common frame. Compressor oil temperature is controlled by a thermal valve located down stream of the oil filter. The thermal valve maintains the compressor oil temperature at 185°F. Cool air is drawn through the vented end panel and across the combo cooler. The air is heated by the coolers and the hot air exits out the back vented panel . Allow for adequate clearance (12") for the air to exit. Also, the package location should not be subjected to above ambient air temperatures.

DESCRIPTION OF COMPONENTS

INSTRUMENTATION

The AUTO CRANE hydraulic drive compressor unit incorporates a gauge panel that monitors temperature, pressure and hours of operation.

HOURMETER

The hourmeter records the total number of operating hours. It serves as a guide in following the recommended inspection and maintenance schedule. The hourmeter will only run when there is pressure in the system.

COMPRESSOR DISCHARGE AIR/OIL TEMPERATURE SWITCHGAUGE

This switchgauge indicates compressor air discharge temperature. The switchgauge ensures safety shutdown in case of excessive operating temperatures, preventing compressor damage, by stopping hydraulic flow to the compressor motor.

ELECTRICAL AND SAFETY SYSTEM

The AUTO CRANE compressor's standard electrical system consists of:

- Gauge panel with a temperature switchgauge, hourmeter and discharge pressure switchgauge.
- Compressor and hydraulic oil cooler fan assembly and relay.
- Compressor after cooler/oil cooler fan assembly with relay.
- N.O. hourmeter pressure switch.
- N.C. blowdown pressure switch.
- 12VDC N.O. hydraulic solenoid and relay.
- Switch relay for customer equipment interface during compressor operation.

DESCRIPTION OF COMPONENTS

AUTOMATIC BLOW DOWN VALVE

There is one blow down valve in the compressor system. It is located at the intake valve and will automatically bleed the sump to zero pressure when the compressor is disengaged. Blow down time interval takes between 45 and 60 seconds.

CONTROL SYSTEM

The prime component of the compressor control system is the compressor inlet valve. The control system is designed to match air supply to air demand and to prevent excessive discharge pressure when compressor is at idle. Control of air delivery is accomplished by the inlet valve regulation and modulation as directed by the discharge pressure regulator.

NORMALY OPEN REGULATOR SOLENOID

A closed Furnas air pressure switch will energize the normally open regulator solenoid, thus closing it. When the normally open regulator solenoid is closed, air pressure will rise. When it is open air pressure falls only in the compressor sump.

Note: See page 28 for description of Furnas switch.

NOTE: Most air tools operating pressure range is between 90 and 125 psi. Operating above the tools recommended pressures will decrease the life of the tool. Higher operating pressure can also over torque nut and bolts fatiguing the fastener and mating parts. Strictly adhere to tool operating pressures and torque standards set forth by the tool manufacturer and the specifications of the equipment that work is being performed on.

INLET VALVE

The compressor inlet valve is a piston operated disc valve that regulates the inlet opening to control capacity and serving as a check valve at shutdown.

INSPECTION, LUBRICATION, AND MAINTENANCE

This section contains instructions for performing the inspection, lubrication, and maintenance procedures required to maintain the compressor in proper operating condition. The importance of performing the maintenance described herein cannot be over emphasized.

The periodic maintenance procedures to be performed on the equipment covered by this manual are listed below. It should be understood that the intervals between inspections specified are maximum interval. More frequent inspections should be made if the unit is operating in a dusty environment, in high ambient temperature, or in other unusual conditions. A planned program of periodic inspection and maintenance will help avoided premature failure and costly repairs. Daily visual inspections should become a routine.

The LUBRICATION AND MAINTENANCE CHART lists serviceable items on this compressor package. The items are listed according to their frequency of maintenance, followed by those items which need only “As Required” maintenance.

The maintenance time intervals are expressed in hours. The hourmeter shows the total number of hours your compressor has run. Use the hourmeter readings for determining your maintenance schedules. Perform the maintenance at multiple intervals of the hours shown. For example, when the hourmeter shows “100” on the dial, all items listed under “EVERY 10 HOURS” should be serviced for the tenth time, and all items under “EVERY 50 HOURS” should be serviced for the second time, and so on.

DANGER

COMPRESSOR MUST BE SHUT DOWN AND COMPLETELY RELIEVED OF PRESSURE PRIOR TO CHECKING FLUID LEVELS. OPEN SERVICE VALVE TO ENSURE RELIEF OF SYSTEM AIR PRESSURE. FAILURE TO COMPLY WITH THIS WARNING MAY CAUSE DAMAGE TO PROPERTY AND SERIOUS BODILY HARM.

LUBRICATION AND MAINTENANCE CHART

INTERVAL	ACTION
PERIODICALLY DURING OPERATION	<ol style="list-style-type: none"> 1. Observe all gauge reading. Note any change from the normal reading and determine the cause. Have necessary repairs made. (NOTE: "NORMAL" is the usual gauge reading when operating at similar conditions on a day to day operation.)
DAILY	<ol style="list-style-type: none"> 1. Check the compressor oil level. 2. Check air filter. Pressure drop indicator while compressor is operating. 3. Check for oil and air leaks. 4. Check safety circuit switches.
EVERY 25 HOURS OR MONTHLY	<ol style="list-style-type: none"> 1. Drain water from compressor oil.
EVERY 500 HOURS OR 6 MONTHS	<ol style="list-style-type: none"> 1. Change compressor oil and replace screen 2. Check compressor shaft seal for leakage. 3. Check air filter piping, fittings and clamps. 4. Check compressor supports. 5. Install new air filter element. (Shorter interval may be necessary under dusty conditions.) 6. Check sump safety valve.
EVERY 1000 HOURS OR 1 YEAR	<ol style="list-style-type: none"> 1. Change coalescing element.
PERIODICALLY OR AS REQUIRED	<ol style="list-style-type: none"> 1. Inspect and clean air filter element. 2. Inspect and replace spin-on coalescer element if necessary. 3. Inspect and clean oil cooler fins.

NOTE: Compressor oil and filter is to be changed after the first 50 hours of operation. After this, normal intervals are to be followed.

LUBRICANT RECOMMENDATIONS

WARNING

IT IS IMPORTANT THAT THE COMPRESSOR OIL BE OF A RECOMMENDED TYPE AND THAT THIS OIL AS WELL AS THE AIR FILTER, OIL FILTER, AND COALESCER ELEMENTS BE INSPECTED AND REPLACED AS STATED IN THIS MANUAL.

THE COMBINATION OF A COALESCER ELEMENT LOADED WITH DIRT AND OXIDIZED OIL PRODUCTS TOGETHER WITH INCREASED AIR VELOCITY AS A RESULT OF THIS CLOGGED CONDITION MAY PRODUCE A CRITICAL POINT WHILE THE MACHINE IS IN OPERATION WHERE IGNITION CAN TAKE PLACE AND COULD CAUSE A FIRE IN THE OIL SUMP.

FAILURE TO COMPLY WITH THIS WARNING MAY CAUSE DAMAGE TO PROPERTY AND SERIOUS BODILY HARM.

The following are general characteristics for a rotary screw lubricant. Due to the impossibility of establishing limits on all physical and chemical properties of lubricants which can affect their performance in the compressor over a broad range of environmental influences, the responsibility for recommending and consistently furnishing a suitable heavy duty lubricant must rest with the individual supplier if they choose not to use the recommended AUTO CRANE rotary screw lubricant. The lubricant supplier's recommendation must, therefore, be based upon not only the following general characteristics, but also upon his own knowledge of the suitability of the recommended lubricant in helical screw type air compressors operating in the particular environment involved.

CAUTION

MIXING DIFFERENT TYPES OR BRANDS OF LUBRICANTS IS NOT RECOMMENDED DUE TO THE POSSIBILITY OF A DILUTION OF THE ADDITIVES OR A REACTION BETWEEN ADDITIVES OF DIFFERENT TYPES.

LUBRICANT RECOMMENDATIONS

LUBRICANT CHARACTERISTICS

1. Flash point 400°F minimum.
2. Pour point -40°F.
3. Contains rust and corrosion inhibitors.
4. Contains foam suppressors.
5. Contains oxidation stabilizer.

NOTE

DUE TO ENVIRONMENTAL FACTORS THE USEFUL LIFE OF ALL “EXTENDED LIFE” LUBRICANTS MAY BE SHORTER THAN QUOTED BY THE LUBRICANT SUPPLIER. AUTO CRANE ENCOURAGES THE USER TO CLOSELY MONITOR THE LUBRICANT CONDITION AND TO PARTICIPATE IN AN OIL ANALYSIS PROGRAM WITH THE SUPPLIER.

NOTE

NO LUBRICANT, HOWEVER GOOD AND/OR EXPENSIVE, CAN REPLACE PROPER MAINTENANCE AND ATTENTION. SELECT AND USE IT WISELY.

MAINTENANCE

If some of the maintenance intervals in the schedule outlined in this manual seem to be rather short, it should be considered that one hour's operation of a compressor is equal to about 40 road miles on an engine. Thus, eight hours operation is equal to 320 road miles, 250 hours is equal to 10,000 road miles, etc.

COMPRESSOR OIL SUMP FILL, LEVEL, AND DRAIN

Before adding or changing compressor oil make sure that the compressor is completely relieved of pressure. Oil is added at the fill cap on the side of the compressor body. A drain valve/hose assembly is provided at the bottom of the compressor body. The proper oil level, when unit is shut down and has had time to settle between the top and the midpoint of the upper oil sightglass. The truck must be level when checking the oil. DO NOT OVERFILL. The oil sump capacity is given in "Compressor Specifications".

DANGER

DO NOT ATTEMPT TO DRAIN CONDENSATE, REMOVE THE OIL LEVEL FILL PLUG, OR BREAK ANY CONNECTION IN THE AIR OR OIL SYSTEM WITHOUT SHUTTING OFF COMPRESSOR AND MANUALLY RELIEVING PRESSURE FROM THE SUMP. FAILURE TO COMPLY WITH THIS WARNING MAY CAUSE DAMAGE TO PROPERTY AND SERIOUS BODILY HARM.

AIR INTAKE FILTER

The air intake filter is a heavy-duty dry type high efficiency filter designed to protect the compressor from dust and foreign objects. Optional two-stage available.

Optional filter is equipped with an evacuator cup for continuous dust ejection while operating and when stopped.

Frequency of maintenance of the filter depends on dust conditions at the operating site. The filter element must be serviced when clogged (maximum pressure drop for proper operation is 15" of water). The filter is equipped with a pressure drop indicator, and the element should be changed based on it's reading first and then by the maintenance intervals outlined.

MAINTENANCE

AIR/OIL COALESCER

The air/oil coalescer employs an element permanently housed within a spin-on canister. This is a single piece unit that requires replacement when it fails to remove the oil from the discharge air, or pressure drop across it exceeds 15 PSI. Dirty oil clogs the element and increases the pressure drop across it.

To replace element proceed as follows:

1. Shutdown compressor and wait for complete blow down (zero pressure).
2. Turn element counterclockwise for removal (viewing element from bottom).
3. Apply a film of fluid directly to seal on the new element.
4. Rotate element clockwise by hand until element contacts seal (viewing element from bottom).
5. Rotate element approximately one more turn clockwise with band wrench near the top of element.
6. Run system and check for leaks.

WARNING

DO NOT SUBSTITUTE ELEMENT. USE ONLY A GENUINE AUTO CRANE REPLACEMENT ELEMENT. THIS ELEMENT IS RATED AT 200 PSI WORKING PRESSURE. USE OF ANY OTHER ELEMENT MAY BE HAZARDOUS AND COULD IMPAIR THE PERFORMANCE AND RELIABILITY OF THE COMPRESSOR, POSSIBLY VOIDING THE WARRANTY AND/OR RESULTING IN DAMAGE TO PROPERTY AND SERIOUS BODILY HARM.

COALERSCER OIL RETURN

This originates at the bottom of the air/oil coalescer and flows through a special recovery pipe and venturi nozzle. If the coalerscer starts to fill with oil there is a good chance the venturi or pipe has been plugged. Consult factory for cleaning instructions.

MAINTENANCE

OIL FILTER

The compressor oil filter is a throwaway type cartridge. It is designed with a built-in bypass so that if there is a large restriction, due to cold oil or clogged element, the compressor will still be lubricated.

To replace filter proceed as follows:

1. Make sure system pressure is relieved.
2. Unscrew with 14mm allen wrench.
3. Remove oil filter from housing.
4. Replace the oil filter screen element.
5. Reinsert oil filter screen into housing and tighten with 14mm allen wrench.
6. Add oil (total system takes one gallon), re-tighten filler cap.
7. Check for leaks in operation.

WARNING

DO NOT SUBSTITUTE ELEMENT. USE ONLY A GENUINE AUTO CRANE REPLACEMENT ELEMENT. USE OF ANY OTHER ELEMENT MAY BE HAZARDOUS AND COULD IMPAIR THE PERFORMANCE AND RELIABILITY OF THE COMPRESSOR, POSSIBLY VOIDING THE WARRANTY AND/OR RESULTING IN DAMAGE TO PROPERTY AND SERIOUS BODILY HARM.

HYDRAULIC OIL COOLER AND COMPRESSOR OIL COOLER COMBINATION

The interior of the oil cooler should be cleaned when the pressure drop across it at full flow exceeds 25 PSI. The following procedure has been recommended by the vendor who supplies the cooler:

1. Remove cooler.
2. Circulate a suitable solvent to dissolve and remove varnish and sludge.
3. Flush generously with compressor lubricant (compressor oil cooler section only, use hydraulic oil to flush the hydraulic cooler portion on the combo cooler).
4. Once the coolers are reinstalled, fill the compressor and hydraulic systems with the proper fluids to their appropriate levels.

MAINTENANCE

SHAFT SEAL

SHAFT SEAL INSTALLATION INSTRUCTIONS:

1. Remove hydraulic motor, drive coupling and adapter housing from face of compressor.
2. Remove coupling hub from compressor shaft.
3. Remove 4 screws from shaft seal cover and press seal out.
4. Pull seal wear sleeve off shaft with puller.
5. Clean shaft surface removing all burrs from shaft where the wear sleeve gets installed.
6. Press new wear sleeve on to shaft. Oil heating new wear sleeve to 212°F approximately aids in the installation of this ring.
7. Press new seal into housing with seal assembly tool, until contact with snapping.
8. Temporarily install new seal installation cone over shaft to protect seal during reinstallation.
9. Reinstall cover.
10. Reverse steps 2 then 1.

TROUBLESHOOTING

This section contains instructions for troubleshooting the equipment following a malfunction.

The troubleshooting procedures to be performed on the equipment are listed below. Each symptom of trouble for a component or system is followed by a list of probable causes of the trouble and suggested procedures to be followed to identify the cause.

In general, the procedures listed should be performed in the order in which they are listed, although the order may be varied if the need is indicated by conditions under which the trouble occurred. In any event, the procedures which can be performed in the least amount of time and with the least amount of removal or disassembly of parts, should be performed first.

UNPLANNED SHUTDOWN

When the operation of the machine has been interrupted by an unexplained shutdown, check the following:

1. Check the fuel level and truck dash gauges and indications for possible engine problems.
2. Check the compressor discharge temperature/switchgauge. If the latching relay circuit is tripped the 12VDC solenoid will lose power and divert hydraulic oil back to the reservoir. The compressor blowdown pressure switch and the temperature switchgauge will not allow power to the hydraulic solenoid until the air has blown down and the temperature has dropped into its normal operating range and the push button has been re-set. Take compressor in for service once a high temperature shutdown has occurred. Failure to do so will void your warranty.
3. Check that the compressor oil is at proper level.
4. Check oil cooler for dirt, slush, ice on the fins, or any other obstructions to the cooling air flow.
5. Make a thorough external check for any cause of shutdown such as broken hose, broken oil lines, loose or broken wire, etc.

TROUBLESHOOTING

IMPROPER DISCHARGE PRESSURE

1. If discharge pressure is too low, check the following:
 - A. Too much air demand. (Air tools require more air than what the compressor can produce, air tools are free wheeling without resistance.)
 - B. Service valve wide open to atmosphere.
 - C. Leaks in service line.
 - D. Restricted compressor inlet air filter.
 - E. Faulty control system operation (i.e.N.O. regulated air solenoid is allowing air through all the time.)
 - F. Furnas Switch is not closing at 115 psi.
 - G. Low compressor oil level.
2. If discharge pressure is too high, safety valve blows, or system shuts down on high pressure, check the following:
 - A. Faulty discharge pressure swichgauge.
 - B. Coalescer plugged up.
 - C. Faulty safety valve.
 - D. N.O. regulated air solenoid is not opening.
 - E. Furnas switch is not opening at 150 psi.
3. Sump relief valve activates:
 - A. Inlet valve leaking or open.
 - B. Faulty relief valve.
 - C. Faulty Furnes switch, or N.O. regulated air solenoid, or pressure switchgauge.

SUMP PRESSURE DOES NOT BLOW DOWN

If after the compressor is shutdown, pressure does not automatically blow down, check for:

1. Automatic blow down valve may be inoperative.
2. Blockage in air line from side of inlet valve to blow down valve pilot port 1.
3. Blow down valve orifice is clogged.

OIL CONSUMPTION

Abnormal oil consumption or oil in service line, check for the following:

1. Over filling of oil sump.
2. Leaking oil lines or oil cooler.
3. Plugged oil return line: check nozzle beneath the sightglass.
4. Defective coalescer element.
5. Compressor shaft seal leakage.

TROUBLESHOOTING

COALESCER PLUGGING

If the coalescer element has to be replaced frequently because it is plugging up, it is an indication that foreign material may be entering the compressor inlet or the compressor oil is breaking down.

Compressor oil can break down prematurely for a number of reasons.

(1) Extreme operating temperature, (2) negligence in draining condensate from oil sump, (3) using the improper type of oil, (4) dirty oil, (5) oil return nozzle plugged.

The complete air inlet system should be checked for leaks.

HIGH COMPRESSOR DISCHARGE TEMPERATURE

1. Check compressor oil level. Add oil if required (see Section for oil specifications).
2. Check thermal valve operation.
3. Clean outside of oil cooler.
4. Clean oil system (cooler) internally.
5. Check fan relay harness.

COMPRESSOR OPERATION

Before starting the compressor, read this section thoroughly. Familiarize yourself with the controls and indicators, their purpose, location, and use.

CONTROL OR INDICATOR	PURPOSE
TEMPERATURE SWITCHGAUGE	Monitors the temperature of the air/fluid mixture leaving the compressor. The normal reading should be approximately 175 to 210 degrees F. Sends signal to relay when the compressor reaches 240 degrees temperature and the compressor will shut down.
PRESSURE SWITCHGAUGE	Monitors the pressure inside the sump tank. When the pressure reaches 165 PSI the compressor will shut down
HOURMETER	Indicator accumulated hours of actual compressor operation.
FLUID LEVEL SIGHTGLASSES	Indicates fluid level in the sump. Proper level should be between midpoint and top of the upper sightglass. Check this level when the compressor is disengaged and the vehicle is parked on level ground.
PRESSURE RELIEF VALVE	Vents sump pressure to the atmosphere if the pressure inside the sump exceeds 175 PSI.
COMPRESSOR INLET CONTROL VALVE	Regulates the amount of air intake in accordance with the amount of compressed air being used. Isolates fluid in compressor unit on shutdown.
FURNAS SWITCH	Senses air pressure from sump to provide automatic control of the N.O.regulated air solenoid.
N.O. REGULATED AIR SOLENOID	Sends air pressure to intake valve for automatic regulation.
BLOW DOWN VALVE	Vents the sump pressure to the atmosphere at shut down.
MINIMUM PRESSURE VALVE	Resticts air flow to balance sump and service air pressure. Assures a minimum of 65 PSI to maintain compressor lubrication.

COMPRESSOR OPERATION

OPERATING CONDITIONS

The following conditions should exist for maximum performance of the compressor. The truck should be as close to level as possible when operating. The compressor will operate on a 15 degree sideward and lengthwise tilt without any adverse problems. Operation in ambient temperatures above 100°F (38°C) may experience high temperature shutdown.

NOTE

IF THE COMPRESSOR IS BEING USED TO POWER SANDBLASTING EQUIPMENT, OR AN AIR STORAGE TANK, USE A CHECK VALVE DIRECTLY AFTER THE MINIMUM PRESSURE VALVE TO PREVENT BACKFLOW INTO THE SUMP. THIS CHECK VALVE SHOULD HAVE A MAXIMUM PRESSURE DROP RATING OF 2 PSIG (13.78kPa) OPERATING AND A CAPACITY RATING EQUAL TO THE COMPRESSOR.

NOTE

A COMPRESSOR SERVICE VALVE SHOULD BE LOCATED TO THE HOSE REEL INLET OR THE CUSTOMERS AIR CONNECTION PORT WHEN A HOSE REEL IS NOT USED. TYPICAL PLUMBING FROM THE MACHINES AIR OUTLET PORT IN THE FOLLOWING ORDER:

- 1. MINIMUM PRESSURE ORIFICE.**
- 2. CHECK VALVE.**
- 3. AIR TANK (WHEN USED).**
- 4. OSHA VALVE**
- 5. SERVICE VALVE**
- 6. MOISTURE TRAP/GAUGE/OILER COMBINATION (WHEN USED).**
- 7. HOSE REEL (WHEN USED).**


**PARTS AND
ILLUSTRATION
SECTION**

CONTROL HOSE PORT CALL OUTS

PORT	DESCRIPTION
A	AIR SIGNAL SUPPLY, AT SHUTDOWN ONLY TO PILOT PORT 'P' ON BLOWDOWN VALVE. EXHAUSTS SUMP AIR.
B	OUTLET REGULATED AIR PRESSURE SIGNAL FROM N.O. REGULATOR SOLENOID VALVE. AIR PRESSURE IS PRESENT IN THIS LINE ONLY WHEN DOWN STREAM SERVICE AIR REACHES 150 PSI OR MORE. AIR PRESSURE FROM THIS PORT CLOSES THE INLET VALVE. WHEN THERE IS NO AIR PRESSURE IN THIS LINE THE INLET VALVE IS OPEN.
B 1	AIR SIGNAL FROM "B" N.O. REGULATOR SOLENOID VALVE TO COMPRESSOR INLET VALVE REGULATING PORT. AIR SIGNAL MODULATES AIR OPENING FROM OPEN TO CLOSED WHEN THERE IS NO DEMAND FOR AIR.
C	SYSTEM DRY AIR PRESSURE FEED FROM SUMP TANK. THIS LINE FEEDS BOTH THE N.O. REGULATOR SOLENOID VALVE AND THE 'I' PORT ON THE BLOWDOWN VALVE.
P	PILOT PORT 'P' ON BLOWDOWN VALVE.
I	'I' PORT ON THE BLOWDOWN VALVE.

FURNAS SWITCH DESCRIPTION


The Furnas switch is a N.C. electrical switch set to open at 150 PSI and set to close at 115 PSI. The Furnas switch controls the N.O. regulator solenoid. If service air pressure is under 150 PSI, the Furnas switch will not trip keeping the N.O. inlet valve open and the compressor making air. If the service valve is closed or the tool using the air is off, service line pressure will rise over 150 PSI, this will trip the Furnas switch to open. The regulator solenoid will open and send air pressure to the inlet valve to close. With the inlet valve closed, the compressor will stop making air. If the tool is turned on or the service valve is opened, the service line pressure will drop. When the pressure falls to 115 PSI The Furnas switch will close energizing the N.O. regulator solenoid closing off the air supply to the inlet valve, this will allow the inlet valve to open and the compressor will start making air to meet the demand.

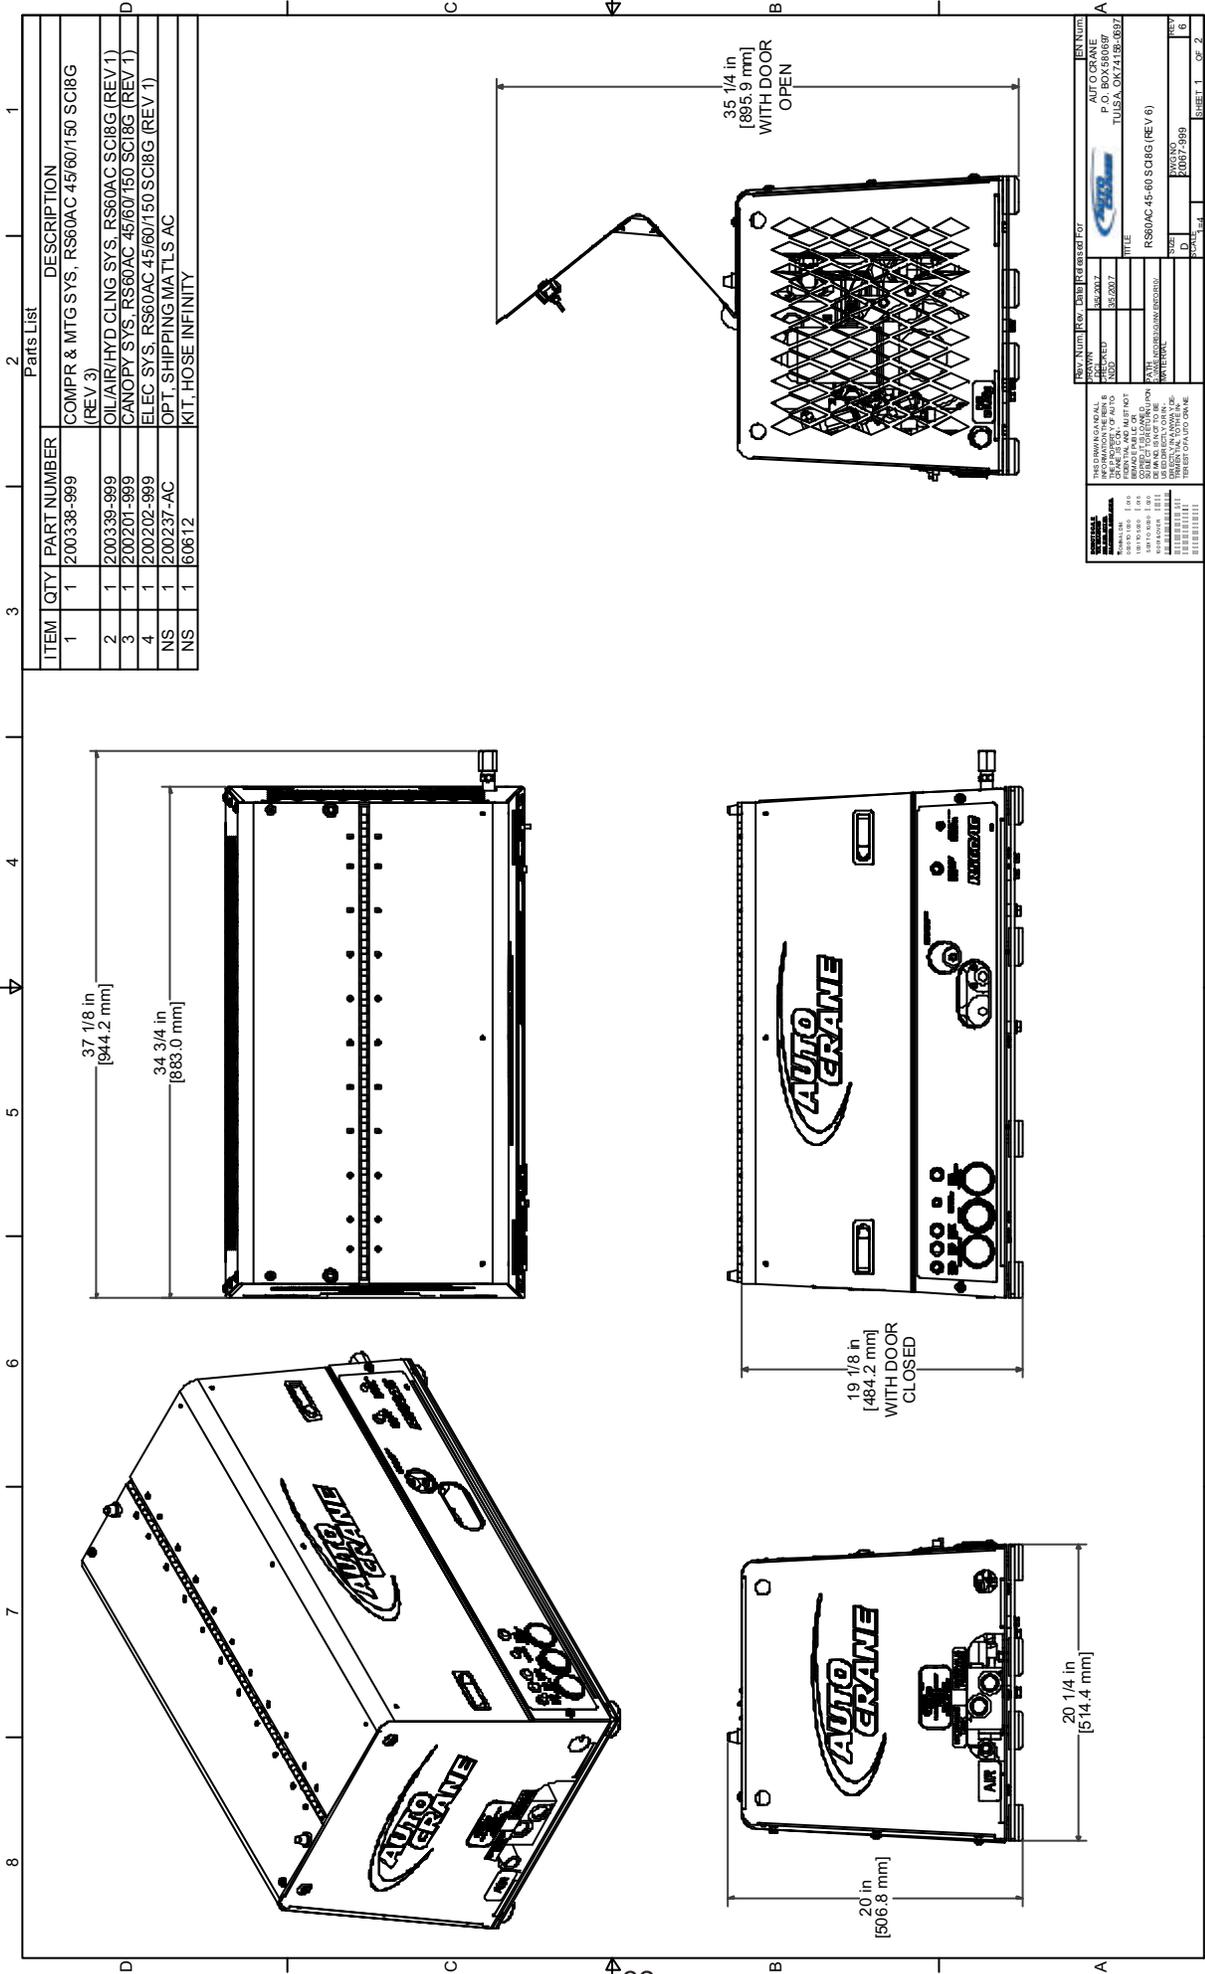

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	200338-999	COMPR & MTG SYS, RS60AC 45/60/150 SCI8G (REV. 3)
2	1	200339-999	OIL/AIR/HYD CLNG SYS, RS60AC SCI8G (REV. 1)
3	1	200201-999	CANOPY SYS, RS60AC 45/60/150 SCI8G (REV. 1)
4	1	200202-999	ELEC SYS, RS60AC 45/60/150 SCI8G (REV. 1)
NS	1	200237-AC	OPT. SHIPPING MATLS AC
NS	1	60612	KIT, HOSE INFINITY


REV. NUM.	REV. DATE	PREPARED FOR	REV. NUM.
000001	03/2007	TRUSS & MOUNTING	000001
000002	03/2007	TRUSS & MOUNTING	000002
000003	03/2007	TRUSS & MOUNTING	000003
000004	03/2007	TRUSS & MOUNTING	000004
000005	03/2007	TRUSS & MOUNTING	000005
000006	03/2007	TRUSS & MOUNTING	000006
000007	03/2007	TRUSS & MOUNTING	000007
000008	03/2007	TRUSS & MOUNTING	000008
000009	03/2007	TRUSS & MOUNTING	000009
000010	03/2007	TRUSS & MOUNTING	000010
000011	03/2007	TRUSS & MOUNTING	000011
000012	03/2007	TRUSS & MOUNTING	000012
000013	03/2007	TRUSS & MOUNTING	000013
000014	03/2007	TRUSS & MOUNTING	000014
000015	03/2007	TRUSS & MOUNTING	000015
000016	03/2007	TRUSS & MOUNTING	000016
000017	03/2007	TRUSS & MOUNTING	000017
000018	03/2007	TRUSS & MOUNTING	000018
000019	03/2007	TRUSS & MOUNTING	000019
000020	03/2007	TRUSS & MOUNTING	000020
000021	03/2007	TRUSS & MOUNTING	000021
000022	03/2007	TRUSS & MOUNTING	000022
000023	03/2007	TRUSS & MOUNTING	000023
000024	03/2007	TRUSS & MOUNTING	000024
000025	03/2007	TRUSS & MOUNTING	000025
000026	03/2007	TRUSS & MOUNTING	000026
000027	03/2007	TRUSS & MOUNTING	000027
000028	03/2007	TRUSS & MOUNTING	000028
000029	03/2007	TRUSS & MOUNTING	000029
000030	03/2007	TRUSS & MOUNTING	000030
000031	03/2007	TRUSS & MOUNTING	000031
000032	03/2007	TRUSS & MOUNTING	000032
000033	03/2007	TRUSS & MOUNTING	000033
000034	03/2007	TRUSS & MOUNTING	000034
000035	03/2007	TRUSS & MOUNTING	000035
000036	03/2007	TRUSS & MOUNTING	000036
000037	03/2007	TRUSS & MOUNTING	000037
000038	03/2007	TRUSS & MOUNTING	000038
000039	03/2007	TRUSS & MOUNTING	000039
000040	03/2007	TRUSS & MOUNTING	000040
000041	03/2007	TRUSS & MOUNTING	000041
000042	03/2007	TRUSS & MOUNTING	000042
000043	03/2007	TRUSS & MOUNTING	000043
000044	03/2007	TRUSS & MOUNTING	000044
000045	03/2007	TRUSS & MOUNTING	000045
000046	03/2007	TRUSS & MOUNTING	000046
000047	03/2007	TRUSS & MOUNTING	000047
000048	03/2007	TRUSS & MOUNTING	000048
000049	03/2007	TRUSS & MOUNTING	000049
000050	03/2007	TRUSS & MOUNTING	000050
000051	03/2007	TRUSS & MOUNTING	000051
000052	03/2007	TRUSS & MOUNTING	000052
000053	03/2007	TRUSS & MOUNTING	000053
000054	03/2007	TRUSS & MOUNTING	000054
000055	03/2007	TRUSS & MOUNTING	000055
000056	03/2007	TRUSS & MOUNTING	000056
000057	03/2007	TRUSS & MOUNTING	000057
000058	03/2007	TRUSS & MOUNTING	000058
000059	03/2007	TRUSS & MOUNTING	000059
000060	03/2007	TRUSS & MOUNTING	000060
000061	03/2007	TRUSS & MOUNTING	000061
000062	03/2007	TRUSS & MOUNTING	000062
000063	03/2007	TRUSS & MOUNTING	000063
000064	03/2007	TRUSS & MOUNTING	000064
000065	03/2007	TRUSS & MOUNTING	000065
000066	03/2007	TRUSS & MOUNTING	000066
000067	03/2007	TRUSS & MOUNTING	000067
000068	03/2007	TRUSS & MOUNTING	000068
000069	03/2007	TRUSS & MOUNTING	000069
000070	03/2007	TRUSS & MOUNTING	000070
000071	03/2007	TRUSS & MOUNTING	000071
000072	03/2007	TRUSS & MOUNTING	000072
000073	03/2007	TRUSS & MOUNTING	000073
000074	03/2007	TRUSS & MOUNTING	000074
000075	03/2007	TRUSS & MOUNTING	000075
000076	03/2007	TRUSS & MOUNTING	000076
000077	03/2007	TRUSS & MOUNTING	000077
000078	03/2007	TRUSS & MOUNTING	000078
000079	03/2007	TRUSS & MOUNTING	000079
000080	03/2007	TRUSS & MOUNTING	000080
000081	03/2007	TRUSS & MOUNTING	000081
000082	03/2007	TRUSS & MOUNTING	000082
000083	03/2007	TRUSS & MOUNTING	000083
000084	03/2007	TRUSS & MOUNTING	000084
000085	03/2007	TRUSS & MOUNTING	000085
000086	03/2007	TRUSS & MOUNTING	000086
000087	03/2007	TRUSS & MOUNTING	000087
000088	03/2007	TRUSS & MOUNTING	000088
000089	03/2007	TRUSS & MOUNTING	000089
000090	03/2007	TRUSS & MOUNTING	000090
000091	03/2007	TRUSS & MOUNTING	000091
000092	03/2007	TRUSS & MOUNTING	000092
000093	03/2007	TRUSS & MOUNTING	000093
000094	03/2007	TRUSS & MOUNTING	000094
000095	03/2007	TRUSS & MOUNTING	000095
000096	03/2007	TRUSS & MOUNTING	000096
000097	03/2007	TRUSS & MOUNTING	000097
000098	03/2007	TRUSS & MOUNTING	000098
000099	03/2007	TRUSS & MOUNTING	000099
000100	03/2007	TRUSS & MOUNTING	000100

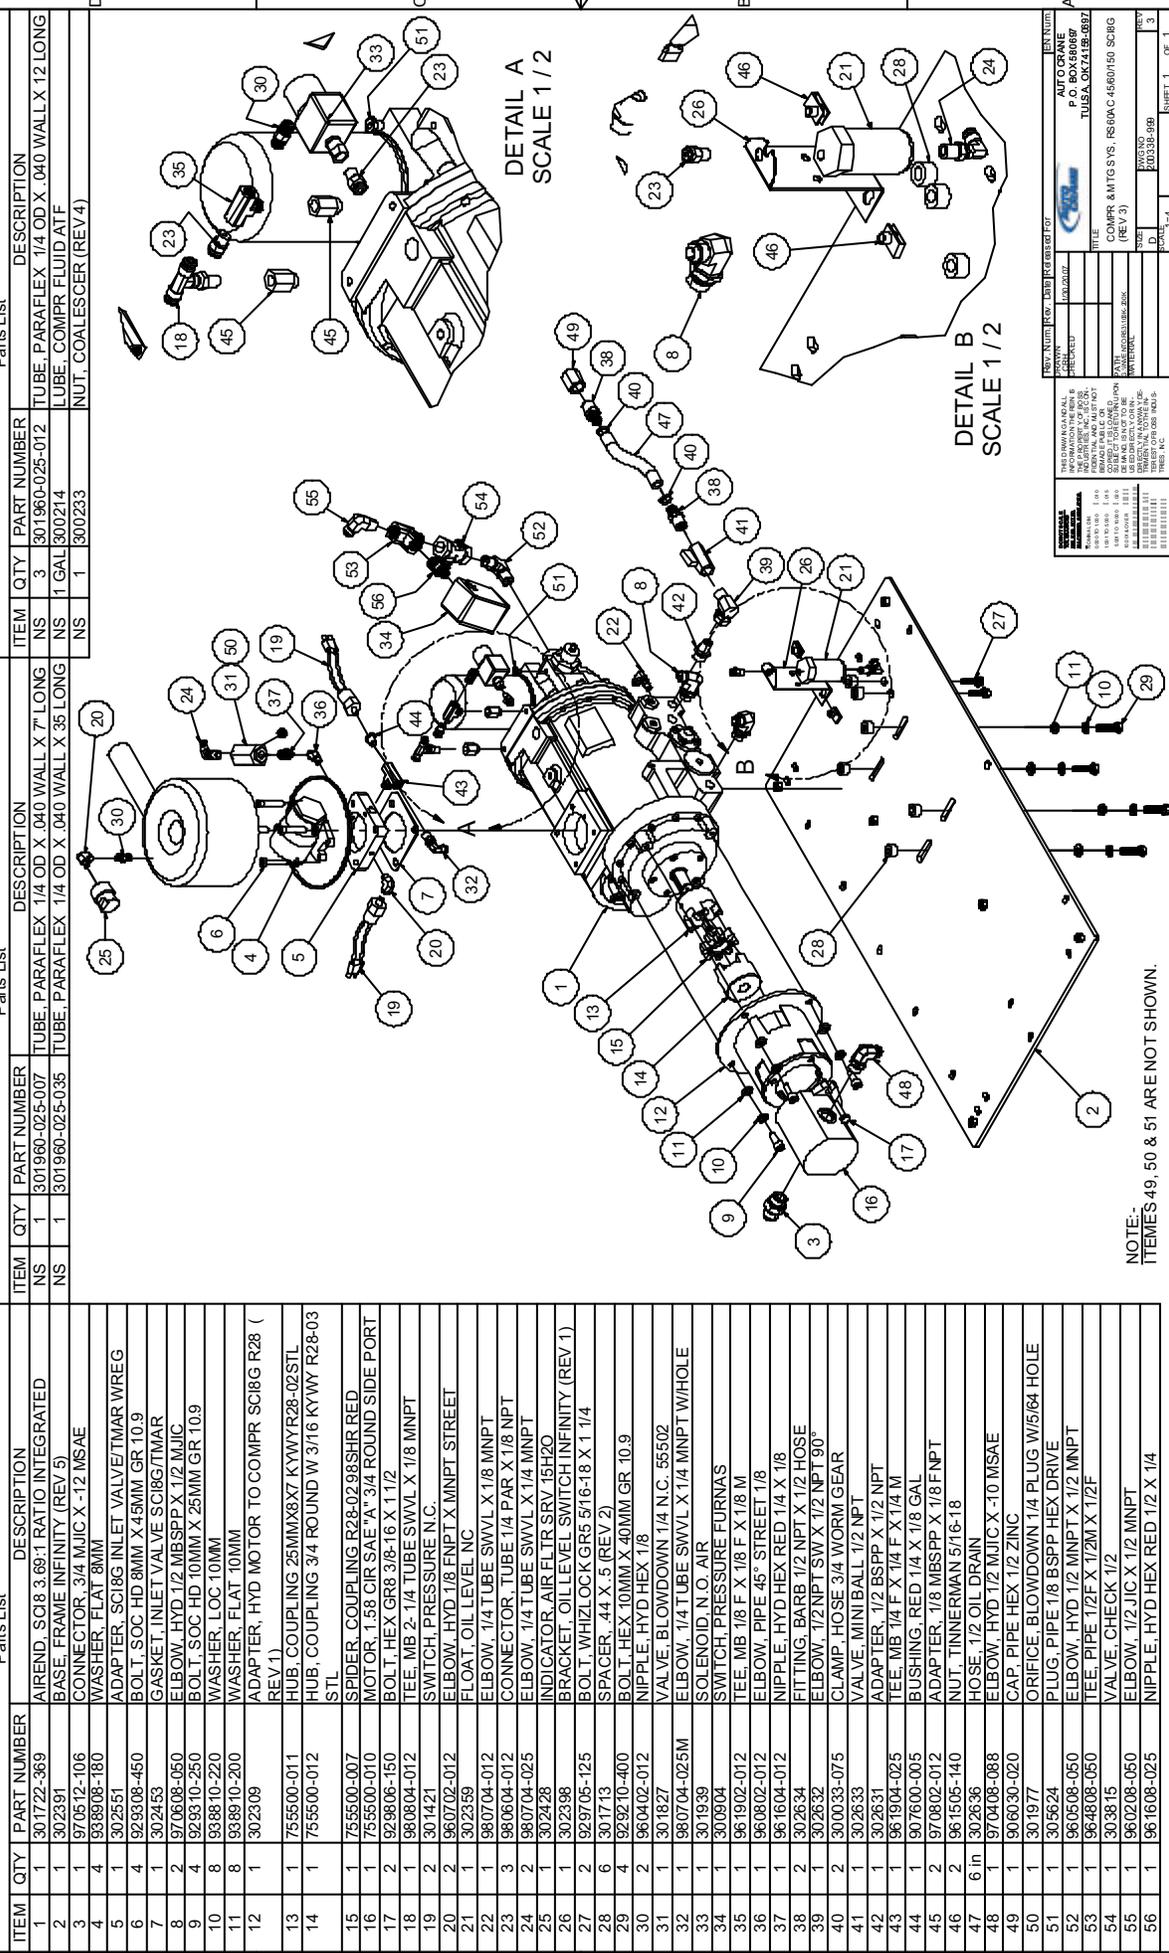

Parts List			Parts List			Parts List					
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	301722-369	AIREND, SC8 3:69:1 RATIO INTEGRATED	NS	1	301960-025-007	TUBE, PARAFLEX 1/4 OD X .040 WALL X 7' LONG	NS	3	301960-025-012	TUBE, PARAFLEX 1/4 OD X .040 WALL X 12 LONG
2	1	302391	BASE, FRAME INFINITY (REV 5)	NS	1	301960-025-035	TUBE, PARAFLEX 1/4 OD X .040 WALL X 35 LONG	NS	1	300214	LUBE, COMPR FLUID ATF
3	1	970512-106	CONNECTOR, 3/4 MJIC X -12 MSAE	NS	1	300233	NUT, COALESCE (REV 4)				
4	4	938908-180	WASHER, FLAT .8MM								
5	1	302551	ADAPTER, SC8&G INLET VALVE/TMAR WREG								
6	4	929308-450	BOLT, SOC HD 8MM X 45MM GR 10.9								
7	1	302453	GASKET, INLET VALVE SC8&G/TMAR								
8	2	970608-050	ELBOW, HYD 1/2 MBSPP X 1/2 MJIC								
9	4	929310-250	BOLT, SOC HD 10MM X 25MM GR 10.9								
10	8	938810-220	WASHER, LOC 10MM								
11	8	938810-200	WASHER, FLAT 10MM								
12	1	302309	ADAPTER, HYD MOTOR TO COMPR SC8&G R28 (REV 1)								
13	1	755500-011	HUB, COUPLING 25MMX8X7 KYWR28-02STL								
14	1	755500-012	HUB, COUPLING 3/4 ROUND W 3/16 KYWY R28-03 STL								
15	1	755500-007	SPIDER, COUPLING R28-02 98SHR RED								
16	1	755500-010	MOTOR, 1.38 CIR SAE "A" 3/4 ROUND SIDE PORT								
17	2	929806-150	BOLT, HEX GR8 3/8-16 X 1 1/2								
18	1	980804-012	TEE, MB 2-1/4 TUBE SWVL X 1/8 MNPT								
19	2	301421	SWITCH, PRESSURE N.C.								
20	2	960702-012	ELBOW, HYD 1/8 FNPT X MNPT STREET								
21	1	302359	FLOAT, OIL LEVEL NC								
22	1	980704-012	ELBOW, 1/4 TUBE SWVL X 1/8 MNPT								
23	3	980604-012	CONNECTOR, TUBE 1/4 PAR X 1/8 NPT								
24	2	980704-025	ELBOW, 1/4 TUBE SWVL X 1/4 MNPT								
25	1	302428	INDICATOR, AIR FLTR SRV 15H20								
26	1	302398	BRACKET, OIL LEVEL SWITCH INFINITY (REV 1)								
27	2	929705-125	BOLT, WHZ LOCK GR5 5/16-18 X 1 1/4								
28	6	301713	SPACER, 44 X .5 (REV 2)								
29	4	929210-400	BOLT, HEX 10MM X 40MM GR 10.9								
30	2	960402-012	NIPPLE, HYD HEX 1/8								
31	1	301827	VALVE, BLOWDOWN 1/4 N.C. 55502								
32	1	980704-025M	ELBOW, 1/4 TUBE SWVL X 1/4 MNPT WHOLE								
33	1	301939	SOLENOID N.O. AIR								
34	1	300904	SWITCH, PRESSURE FURNAS								
35	1	961902-012	TEE, MB 1/8 F X 1/8 F X 1/8 M								
36	1	960802-012	ELBOW, PIPE 45° STREET 1/8								
37	1	961604-012	NIPPLE, HYD HEX RED 1/4 X 1/8								
38	2	302634	FITTING, BARB 1/2 NPT X 1/2 HOSE								
39	1	302632	ELBOW, 1/2 NPT SW X 1/2 NPT 90°								
40	2	300033-075	CLAMP, HOSE 3/4 WORM GEAR								
41	1	302633	VALVE, MINI BALL 1/2 NPT								
42	1	302631	ADAPTER, 1/2 BSPP X 1/2 NPT								
43	1	961904-025	TEE, MB 1/4 F X 1/4 F X 1/4 M								
44	1	907600-005	BUSHING, RED 1/4 X 1/8 GAL								
45	2	970802-012	ADAPTER, 1/8 MBSPP X 1/8 FNPT								
46	2	961505-140	NUT, TINNERMAN 5/16-18								
47	6 in	302636	HOSE, 1/2 OIL DRAIN								
48	1	970408-088	ELBOW, HYD 1/2 MJIC X -10 MSAE								
49	1	906030-020	CAP, PIPE HEX 1/2 ZINC								
50	1	301977	ORIFICE, BLOWDOWN 1/4 PLUG W/5/64 HOLE								
51	1	305624	PLUG, PIPE 1/8 BSPP HEX DRIVE								
52	1	960508-050	ELBOW, HYD 1/2 MNPT X 1/2 MNPT								
53	1	964808-050	TEE, PIPE 1/2 F X 1/2 M X 1/2 F								
54	1	303815	VALVE, CHECK 1/2								
55	1	960208-050	ELBOW, 1/2 JIC X 1/2 MNPT								
56	1	961608-025	NIPPLE, HYD HEX RED 1/2 X 1/4								

NOTE: ITEMS 49, 50 & 51 ARE NOT SHOWN.

REVISED BY:	DATE:	REVISED FOR:
DESIGNED BY:	DATE:	DESIGNED FOR:
CHECKED BY:	DATE:	CHECKED FOR:
APPROVED BY:	DATE:	APPROVED FOR:
PROJECT:	NO.:	PROJECT:
TITLE:	NO.:	TITLE:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:
DRAWN BY:	NO.:	DRAWN BY:
CHECKED BY:	NO.:	CHECKED BY:
APPROVED BY:	NO.:	APPROVED BY:
DATE:	NO.:	DATE:
SCALE:	NO.:	SCALE:

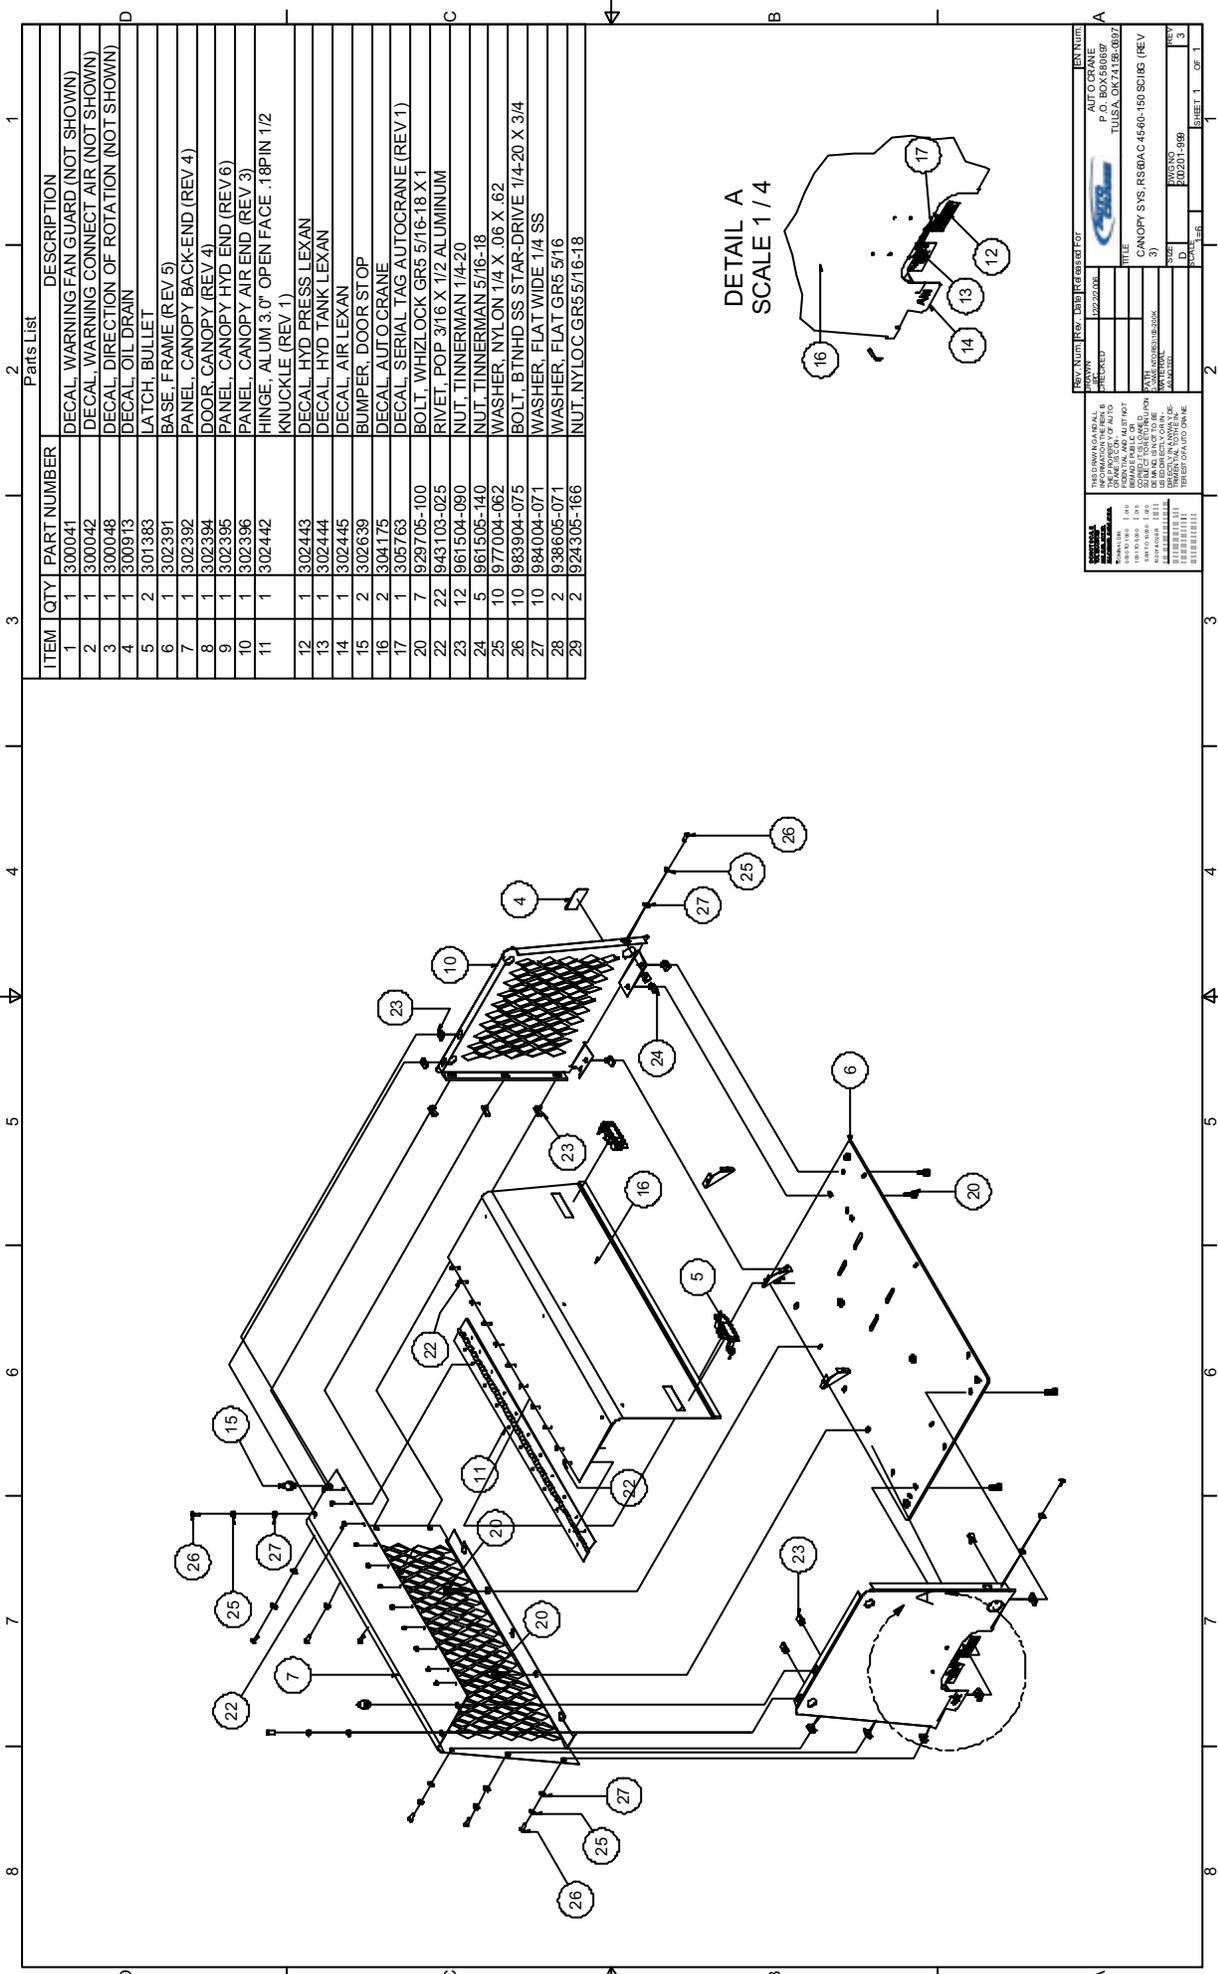

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	300041	DECAL, WARNING FAN GUARD (NOT SHOWN)
2	1	300042	DECAL, WARNING CONNECT AIR (NOT SHOWN)
3	1	300048	DECAL, DIRECTION OF ROTATION (NOT SHOWN)
4	1	300913	DECAL, OIL DRAIN
5	2	301383	LATCH, BULLET
6	1	302391	BASE, FRAME (REV.5)
7	1	302392	PANEL, CANOPY BACK-END (REV.4)
8	1	302394	DOOR, CANOPY (REV.4)
9	1	302395	PANEL, CANOPY HYD END (REV.6)
10	1	302396	PANEL, CANOPY AIR END (REV.3)
11	1	302442	HINGE, ALUM 3/0" OPEN FACE .18PIN 1/2 KNUCKLE (REV.1)
12	1	302443	DECAL, HYD PRESS LEXAN
13	1	302444	DECAL, HYD TANK LEXAN
14	1	302445	DECAL, AIR LEXAN
15	2	302639	BUMPER, DOOR STOP
16	2	304175	DECAL, AUTO CRANE
17	1	305763	DECAL, SERIAL TAG AUTO CRANE (REV.1)
20	7	929705-100	BOLT, WHIZLOCK GR5 5/16-18 X 1
22	22	943103-025	RIVET, POP 3/16 X 1/2 ALUMINUM
23	12	961504-090	NUT, TINNEMAN 1/4-20
24	5	961505-140	NUT, TINNEMAN 5/16-18
25	10	977004-062	WASHER, NYLON 1/4 X .06 X .62
26	10	983904-075	BOLT, BTNH D SS STAR-DRIVE 1/4-20 X 3/4
27	10	984004-071	WASHER, FLAT WIDE 1/4 SS
28	2	938605-071	WASHER, FLAT GR5 5/16
29	2	924305-166	NUT, NYLOC GR5 5/16-18


DETAIL A
SCALE 1 / 4

THIS DRAWING IS ALL RIGHTS RESERVED. IT IS THE PROPERTY OF AUTOCRANE, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

REV. NUM. REV. DATE FOR REVISION FOR: AUTOCRANE
 00222222L P TULSA, OK 74116-0977

TITLE: CANOPY SYS. RS/BAC 4500-150 SC/18 (REV 3)
 D: 002015-090
 SHEET 1 OF 1


4		3		2		1	
Parts List		Parts List		Parts List		Parts List	
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	302393	PANEL, GAUGE & LIGHTS (REV 4)	10	1	302486	BREAKER, PANEL MTG RESET
2	1	300074	GAUGE, HOURMETER	11	1	302608	BRACKET, RELAY MTG (REV 6)
3	1	960602-012	TEE, HYD F X F X F 1/8 300PSI	12	3	929705-100	BOLT, WHIZLOCK GR5 5/16-18 X 1
4	1	980704-012	ELBOW, 1/4 TUBE SWVL X 1/8 MNPT	13	3	961505-140	NUT, TINNERMAN 5/16-18
5	1	300909-025	BREAKER, 25 AMP CIRCUIT	14	1	302780	TIMER, RELAY 12V 30 SEC.N.C.
6	4	300211	RELAY, POWER	15	1	301422	SWITCH, PRESS NO 20 PSIW (REV 1)
7	1	302449	LIGHT, INDICATING GREEN	16	2	924200-130	NUT, MACH #6-32
8	2	302450	LIGHT, INDICATING RED	17	2	929102-050	BOLT, HEX GR5 #6-32 X 1/2
9	2	302592	SWITCH, N O MOMENTARY SPST	18	1	304174	DECAL, AUTO CRANE GAUGE PANEL
				19	1	300076-004	SWITCHGAUGE, TMP 4 ft. - 250
				20	1	302678	BRACKET, RELAY HOLDER (REV 2)
				21	1	300075	SWITCHGAUGE, PRESSURE
				22	1	302591	SWITCH, SHUTDOWN 117LF WITHOUT FUSE
				23	7	943103-025	RIVET, POP 3/16 X 1/2 ALUMINUM

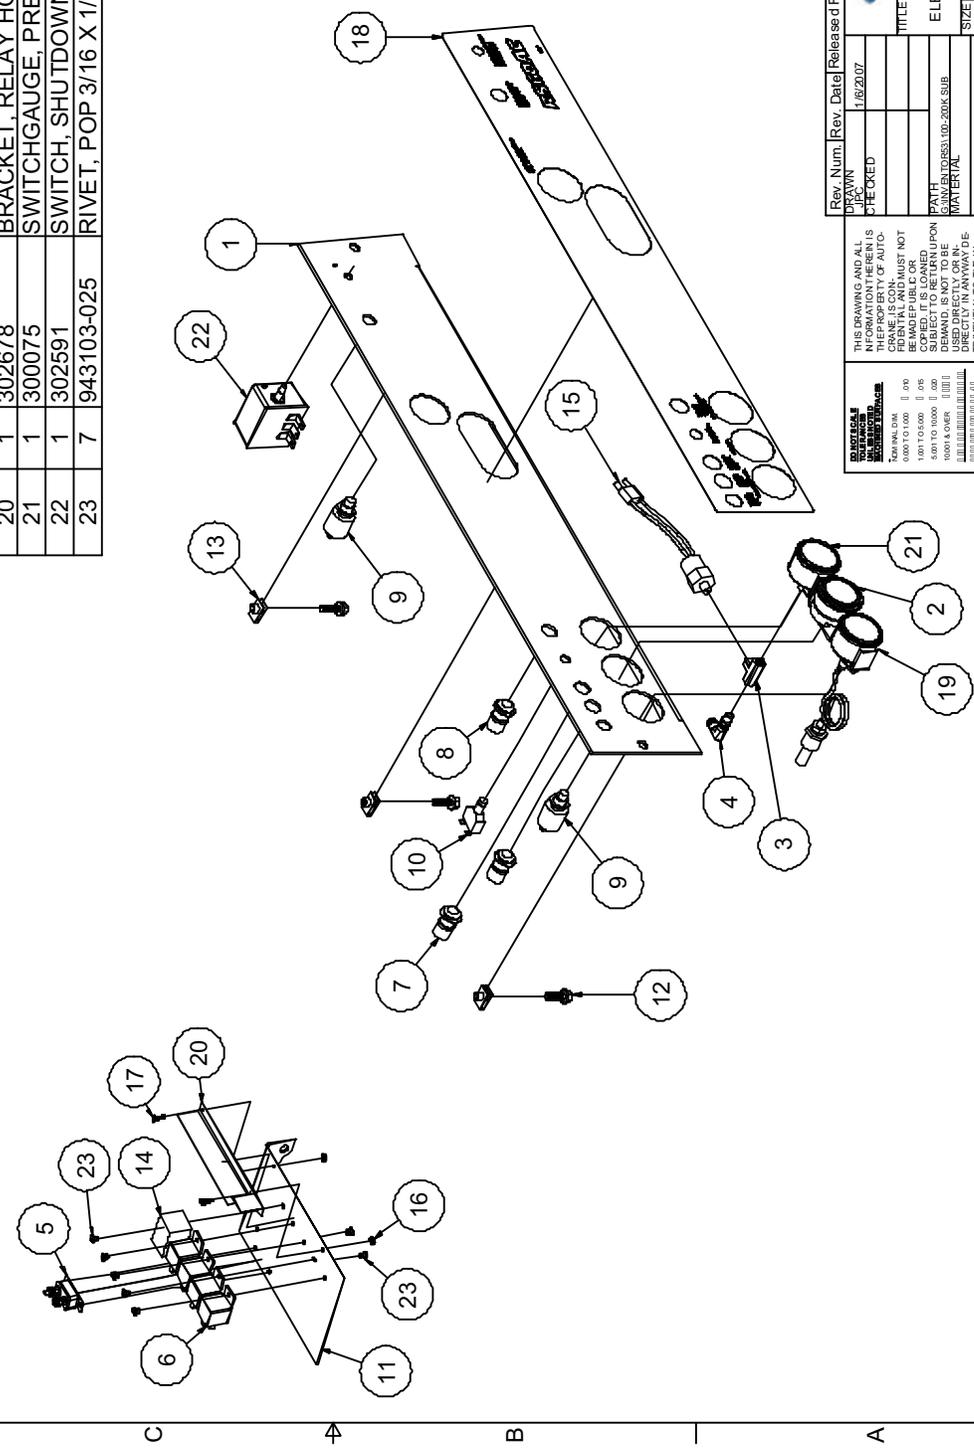

Rev. Num: 1/8/2007
 EN Num: AUTO CRANE
 P.O. BOX 580 697
 TULSA, OK 74158-0697

THIS DRAWING AND ALL INFORMATION HEREIN IS THE PROPERTY OF AUTO CRANE. IT IS CONSIDERED UNCLASSIFIED. IT IS LOANED TO YOU BY DIRECTLY CRANE. IT IS TO BE USED ONLY FOR THE INTEREST OF AUTO CRANE.

DATE: 1/8/2007
 CHECKED: [Signature]
 TITLE: ELEC SYS, RS60AC 45-60-150 SCIBG (REV 2)
 PART NO: 943103-025
 MATERIAL: ALUMINUM
 SIZE: C
 DWG NO: 200202-999
 SCALE: 1=4
 REV: 2
 SHEET 1 OF 1

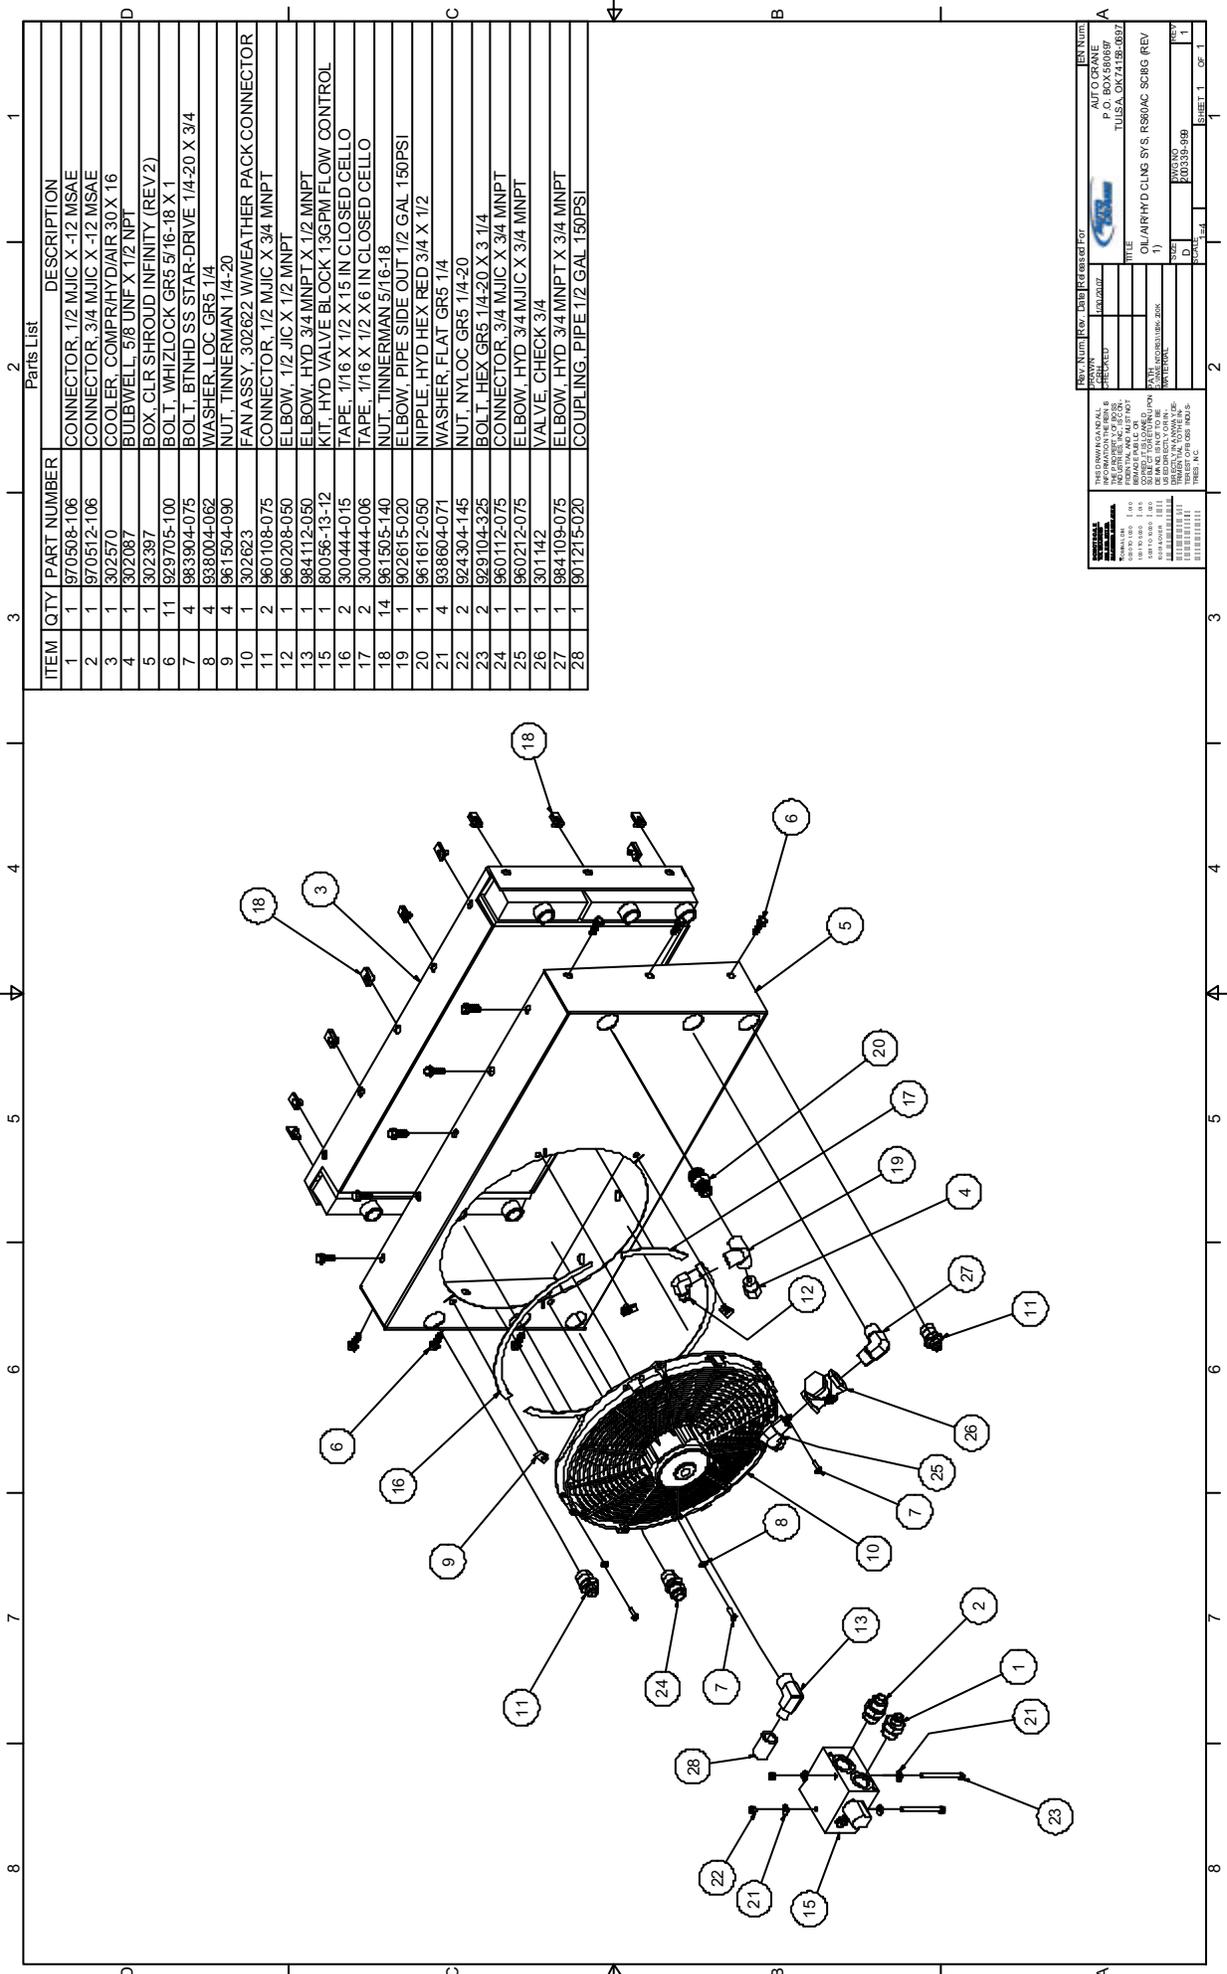

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	970508-106	CONNECTOR, 1/2 MJIC X-12 MSAE
2	1	970512-106	CONNECTOR, 3/4 MJIC X-12 MSAE
3	1	302570	COOLER, COMPRIHYDAIR 30X 16
4	1	302087	BULB WELL, 5/8 UNF X 1/2 NPT
5	1	302397	BOX, CLR SHROUD INFINITY (REV 2)
6	11	929705-100	BOLT, WHIZLOCK GR5 5/16-18 X 1
7	4	983904-075	BOLT, BTNHLD SS STAR-DRIVE 1/4-20 X 3/4
8	4	938004-062	WASHER, LOC GR5 1/4
9	4	961504-090	NUT, TINNERMAN 1/4-20
10	1	302623	FAN ASSY, 302622 W/WEATHER PACK CONNECTOR
11	2	960108-075	CONNECTOR, 1/2 MJIC X 3/4 MNPT
12	1	960208-050	ELBOW, 1/2 JIC X 1/2 MNPT
13	1	984112-050	ELBOW, HYD, 3/4 MNPT X 1/2 MNPT
14	1	98056-13-12	KIT, HYD VALVE BLOCK 13GPM FLOW CONTROL
15	2	300444-015	TAPE, 1/16 X 1/2 X 15 IN CLOSED CELLO
16	2	300444-006	TAPE, 1/16 X 1/2 X 6 IN CLOSED CELLO
17	2	300444-006	TAPE, 1/16 X 1/2 X 6 IN CLOSED CELLO
18	14	961505-140	NUT, TINNERMAN 5/16-18
19	1	902615-020	ELBOW, PIPE SIDE OUT 1/2 GAL 150PSI
20	1	961612-050	NIPPLE, HYD HEX RED 3/4 X 1/2
21	4	938604-071	WASHER, FLAT GR5 1/4
22	2	924304-145	NUT, NYLOC GR5 1/4-20
23	2	929104-325	BOLT, HEX GR5 1/4-20 X 3 1/4
24	1	960112-075	CONNECTOR, 3/4 MJIC X 3/4 MNPT
25	1	960212-075	ELBOW, HYD, 3/4 MJIC X 3/4 MNPT
26	1	301142	VALVE, CHECK 3/4
27	1	984109-075	ELBOW, HYD 3/4 MNPT X 3/4 MNPT
28	1	901215-020	COUPLING, PIPE 1/2 GAL 150PSI

THIS DRAWING IS THE PROPERTY OF AUTOCAD, INC. IT IS TO BE USED FOR THE PROJECT AND NOT BE LOANED, REPRODUCED OR COPIED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF AUTOCAD, INC.

AUTOCAD
 P.O. BOX 590997
 TULSA, OK 74159-0997

TITLE: OIL/AIR/HYD CLING SYS, R800AC SCB6G (REV 1)
 DRAWN BY: J. W. HARRIS
 CHECKED BY: J. W. HARRIS
 DATE: 03/23/98

PART NUMBER: 90339-989
 D: 1
 REV: 1

SHEET 1 OF 1

RECOMMENDED SPARE PARTS LIST

PART NUMBER	DESCRIPTION	QTY
755500-001	ELEMENT, OIL FILTER SCI8	1
755500-002	ELEMENT, AIR FILTER SCI 7/8	1
755500-003	COALESCER, SPIN-ON SCI8	1
755500-004	KIT, REGULATOR REPAIR	1
755500-005	KIT, SHAFT SEAL REPAIR SCI8G	1
755500-006	VALVE, INLET SCI 7/8	1
755500-007	SPIDER, COUPLING	1
755500-008	KIT, HYD MOTOR SHAFT SEAL REPAIR	1
755500-009	VALVE, THERMAL SCI8	1
755500-010	MOTOR, 1.58 CIR SAE "A" 3/4 RO	1
755500-011	HUB, COUPLING 25MMX8X7 KYWYR28	1
755500-012	HUB, COUPLING 3/4 ROUND W 3/16	1

SERVICE QUESTIONNAIRE

DATE: _____

1. Information given by: _____

2. Information received by: _____

3. Has anyone helped you: Yes _____ No _____

4. Distributor: _____

5. End-User: _____

6. Phone Number: _____

7. Make and Model for PTO: _____

8. AUTO CRANE Serial #: _____

9. Make and Model of Engine: _____

10. Engine: _____

11. Transmission: _____

12. Nature of Problem: _____

13. Engine RPM: _____

14. Compressor RPM: _____

15. Action Taken: _____

ADDITIONAL COMMENTS: _____

Instructional Procedures for the Installation of AUTO CRANE INFINITY Geared Rotary Screw Air Compressor


This air compressor should be installed only by those who have been trained and delegated to do so and who have read and understand both the operators' manual and the installation manual. Failure to follow the instructions, procedures, and safety precautions in this manual may result in accidents and injuries.

Install, use, and operate this air compressor only in full compliance with all pertinent O.S.H.A. requirements and all pertinent Federal, State, and Local codes or requirements and with AUTO CRANE instructions.

Do not modify this compressor except with written factory approval.

1. MOUNTING COMPRESSOR

When mounting the compressor care should be taken to ensure that its location does not impede the operation of other components on the vehicle. For example, if your vehicle is equipped with a crane, you must make sure the compressor will not interfere with the swing of the crane. In addition, the compressor should be installed in an area that permits cool ambient air to enter the air filter and the hot air from the cooler to exhaust without recirculating into the air filter. One last consideration in the mounting should be the routing of hoses and electrical wires. The frame mounting holes are shown below and the unit should be secured to the vehicle with 3/8 inch grade 8 bolts, washers should be used on the mounting surface. Hardware supplied with unit, may not work in all applications.

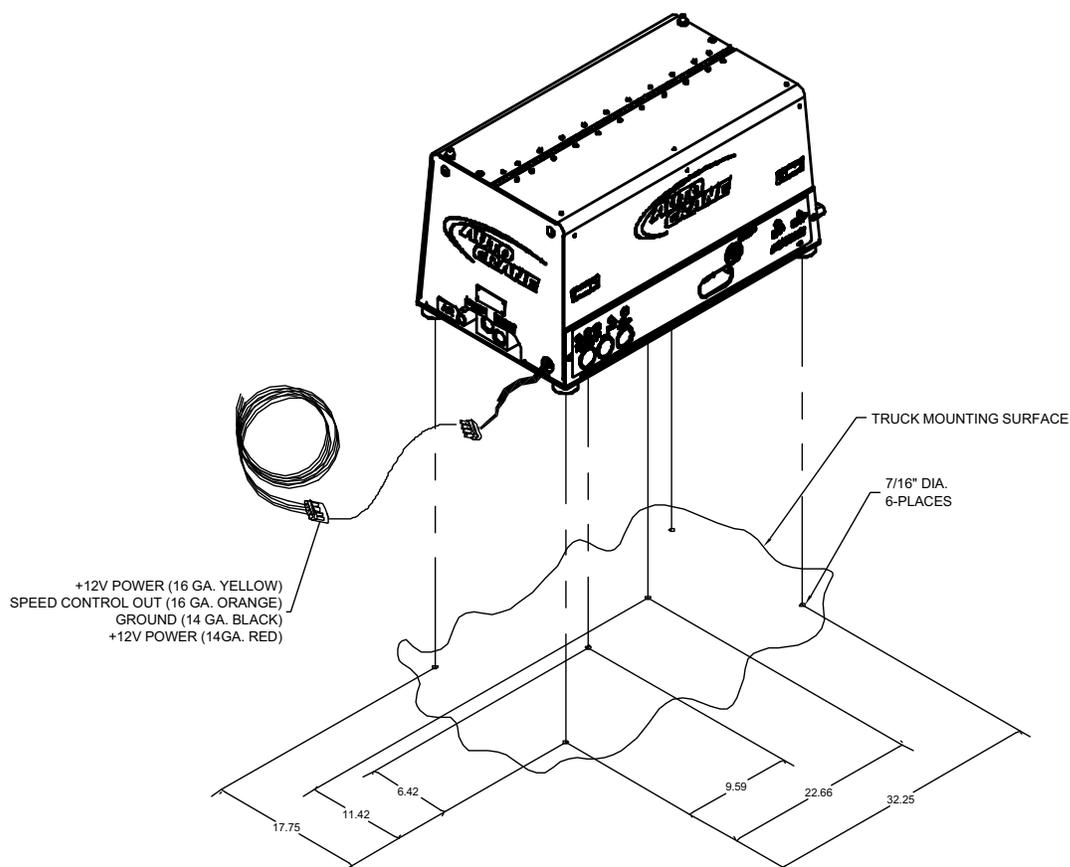

INSTRUCTIONAL PROCEDURES


2. INSTALLING THE WIRING & CONNECTING THE HYDRAULIC HOSES

This unit is shipped from the factory with all necessary internal wiring installed. The only remaining wiring necessary is the wiring needed to interface your vehicle/power source with the AUTO CRANE compressor. (Please refer to drawing 701030 on page 31) The unit is shipped with 4 loose wires, they need to be connected as follows:

1. Connect red wire to switched 12 vdc power. (or 24 VDC if you have this option)
2. The yellow wire should be spliced into the 12 vdc switched feed for the on/off switch per the end-user's location. (or 24 VDC if you have this option)
3. Connect black wire to ground.
4. The orange wire is used to activate an electronic speed control circuit if required. Please contact the factory with engine specific information for further assistance.

CONNECTING THE HOSES

The hydraulic hoses to the compressor should be connected directly to the hydraulic control block. The pressure "P" input line should be made from a good quality high pressure (min. 3000 PSI) hydraulic hose 1/2" or 3/4" i.d. The return line to tank "T" can be made from a medium pressure (min. 1000 PSI) hydraulic hose 3/4" i.d. Care should be taken to see that the hoses are not installed with kinks or bends that inhibit flow of the hydraulic oil. Lack of flow could result in damage to the motor and compressor. Lastly check to make sure hoses are not in contact with sharp objects or edges that may fray, chafe or cut them over time. Secure all hoses with tie down straps or clamps.

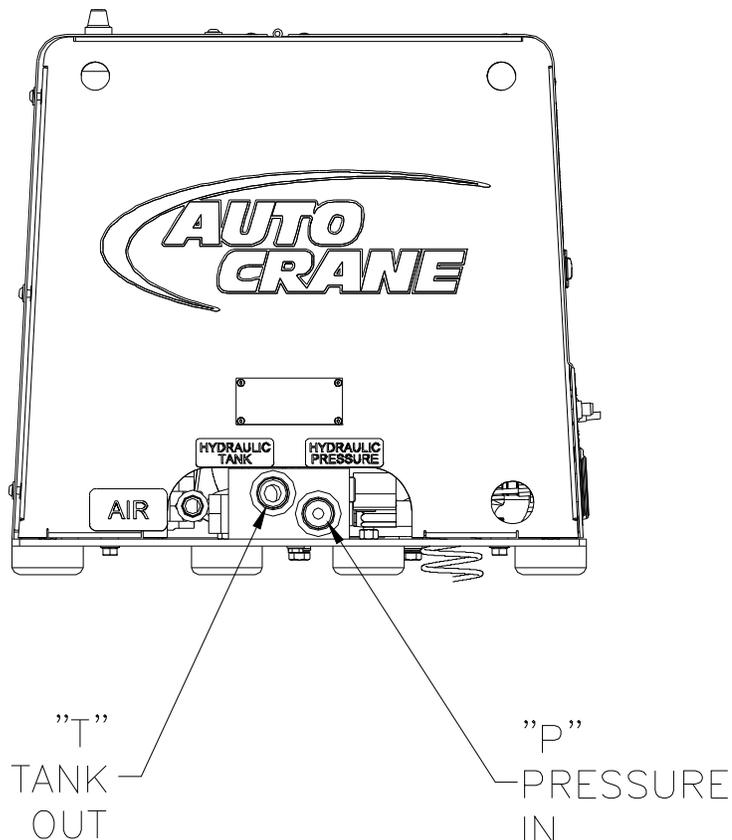

INSTRUCTIONAL PROCEDURES

3. PRE-START-UP INSPECTION CHECKS

This inspection should be done prior to removing truck from bay. Final testing of the system, including checking for leaks, is to be done outside.

ALL TRUCKS SHOULD BE ROAD TESTED PRIOR TO STARTING INSTALLATION TO ISOLATE ANY PREVIOUS TRUCK PROBLEMS.

- I. Check sales order to verify that all compressor related items originally ordered have been installed or are ready to ship with the truck. This would include any special filters, oils, hoses, options, etc.
- II. Vacuum all areas that have metal or plastic shavings. Wipe all fingerprints off unit and vehicle.
- III. Apply decals to proper location. Make sure that the area is cleaned prior to applying decals. All decals should have a professional appearance upon application.
- IV. Check all assemblies, clamps, fittings, drivelines, angles, nuts, and bolts to ensure they are properly tied and secured to the vehicle. This is a very critical area of inspection. The vehicle should not be moved until this inspection has been completed.
- V. Record all serial numbers for this installation.
 - A. Vehicle V.I.N.
 - B. Hydraulic Pump Data
 - C. Air-End Serial Number
 - D. AUTO CRANE INDUSTRIES Serial Number
 - E. Receiver Tank Serial Number
 - F. Note any special applications relating to specific installations.
- VI. Check all fluid levels (position the unit on a level surface so that proper amount of fluids can be added).
 - A. Fuel to provide for three hours of operation.
 - B. Transmission fluid and PTO box.
 - C. Compressor.

Check the compressor oil sump level (see lubricant section of the operator and parts section for type of lubricant to use). 1. Add oil if needed. 2. Additional oil may need to be added after test. 3. Top off oil level to half the sightglass when finished with the test.
 - D. Any other applicable fluids.

4. INITIAL START-UP AND TEST

- A. Start power source and allow for warm-up.
- B. Read the operation section in the operator and parts manual carefully before proceeding onto the initial start-up.

INSTRUCTIONAL PROCEDURES

C. Engage hydraulic system. A direction of rotation arrow is attached to the compressor package above the hydraulic coupling. The coupling/hub must be rotating in the direction the arrow is pointing. If for any reason this arrow has been removed the correct compressor rotation is clockwise when looking directly at the compressor shaft. Check the direction of rotation by quickly engaging and then disengaging the compressor.

CAUTION

DO NOT RUN THE COMPRESSOR IN A REVERSE ROTATION FOR PERIODS LONGER THAN 5 SECONDS. CONTINUED OPERATION IN THIS MANNER WILL RESULT IN EXTENSIVE COMPRESSOR UNIT DAMAGE.

The safety shutdown switch should be wired in series with the solenoid that opens the flow of the hydraulic oil to the compressor drive motor. In cases of high temperature and/or pressure, the closing of the valve will stop the compressor operation.

Safety circuit testing for RS60AC

Safety circuit testing can be done in the following manner. Start the truck. Engage the compressor. Take a screwdriver and touch the 1/16" allen head screw on the face of the temperature gauge and simultaneously touch the outside ring on the face of the gauge. This should shut off the power to the solenoid of the hydraulics. Push the button in on the shutdown switch to reset. Repeat the test with the pressure gauge if solenoid does not stop flow to compressor, check wiring.

RS60AC WITH AIR RESERVOIR APPLICATION RECOMMENDATION

The RS60AC is designed to provide continuous CFM output and constant pressure without the use of an air reservoir. Air reservoirs are not typically installed on vehicle mounted rotary screw compressors and Auto Crane does not recommend an air reservoir be included as standard equipment for use with the RS60AC compressors

The above notwithstanding, Auto Crane understands that some of our customers want an air reservoir installed on their vehicle in order to facilitate air usage when the vehicle's compressor is not running. Auto Crane also understands that unless properly installed, the air reservoir, plumbing to the reservoir, and subsequent connections and plumbing to the hose reel, along with the hose reel itself, may restrict the flow of usable air delivered to the tool.


The following is a recommendation for using an air reservoir in conjunction with the RS60AC product.

- I. Air Reservoir
 - a. The recommended minimum size of the air reservoir should be 6930 cubic inches (30 gallons). The actual size of the air reservoir can be larger or smaller depending on the duration and demand of air required during the periods of time that the vehicle is not running.
- II. Specifications of the Air Reservoir
 - a. Must meet DOT requirements for air reservoir construction
 - b. Must include a safety relief valve with a maximum relief valve setting of 175psi.
 - c. Must include drain port located at the lowest point to permit the drainage of moisture that normally occurs during the compression of air.
 - d. The drain port should be fitted with a pet cock or other easily operable drain valve to promote regular maintenance of the air system.
- III. Connections and Plumbing
 - a. RS60AC compressor discharge line should be .75" ID and rated for 250F, 300psi minimum.
 - b. Fittings should be .75" ID to minimize air system restrictions.
 - c. Hose reel should be .75" ID to minimize air system restrictions.
 - d. Line droops or condensate traps plumbed into the system should be avoided.

IV. Air System Plumbing

The air reservoir plumbing should be designed to maximize the capabilities of the RS60AC product and air delivery from the hose reel for the operation high volume air consuming tools. The following schematic is recommended.

RS60AC WITH AIR RESERVOIR APPLICATION RECOMMENDATION

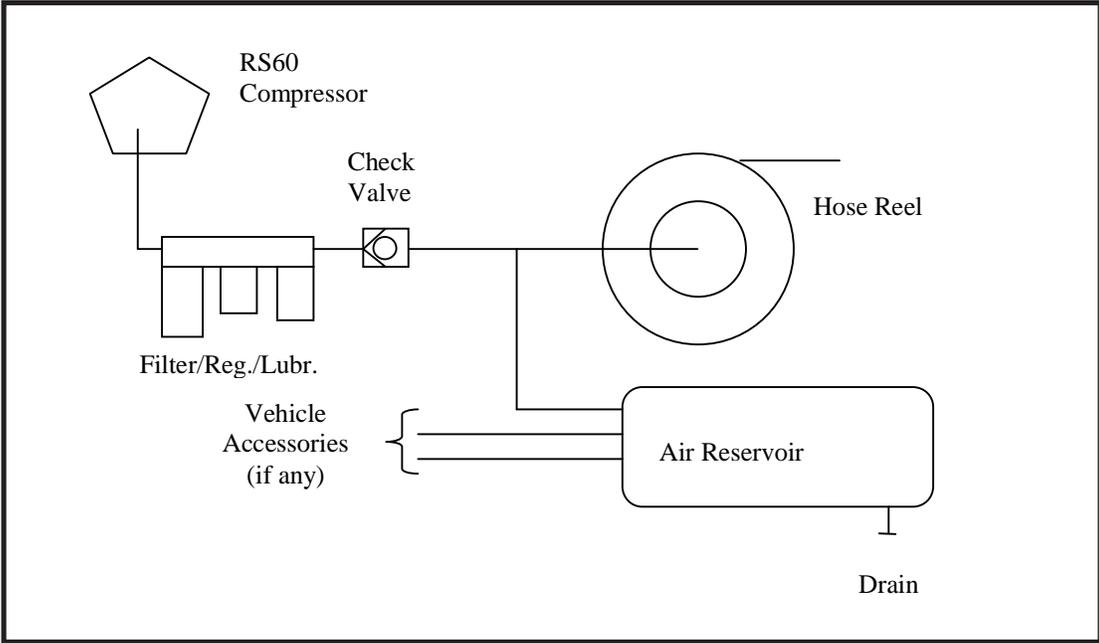

RS60AC with Air Reservoir Schematic Recommendation